

© Copyright 1999 American Megatrends, Inc.
All rights reserved.
American Megatrends, Inc.
6145F Northbelt Parkway
Norcross, GA 30071

This publication contains proprietary information which is protected by copyright. No part of this publication can be reproduced, transcribed, stored in a retrieval system, translated into any language or computer language, or transmitted in any form whatsoever without the prior written consent of the publisher, American Megatrends, Inc. American Megatrends, Inc. acknowledges the following trademarks:

Intel is a registered trademark of Intel Corporation.

MS-DOS, and Microsoft are registered trademarks of Microsoft Corporation. Microsoft Windows and Windows NT are trademarks of Microsoft Corporation.

SCO, UnixWare, and Unix are registered trademarks of the Santa Cruz Operation, Inc.

Novell NetWare is a registered trademark of Novell Corporation.

IBM, AT, VGA, and OS/2 are registered trademarks and XT and CGA are trademarks of International Business Machines Corporation.

Revision History

8/15/97	Initial release.
10/21/97	Updated MegaRAID BIOS description.
1/16/98	Merged FlexRAID and Power Console chapters.
4/8/98	Replaced Power Console with Power Console Plus.
5/12/98	Corrected an error in Chapter 4 Power Console Plus.
7/8/98	Updated screen shots in this manual.
7/24/98	Removed references to Solaris, NextStep, and Banyan drivers.
8/7/98	Added new Enclosure Management in Power Console Plus.
2/4/99	Converted to generic MegaRAID Software Guide.
5/10/99	Revised to include Series 467 MegaRAID Explorer 1500.
5/13/99	Updated Power Console Plus chapter.
8/20/99	Changed defaults (64 MB stripe size, DirectI/O, Normal Read).
7/20/00	Revised material throughout manual and added WebBIOS chapter.