

Table of Contents

1 Overview.....	1
In this Manual.....	2
2 MegaRAID Configuration Utility.....	5
Starting MegaRAID Configuration Utility.....	6
MegaRAID Configuration Utility Menu Tree	7
MegaRAID Configuration Utility Menu Tree for Ultra 160M Cards	8
MegaRAID Configuration On Disk.....	9
Configuration Utility Configure Menu	10
Configuration Utility Initialize Menu.....	11
Configuration Utility Objects Menu.....	11
Configuration Utility Format Menu.....	17
Configuration Utility Rebuild Menu	17
Configuration Utility Check Consistency Menu	18
Configuration Utility Select Adapter Menu	19
Disable BIOS Menu	19
Configuring Arrays and Logical Drives	19
Choosing the Configuration Method.....	20
Designating Drives as Hot Spares	21
Using Easy Configuration	22
Using New Configuration.....	26
Using View/Add Configuration	31
Initializing Logical Drives	36
Using Logical Drives in the Operating System	37
Formatting Physical Drives	38
Rebuilding Failed Disk Drives	40
Using a Pre-loaded SCSI Drive “As-is”	42
Exiting MegaRAID Configuration Utility.....	42
3 WebBIOS Configuration Utility.....	43
Overview.....	43
Installing WebBIOS on the Host Computer.....	44
Starting the MegaRAID WebBIOS Utility on the Host Computer.....	45
WebBIOS Toolbar Icons	46
Adapter Properties	47
Scan Devices	49
SCSI Channel Properties	49
Logical Drives	50
Physical Drives.....	53
Configuration Wizard.....	54
Adapter Selection.....	60
Physical View\Logical View.....	61

Table of Contents, Continued

4 MegaRAID Manager 63

Overview.....	63
Starting MegaRAID Manager.....	63
MegaRAID Manager Menu Tree	65
MegaRAID Manager Configure Menu	66
MegaRAID Manager Initialize Menu	66
MegaRAID Manager Objects Menu	67
MegaRAID Manager Format Menu	71
MegaRAID Manager Rebuild Menu	71
MegaRAID Manager Check Consistency Menu.....	72
MegaRAID Manager Advanced Menu.....	73
MegaRAID Manager Select Adapter Menu.....	74
Configuring Arrays and Logical Drives	75
Choosing the Configuration Method.....	75
Designating Drives as Hot Spares	77
Using Auto Configuration.....	79
Using Easy Configuration	80
Using New Configuration.....	84
Using View/Add Configuration	89
Initializing Logical Drives	94
Using Logical Drives in the Operating System.....	95
Formatting Physical Drives.....	96
Rebuilding Failed Disk Drives	99
Exiting MegaRAID Manager.....	99

5 Installing Power Console Plus 101

Installing on a Windows NT V4.x Server and Workstation	103
Sample Power Console Plus Network Layout	111
Installing an AMI SNMP Agent	112
Configuring HP Open View with the AMI SNMP Agent	113
MegaRAID Service Monitor.....	114
Installing and Registering Power Console Plus Components in a NetWare Server 4.x.....	115
De-registering and Re-registering under Power Console Plus	117

Table of Contents, Continued

6 Running Power Console Plus	119
User Interface Restrictions	120
Power Console Plus Toolbox Icons.....	121
Power Console Plus Menus	126
Configuration Menu	126
Adapter Menu	130
Physical Drive Menu	135
Logical Drive Menu	138
Progress Menu	142
Securing Power Console Plus under Windows NT.....	143
7 Configuring Arrays and Logical Drives	145
Step 1 Start Power Console Plus.....	145
Step 2 Choose an Adapter.....	146
Step 3 Run the Wizard	147
Step 4 Save Configuration and Initialize	154
8 Assigning Hot Spares.....	157
Global Hot Spares	157
Reclaiming Hot Spares While Running the Wizard	157
Reclaiming Hot Spares During Normal Operation	157
9 Virtual Sizing and Online Capacity Expansion	159
Location and Enabling	159
Theory of Operation	160
MegaRAID Drive Characteristics.....	161
Deleting Logical Drives.....	161
Adding Capacity under Windows NT 3.5x, and 4.x.....	162
Adding Capacity under NetWare 3.12 and 4.x.....	165
A MegaRAID Service Monitor.....	167
MegaRAID Service Monitor.....	168
MegaRAID Monitor Program.....	169
Event Types	170