














Table 1-3 Hot Key Descriptions (continued)

Key	Description
	<p><i>Contrast/Brightness Control</i> Displays the LCD contrast/brightness control for STN models and LCD brightness control for TFT models.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>Contrast</p> </div> <div style="text-align: center;">  <p>Brightness</p> </div> </div> <p>After pressing this key combination, press -X and -Z to increase and decrease the current setting. Press  - to close the pop-up.</p> <p>For STN models, press  to toggle between the contrast and brightness controls.</p>
	<p><i>Display Device Control</i> Allows you to select LCD, CRT or both LCD and CRT as your display device.</p>
	<p><i>Audio control</i> Allows you to adjust the volume. When the notebook is not equipped with onboard audio, this function is disabled.</p> <div style="text-align: center;">  </div> <p>After pressing this key combination, press -X and -Z to increase and decrease the current setting. Press  - to close the pop-up.</p> <p>This feature functions only when the audio driver is installed and working properly. Changes in the audio mixer settings in Windows and Windows 95 may override this feature. For applications that implement their own volume controls, changes in volume levels by the application may also override this feature.</p>