



AcerNote Light Multimedia

User's Manual

Copyright

Copyright © 1996 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, Acer Incorporated reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of Acer Incorporated to notify any person of such revision or changes.

Acer is a registered trademark of Acer Incorporated. Microsoft, MS-DOS, Windows and Windows 95 are registered trademarks of Microsoft Corporation. IBM and OS/2 are registered trademarks of IBM Corporation. Intel and Pentium are registered trademarks of Intel Corporation. Other brand and product names are trademarks and/or registered trademarks of their respective companies.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully. Save these instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
9. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

11. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed
 - b. If liquid has been spilled into the product
 - c. If the product has been exposed to rain or water
 - d. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.
 - e. If the product has been dropped or the cabinet has been damaged
 - f. If the product exhibits a distinct change in performance, indicating a need for service
13. Replace battery with the same type as the product's battery we recommend. Use of another battery may present a risk of fire or explosion. Refer battery replacement to a qualified serviceman.
14. Warning! Battery may explode if not handled properly. Do not recharge, disassemble or dispose of in fire. Keep away from children and dispose of used battery promptly.
15. Use only the proper type of power supply cord set (provided in your accessories box) for this unit. It should be a detachable type: UL listed/CSA certified, type SVT/SJT, rated 6A 125V minimum, VDE approved or its equivalent. Maximum length is 15 feet (4.6 meters).

Canadian Department of Communications

Regulatory Statement

This digital apparatus does not exceed Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radio-électriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

FCC Class B Radio Frequency Interference Statement

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/television technician for help.

Notice 1:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2:

Shielded interface cables, if any, must be used in order to comply with the emission limits.

About This Manual

Purpose

This manual discusses the features of the notebook and tells how to use and configure it. This manual, along with the online help, should familiarize you with all aspects of the notebook computer.

Manual Structure

This manual consists of eight chapters and two appendices:

Chapter 1, *Getting Started*, tells you how to get started with the notebook.

Chapter 2, *System Tour*, gives a guided and in-depth “tour” of the notebook and its features.

Chapter 3, *Power*, discusses issues on battery use and includes information on the unique power management system.

Chapter 4, *Options*, tells how to connect and install hardware options.

Chapter 5, *Software*, describes how to use certain system applications.

Chapter 6, *Setup*, explains how to configure the system using the BIOS Setup utility.

Chapter 7, *Traveling with the Notebook*, includes informative and useful tips on travel.

Chapter 8, *Troubleshooting*, lists the steps you can take to resolve problems in an easy Q&A format.

Appendix A, *Specifications*, lists the specifications of the notebook.

Appendix B, *Address and Interrupt Tables*, shows the address and interrupt tables.

An index is found after the appendices.

Conventions

The following conventions are used in this manual:

`C:\setup,
[Enabled], etc.`

Represent text input by the user, default settings and recommended selections

`message displayed`

Denotes actual messages that appear on screen

`b,e,r, etc`

Represent the actual keys that you have to press on the keyboard



NOTE

Gives bits and pieces of additional information related to the current topic



WARNING

Alerts you if damage may result from doing or not doing specific actions



CAUTION

Gives precautionary measures to avoid possible hardware or software problems



IMPORTANT

Reminds you to take action relevant to the accomplishment of the procedure at hand



TIP

Tells how to complete a procedure with minimum steps through little shortcuts

Table of Contents

1 Getting Started

| | | |
|-------|--|------|
| 1.1 | Item Checklist | 1-2 |
| 1.2 | Taking Care of Your Computer..... | 1-3 |
| 1.2.1 | Notebook..... | 1-3 |
| 1.2.2 | AC Adapter..... | 1-6 |
| 1.2.3 | Battery Pack..... | 1-6 |
| 1.2.4 | Cleaning and Servicing..... | 1-7 |
| 1.2.5 | Diskettes..... | 1-7 |
| 1.3 | Connecting the Notebook..... | 1-9 |
| 1.4 | Creating Backup and Startup Diskettes for Windows 95 | 1-11 |
| 1.5 | Getting Help Online..... | 1-12 |

2 System Tour

| | | |
|-------|---------------------------------------|------|
| 2.1 | Features..... | 2-2 |
| 2.2 | Display..... | 2-4 |
| 2.3 | Indicator Light | 2-6 |
| 2.4 | Keyboard | 2-7 |
| 2.4.1 | Keyboard Layout and Special Keys..... | 2-7 |
| 2.4.2 | Keyboard Ergonomics..... | 2-13 |
| 2.5 | Touchpad..... | 2-14 |

| | | |
|-------|-----------------------------|------|
| 2.6 | Storage | 2-16 |
| 2.6.1 | Hard Disk..... | 2-16 |
| 2.6.2 | Internal Media..... | 2-16 |
| 2.6.3 | PC Card Slots..... | 2-18 |
| 2.7 | Ports | 2-20 |
| 2.8 | Audio | 2-22 |
| 2.9 | Securing your Notebook..... | 2-23 |
| 2.9.1 | Security Notch | 2-23 |
| 2.9.2 | Passwords | 2-23 |

3 Power

| | | |
|-------|---|------|
| 3.1 | Battery Pack | 3-2 |
| 3.1.1 | Battery Pack Characteristics | 3-2 |
| 3.1.2 | Removing and Installing the Battery Pack..... | 3-3 |
| 3.1.3 | Charging the Battery..... | 3-4 |
| 3.1.4 | Checking the Battery Level..... | 3-5 |
| 3.1.5 | Optimizing Battery Life | 3-6 |
| 3.1.6 | Battery-low Warning | 3-7 |
| 3.2 | Power Management | 3-9 |
| 3.2.1 | Power Management Modes | 3-9 |
| 3.2.2 | Advanced Power Management (APM) | 3-13 |

4 Options

| | | |
|-----|------------------------|-----|
| 4.1 | External Monitor..... | 4-2 |
| 4.2 | External Keyboard..... | 4-3 |

| | | |
|-------|-------------------------------|------|
| 4.3 | External Keypad..... | 4-4 |
| 4.4 | External Pointing Device..... | 4-5 |
| 4.5 | Printer..... | 4-6 |
| 4.6 | Audio Devices..... | 4-7 |
| 4.7 | File Transfer Cable..... | 4-8 |
| 4.8 | Additional Power Packs..... | 4-9 |
| 4.8.1 | Battery Pack..... | 4-9 |
| 4.8.2 | AC Adapter..... | 4-10 |
| 4.8.3 | External Battery Charger..... | 4-11 |
| 4.9 | Key Component Upgrades..... | 4-13 |
| 4.9.1 | Memory Upgrade..... | 4-13 |
| 4.9.2 | Hard Disk Drive Upgrade..... | 4-14 |
| 4.9.3 | CPU Upgrade..... | 4-14 |

5 Software

| | | |
|-------|---|------|
| 5.1 | System Software..... | 5-2 |
| 5.2 | Sleep Manager..... | 5-3 |
| 5.2.1 | Accessing the Sleep Manager..... | 5-3 |
| 5.2.2 | Sleep Manager Functions..... | 5-6 |
| 5.2.3 | Running Sleep Manager..... | 5-9 |
| 5.2.4 | Sleep Manager Troubleshooting Tips..... | 5-10 |
| 5.2.5 | Uninstalling Sleep Manager..... | 5-11 |
| 5.3 | Touchpad Driver..... | 5-13 |
| 5.3.1 | Configuring the Touchpad..... | 5-13 |
| 5.3.2 | Swapping Buttons for Left and Right Handed Users..... | 5-13 |

6 Setup

| | | |
|-------|---------------------------------------|------|
| 6.1 | When to Use Setup | 6-2 |
| 6.2 | Entering Setup | 6-3 |
| 6.3 | Basic System Configuration | 6-5 |
| 6.3.1 | Date and Time | 6-5 |
| 6.3.2 | Floppy Disk Drives..... | 6-5 |
| 6.3.3 | Hard Disk Drive | 6-6 |
| 6.3.4 | Num Lock After Boot | 6-6 |
| 6.3.5 | Memory Test | 6-6 |
| 6.4 | Advanced System Configuration | 6-7 |
| 6.4.1 | Power Management Mode | 6-7 |
| 6.4.2 | Display Device..... | 6-8 |
| 6.4.3 | Battery-low Warning Beep | 6-9 |
| 6.4.4 | Suspend Upon Battery-low..... | 6-9 |
| 6.4.5 | Modem Ring Wake Up From Standby | 6-9 |
| 6.4.6 | Password Check During Resume..... | 6-9 |
| 6.5 | System Security | 6-12 |
| 6.5.1 | Floppy Disk Drive Control | 6-13 |
| 6.5.2 | Hard Disk Drive Control | 6-13 |
| 6.5.3 | System Boot Drive Control | 6-14 |
| 6.5.4 | Boot From CD-ROM | 6-15 |
| 6.5.5 | Serial Port Base Address | 6-15 |
| 6.5.6 | Parallel Port Base Address | 6-16 |
| 6.5.7 | Parallel Port Operation Mode..... | 6-16 |
| 6.5.8 | Passwords | 6-17 |

| | | |
|-----|-----------------------------------|------|
| 6.6 | Load Setup Default Settings | 6-18 |
|-----|-----------------------------------|------|

7 Traveling with the Notebook

| | | |
|-----|---|-----|
| 7.1 | Traveling Preparations | 7-2 |
| 7.2 | International Traveler's Warranty | 7-3 |
| 7.3 | Worldwide Support..... | 7-4 |

8 Troubleshooting

| | | |
|-----|----------------------|-----|
| 8.1 | Q&A..... | 8-2 |
| 8.2 | Error Messages | 8-6 |

A Specifications

B Address and Interrupt Tables

| | | |
|-----|-------------------------|-----|
| B.1 | System Memory Map | B-1 |
| B.2 | I/O Address Map | B-2 |
| B.3 | Interrupt Levels | B-3 |
| B.4 | DMA Channels | B-4 |

Index

List of Figures

| | | |
|-----|--|------|
| 1-1 | Write-protecting a 3.5-inch Diskette | 1-8 |
| 2-1 | Display | 2-5 |
| 2-2 | Indicator Light | 2-6 |
| 2-3 | Keyboard Layout | 2-7 |
| 2-4 | Palm Rest | 2-13 |
| 2-5 | Touchpad | 2-14 |
| 2-6 | Internal Drive | 2-16 |
| 2-7 | Ports and Connectors | 2-20 |
| 2-8 | Built-in Speakers | 2-22 |
| 4-1 | Connecting an External Monitor | 4-2 |
| 4-2 | Connecting an External Keyboard | 4-3 |
| 4-3 | Connecting an External Keypad | 4-4 |
| 4-4 | Connecting an External Pointing Device | 4-5 |
| 4-5 | Connecting a Parallel Printer | 4-6 |
| 4-6 | Connecting Audio Devices | 4-7 |
| 4-7 | Using the File Transfer Cable | 4-8 |
| 4-8 | External Battery Charger | 4-11 |

List of Tables

| | | |
|-----|--|------|
| 2-1 | Indicator Status Descriptions | 2-6 |
| 2-2 | Lock Key Descriptions | 2-8 |
| 2-3 | Using the Embedded Keypad | 2-9 |
| 2-4 | Windows 95 Key Descriptions | 2-10 |
| 2-5 | Hot Key List | 2-11 |
| 2-6 | Touchpad Functions | 2-15 |
| 2-7 | Port Descriptions | 2-21 |
| 3-2 | Course of Action for Battery-low Condition | 3-8 |
| 4-1 | Memory Configurations | 4-13 |
| 4-2 | Hard Disk List | 4-14 |
| 5-1 | Sleep Manager Window Items | 5-5 |
| 5-2 | Swapped Touchpad Functions | 5-14 |
| 6-1 | Display Device Settings | 6-9 |
| 6-2 | System Status Descriptions | 6-10 |
| 6-3 | Floppy Disk Drive Control Settings | 6-13 |
| 6-4 | Hard Disk Drive Control Settings | 6-13 |
| 6-5 | System Boot Drive Control Settings | 6-14 |
| 6-6 | CD-ROM Image Descriptions | 6-15 |
| 8-1 | POST Error Messages | 8-6 |