

Appendix D

Unicenter and Managewise

D.1. Unicenter



Before installing the snap-in module, make sure that the CA Unicenter TNG Framework was installed.

To install the Snap-in module, simply run Setup.exe from the installation CD under the directory \Station\CA\ to install/uninstall the ASM snap-in module.

This module will create some class and object in the repository of Unicenter TNG. ASM Agent object will be created automatically when a new host had been added into the repository (manual add or autodiscovery) only.

To launch ASM Station from Unicenter WorldView:

1. Find the node you want to monitor.
2. Double-click the node's icon.
3. Right-click the ASM Agent's icon and launch ASM Station from the context menu.

If ASM Agent is previously installed, an ASM Agent's Icon will appear.

-
4. Right-Click the ASM Agent's icon and launch ASM Station from the context menu.

D.2. Managewise

To install the Snap-in module for ManageWise, run `mwasm.exe` from the installation CD under the directory `\Station\Managewise\`. Click Yes to connect to ManageWise.