

**Acer**

# **WLAN 11g USB Dongle**

Quick Start Guide



**This product is in compliance with the essential requirements  
and other relevant provisions of the  
R&TTE directive 1999/5/EC.**



**Product Name: Acer WLAN 11g USB Dongle**  
**Model Name : WLAN-G-US1**

COUNTRY		CHANNELS	MAX. OUT POWER	
			INDOOR	OUTDOOR
Spain	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
France	2400-2454 MHz	1-8	< 100 mW EIRP	< 100 mW EIRP
France	2454-2483.5 MHz	9-13	< 100 mW EIRP	< 10 mW EIRP
Italy	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
UK	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Netherlands	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Germany	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Austria	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Belgium	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Switzerland	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Luxemburg	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Ireland	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Portugal	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Norway	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Denmark	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Finland	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Iceland	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Greece	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Lichtenstein	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP
Sweden	2400-2483.5 MHz	1-13	< 100 mW EIRP	< 100 mW EIRP

# 1. Overview

## 1.1. Package Contents

<b>Item:</b>	<b>Location:</b>
▪ WLAN 11g USB Adapter	BOX
▪ WLAN 11g USB Adapter Quick Installation Guide	BOX
▪ WLAN 11g USB Adapter User Manual	CD-ROM
▪ WLAN 11g USB Adapter drivers/utility	CD-ROM
▪ WLAN 11g USB Adapter User Manual	CD-ROM
▪ WLAN 11g USB Adapter Quick Installation Guide	CD-ROM


## 1.2. System Requirements

- Notebook PC or desktop PC with one free USB 2.0 port
- 32MB memory or greater
- 300MHz processor or higher
- Microsoft Windows XP / 2000 / Me / 98SE

## 2 Driver installation


**Important:** Please do not connect your WLAN 11g USB Adapter to the USB port of your computer before installing the 11g WLAN utility and driver.

1. Insert the Acer WLAN 802.11g CD in the CD-ROM drive and wait until first page appears.

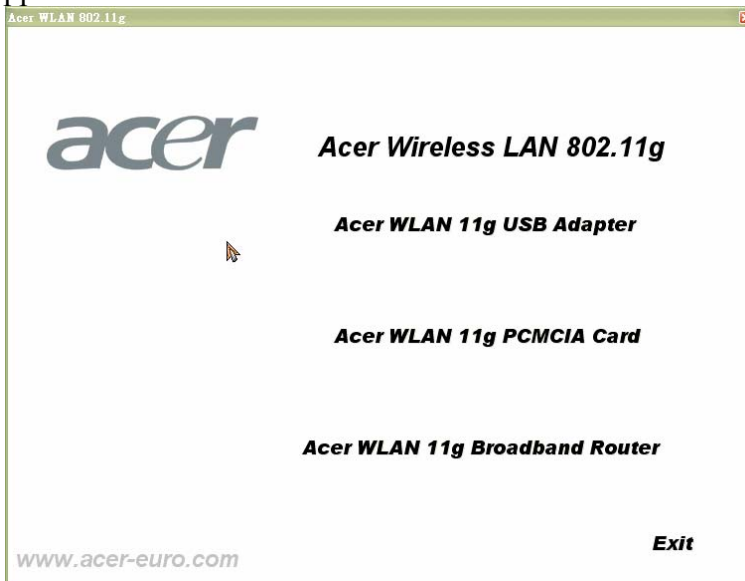


2. Click Acer WLAN 11g USB Adapter


**Note:** In case this screen does not appear, in Windows Explorer browse to your CD-ROM and double-click the Setup.exe file.

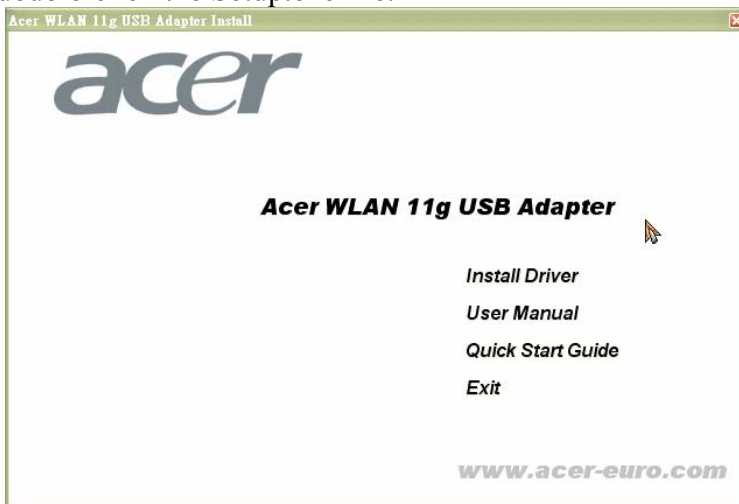


3. Click Install Driver

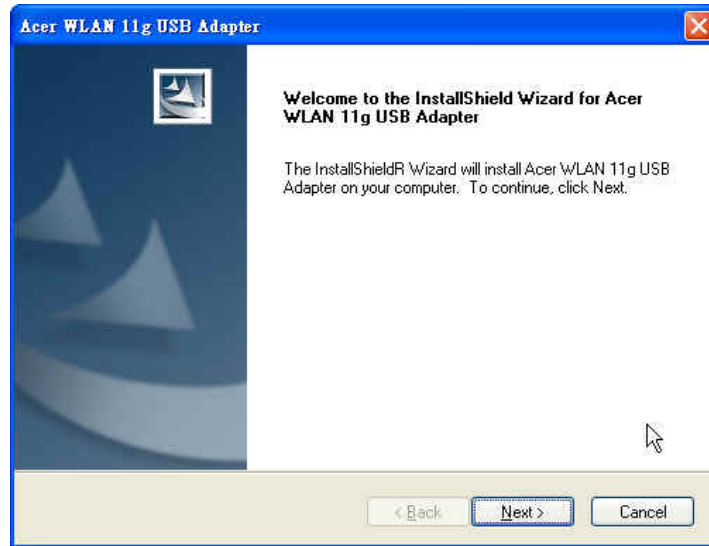


4. Click [**Next**] to accept, or [**Browse**] to change the default destination folder.

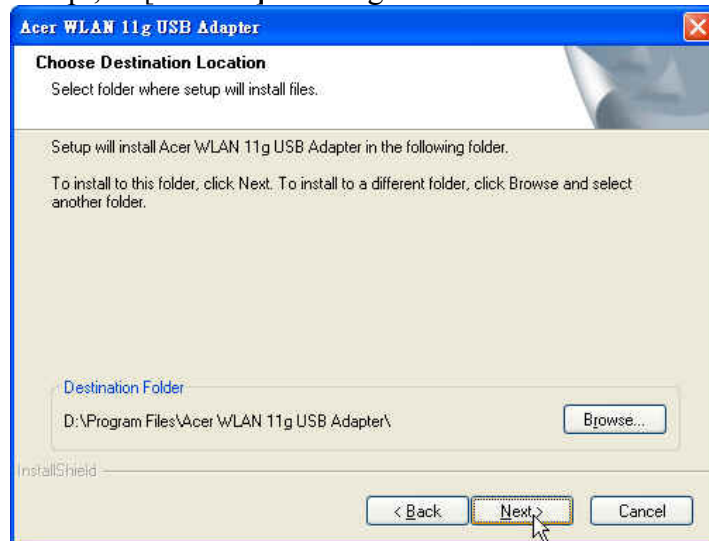

5. Now connect your WLAN 11g USB Adapter to the USB port of your computer. In the Find New Hardware Wizard that appears on your screen select [No, not this time], and click [Next].

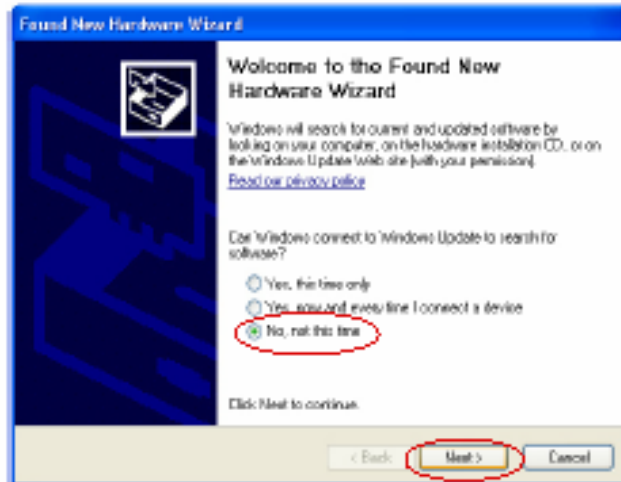

6. Select [**Install the software automatically (Recommended)**], and click [**Next**]

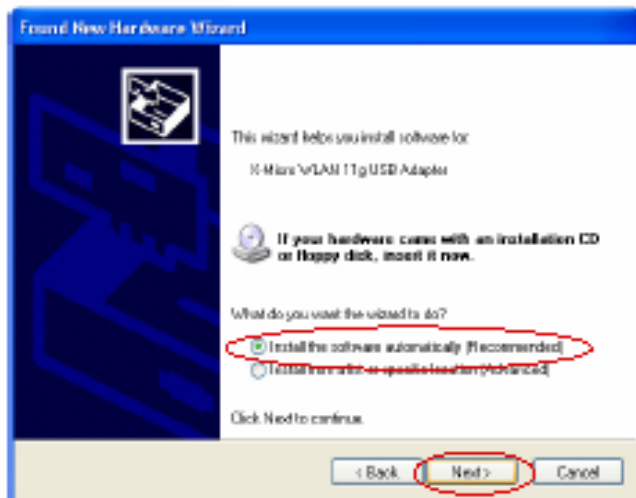

7. Click [**Finish**] to finalize the installation. Your WLAN 11g USB Adapter is now ready for use.

**Acer**

# **WLAN 11g USB Dongle**

Kurzanleitung

# 1. Übersicht

## 1.1 Lieferumfang

<b>Artikel:</b>	<b>befindet sich in:</b>
▪ WLAN 11g USB Adapter	BOX
▪ WLAN 11g USB Adapter - Kurzanleitung zur Installation	BOX
▪ WLAN 11g USB Adapter - Benutzerhandbuch	CD-ROM
▪ WLAN 11g USB Adapter-Treiber/Utilities	CD-ROM
▪ WLAN 11g USB Adapter - Benutzerhandbuch	CD-ROM
▪ WLAN 11g USB Adapter - Kurzanleitung zur Installation	CD-ROM

## 1.2 Systemanforderungen


- Notebook-PC oder Desktop-PC mit einem freien USB 2.0-Anschluss
- 32MB Arbeitsspeicher oder mehr
- 300MHz Prozessor oder schneller
- Microsoft Windows XP / 2000 / Me / 98SE



## 2 Treiberinstallation


**Wichtig:** Bitte schließen Sie Ihren WLAN 11g USB-Adapter an den USB-Anschluss Ihres Computers an, bevor Sie den 11g WLAN-Treiber und die Utility installieren.

1. Legen Sie die Acer WLAN 802.11g-CD in das CD-ROM-Laufwerk ein und warten Sie, bis die erste Seite angezeigt wird.

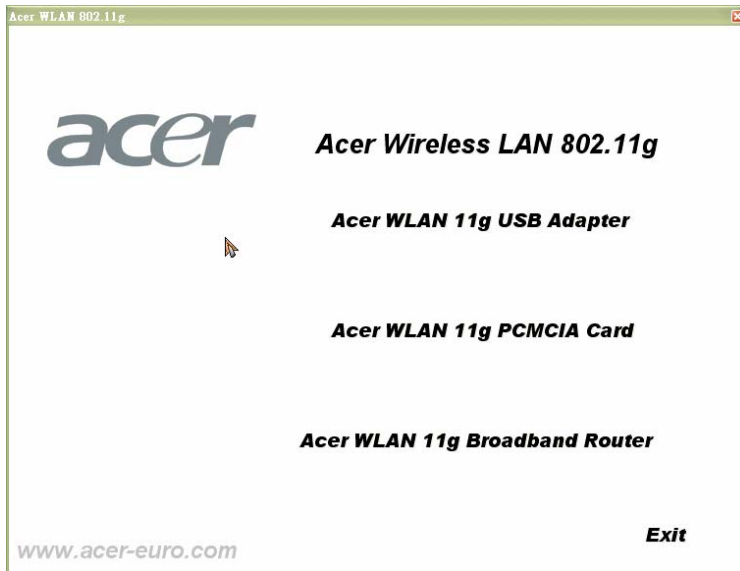


2. Klicken Sie auf 'Acer WLAN 11g USB Adapter'.


**Hinweis:** Falls dieser Bildschirm nicht angezeigt wird, öffnen Sie die CD-ROM vom Windows Explorer aus und doppelklicken Sie auf die Datei Setup.exe.

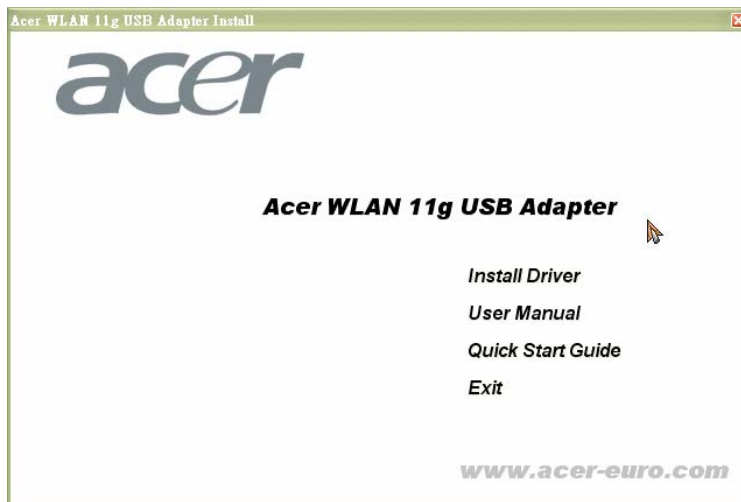


3. Klicken Sie auf 'Install Driver'.

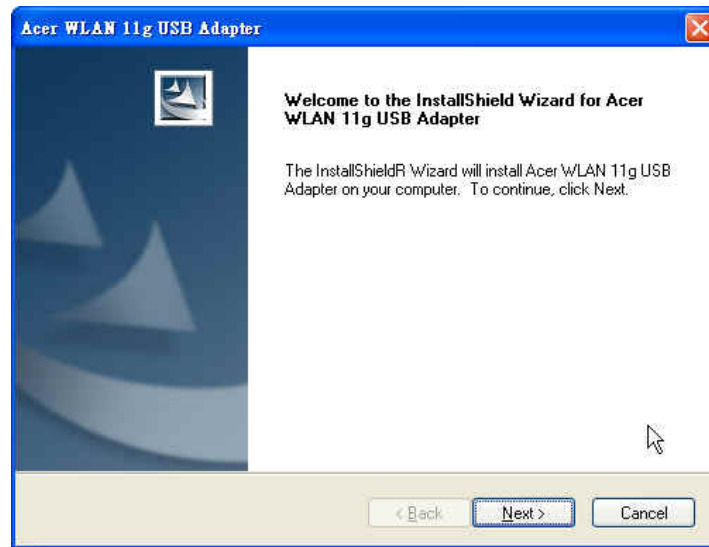


4. Klicken Sie zum Bestätigen auf [Next] oder auf [Browse], um einen anderen Ordner für die Installation zu wählen.

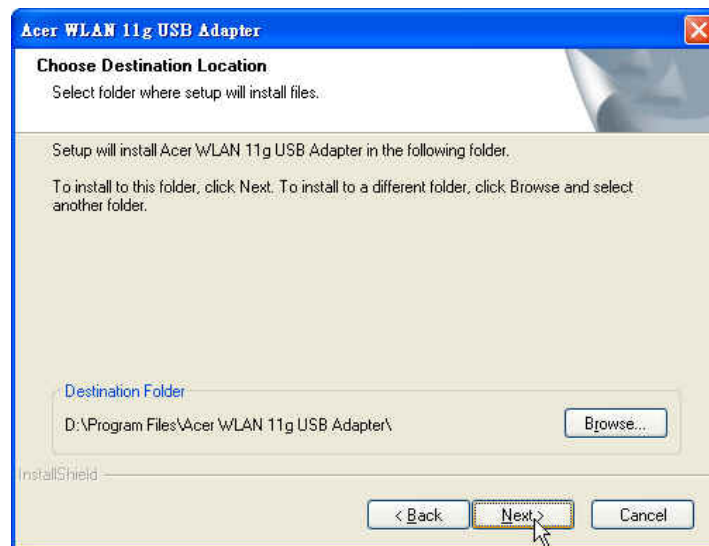

- Schließen Sie jetzt Ihren WLAN 11g USB-Adapter an den USB-Anschluss Ihres Computers an. Der Find New Hardware Wizard wird auf Ihrem Bildschirm angezeigt; wählen Sie [No, not this time] und klicken Sie auf [Next].

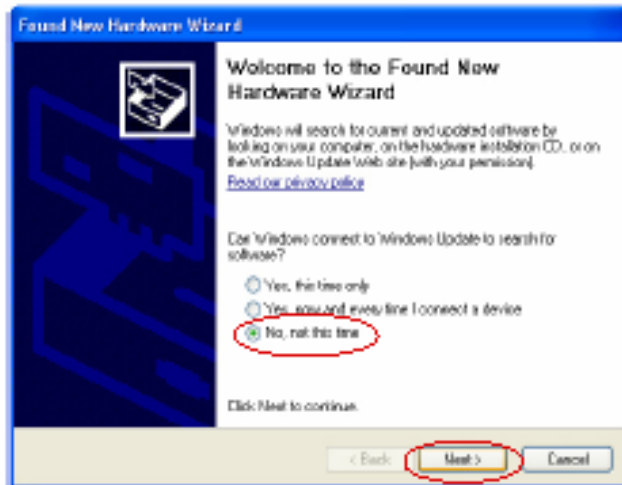

- Wählen Sie [**Install the software automatically (Recommended)**] und klicken Sie auf [Next].

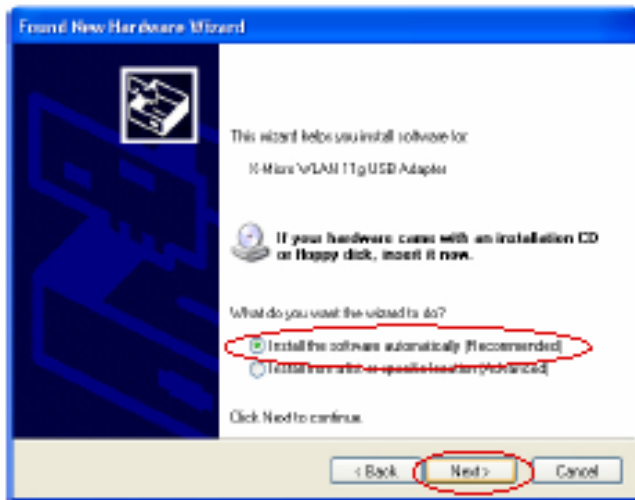

- Klicken Sie auf [**Finish**], um die Installation zu beenden. Ihr WLAN 11g USB-Adapter ist jetzt betriebsbereit.



<http://www.acer-euro.com>