

Update the Expansion Module Firmware

1.1 Overview

This instruction is for you to use a special T28 firmware to update the firmware for expansion module.

2.1 Instructions

1. Update your T28 firmware to version 0.0.0.206.
2. After updating, the phone will enter to page [...Please connect expansion...] in the start-up procedure. Please don't connect your expansion module to your T28 until you see the [picture 1] below.



[Picture 1]

[Note]: Only one expansion module is allowed to be connected to T28 for update at a time.

3. After you connect the expansion module, it will display [...Please Don't power off...] until the phone establishes the communication with the expansion module.



[Picture 2]

4. If the update succeeds, the phone will display **Updating success**. See [picture 3]. After that, you can press [Exit] key to continue to start-up the phone, or press [Continue] key to go back to the *step 2* for another round of updating.

Updating success

Continue

Exit

[Picture 3]

[Note]: If there're more than one expansion module you need to update, please disconnect the first expansion module and then press **Continue** key to go to the *step 2* to update the other expansion module.

5、 If failing to update, it will display **Picture 4**, when you can press **Exit** key to log out the updating and make the phone start-up, or press other keys to go to the *step 2* to continue to update again.

Updating failed

• • • Please reconnect • • •

Exit

[Picture 4]

6、 When done, please update your T28 back to your own firmware for normal using.