

How to replace EXP38's hardware components


Replace the mainboard

Step1: Take down the power, EXT cable and the bracket of back shell.




Step2: Loosen 4pcs of screws, open the back shell.



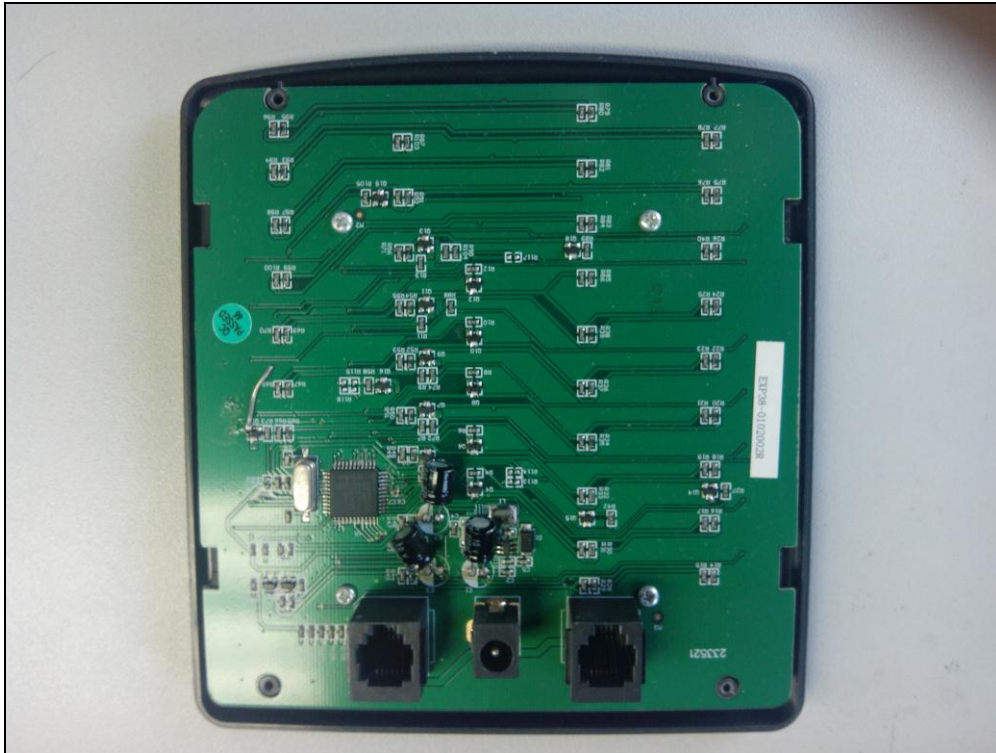

Step3: Loosen 4pcs of screws, replace a new mainboard.

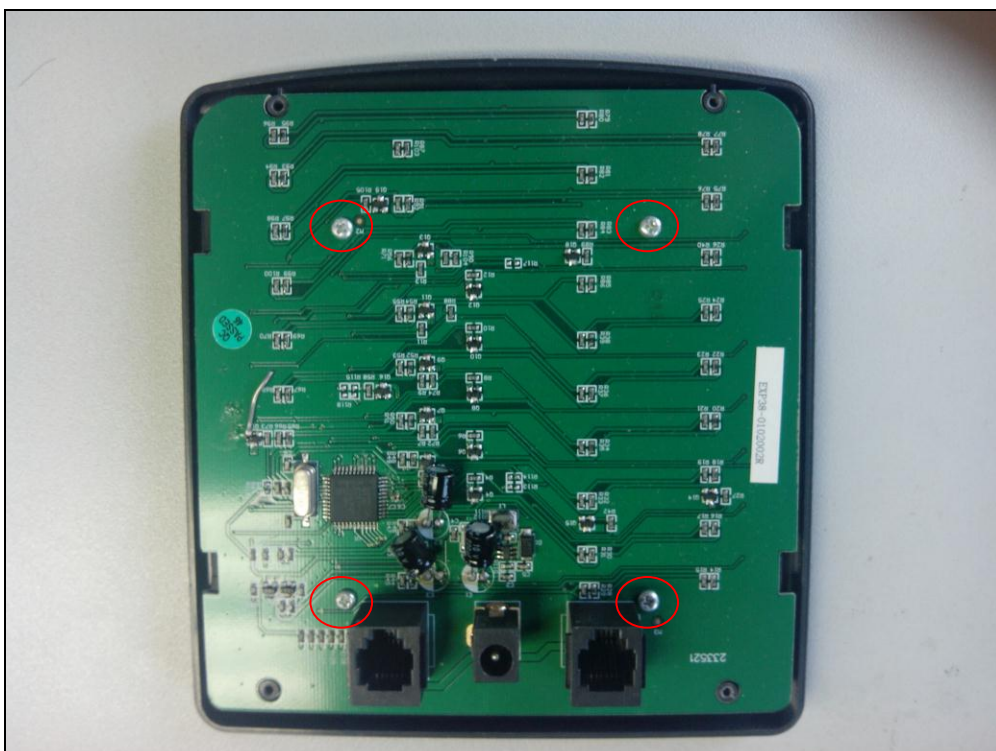


Wipe and Clean the Dirt on the Golden Pad

Step1: Take down the power, EXT cable and the bracket of back shell.




Step2: Loosen 4pcs of screws, open the back shell.



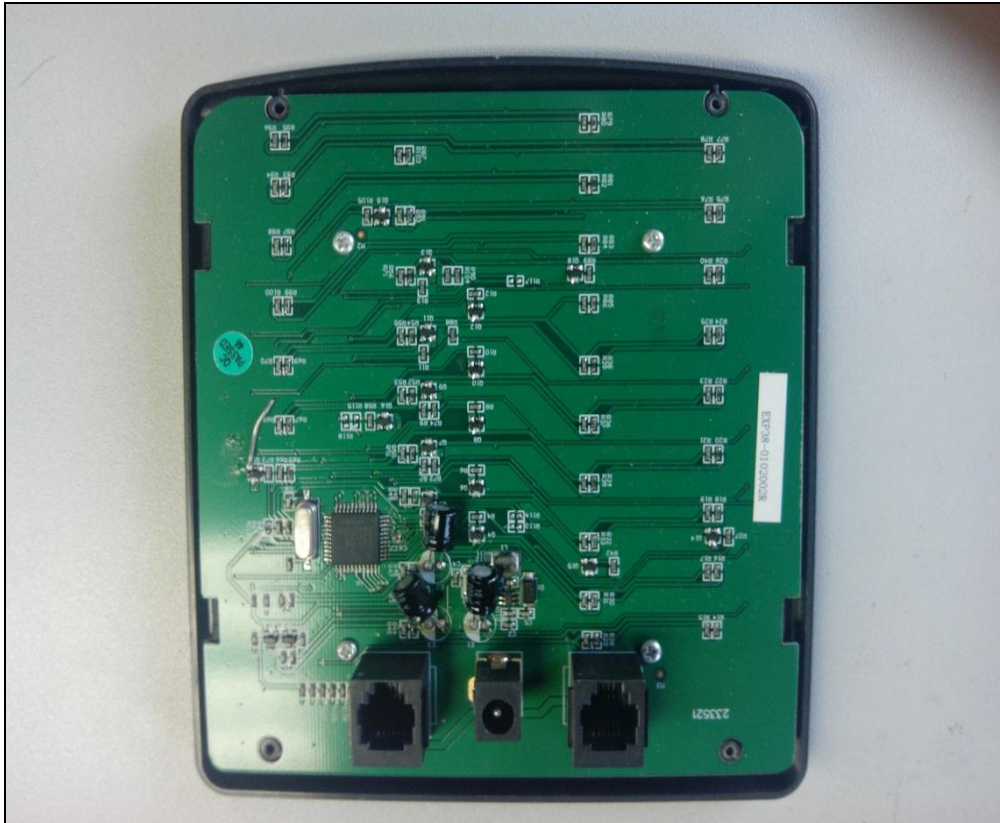

Step3: Loosen 4pcs of screws, remove the mainboard.

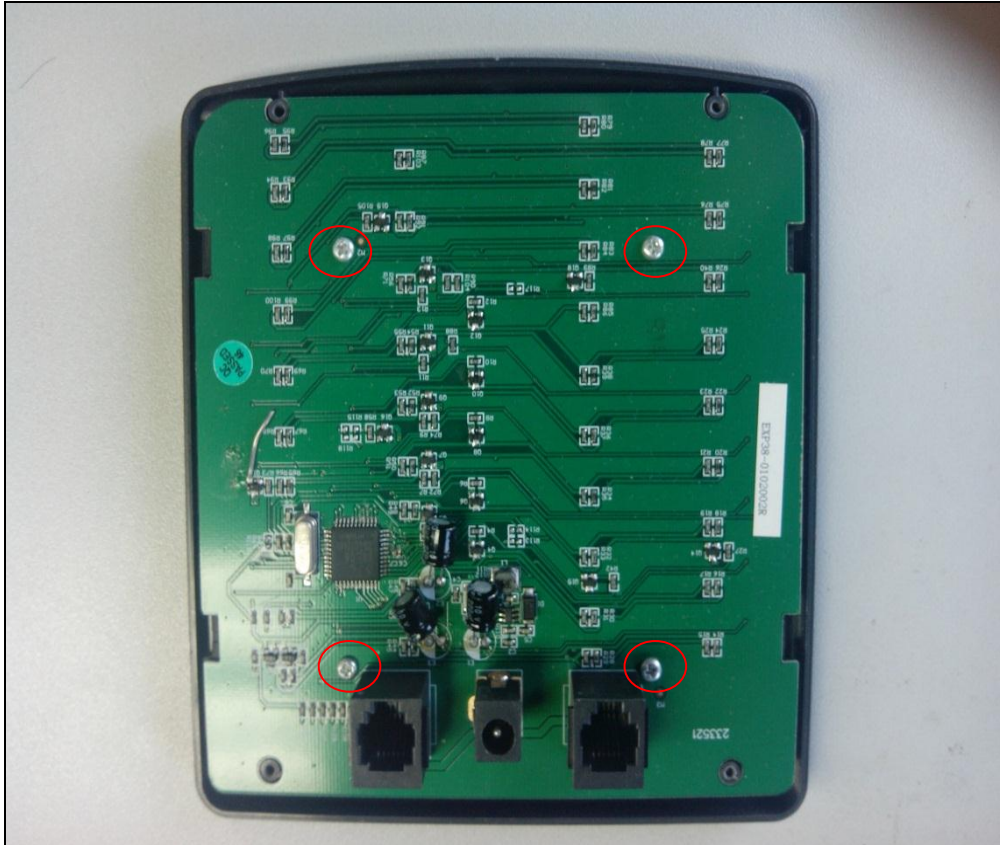



Step4: Remove the conductive rubber on the mainboard, and then use an eraser to clean the golden pad.

