

How to replace EXP39's hardware components


Replace the mainboard

Step1: Take down the power, EXT cable and the bracket of back shell.



Step2: Loosen 4pcs of screws, open the back shell.




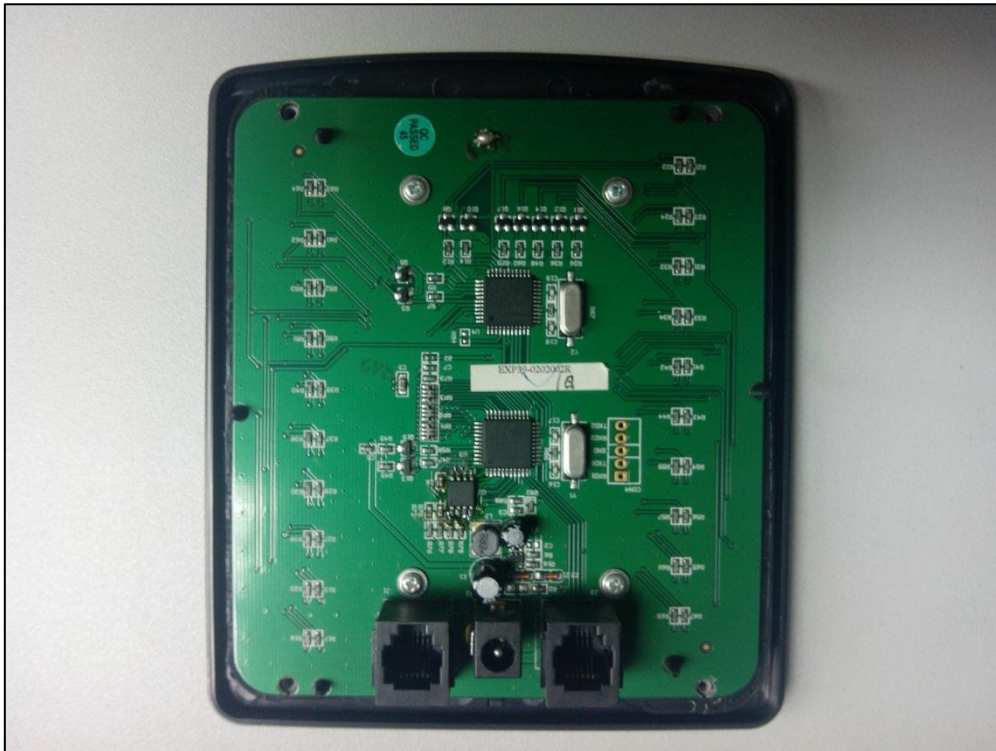

Step3: Loosen 4pcs of screws.



Step4: Remove the LCD cable, and then replace a new mainboard.

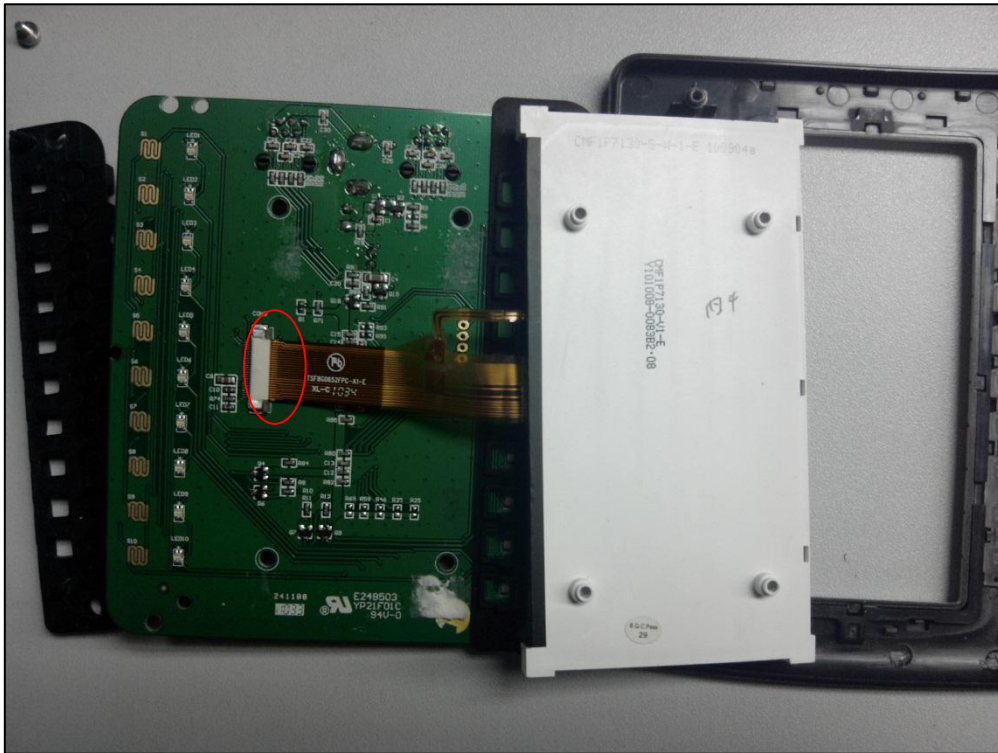


Replace the LCD module

Step1: Take down the power, EXT cable and the bracket of back shell.





Step2: Loosen 4pcs of screws, open the back shell.



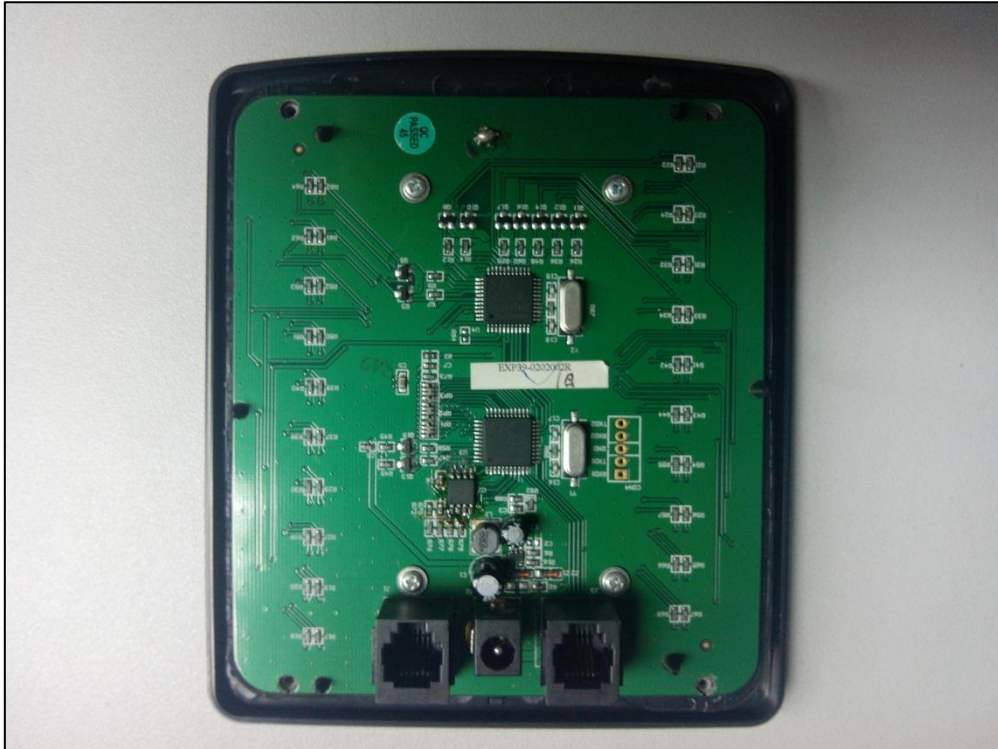

Step3: Loosen 4pcs of screws, take away the mainboard, and remove the LCD cable.

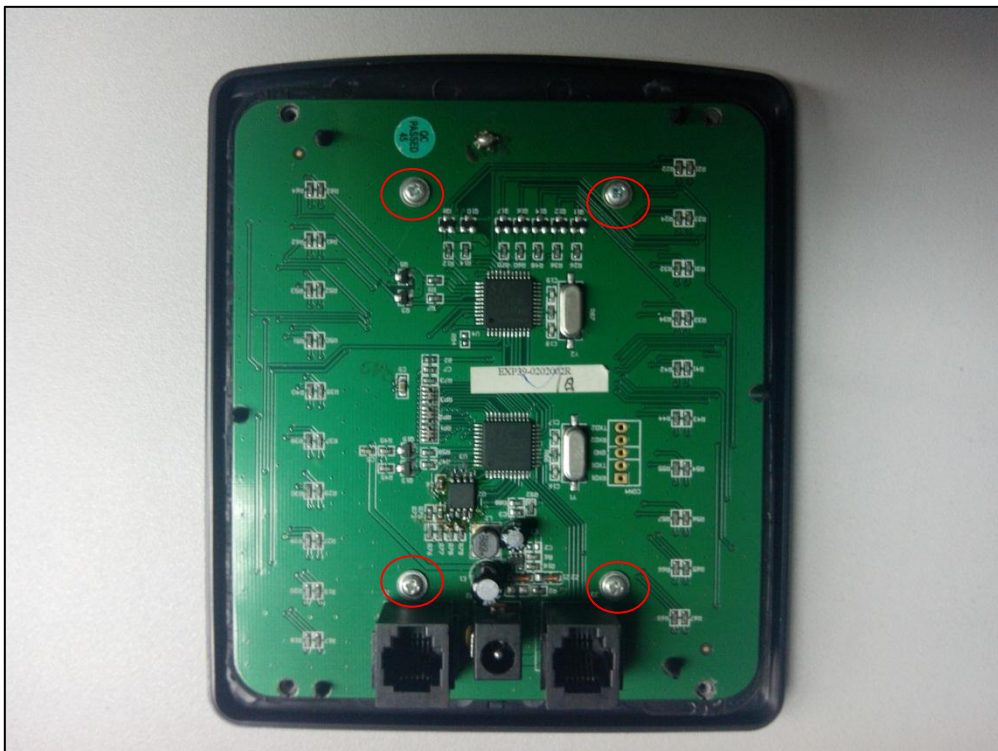

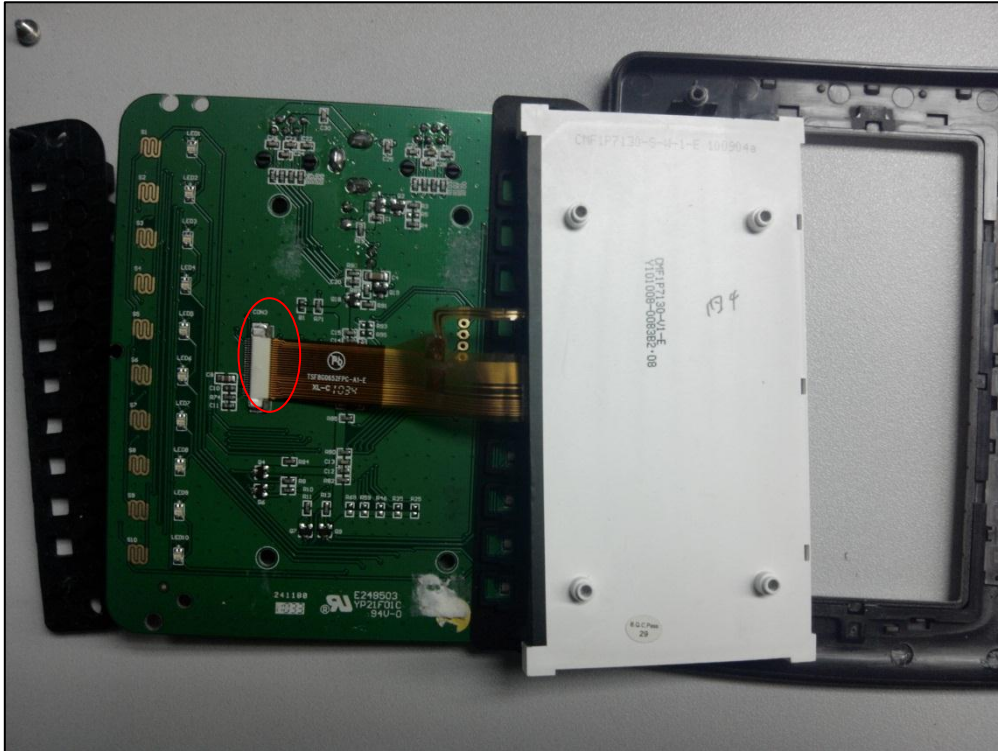

Step5: Replace a new LCD module.



Wipe and Clean the Dirt on the Golden Pad

Step1: Take down the power, EXT cable and the bracket of back shell.



Step2: Loosen 4pcs of screws, open the back shell.






Step3: Loosen 4pcs of screws.



Step4: Remove the LCD cable.

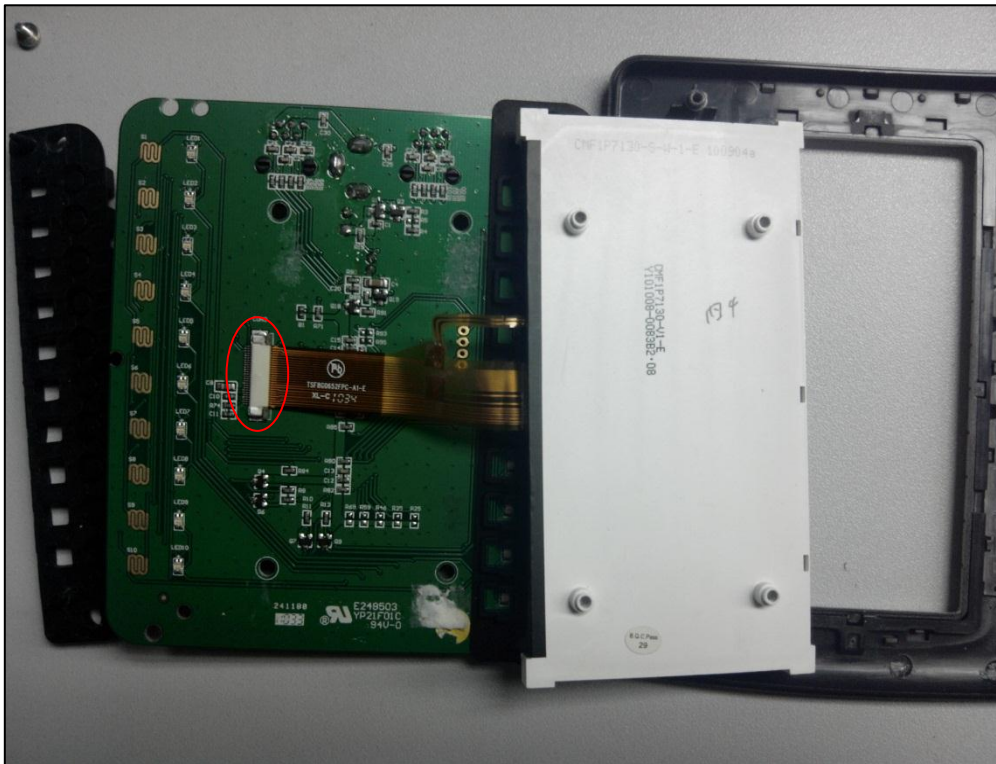

Step5: Use an eraser to clean the golden pad.

