

How to replace EXP40's hardware components

Step1: Loosen 6pcs of screws, open the back shell.



1) Replace the mainboard or clean the golden pad

Remove the LCD FPC cable on the mainboard, loosen 6pcs of screws, take down the mainboard and then replace and clean the golden pad.



2) Replace the LCD module

Take down the mainboard, remove 4pcs of screws and four plastic stands for fastening the LCD module, lightly push three fasteners shown as below, and then take down the LCD module and replace it.

