


# Yealink

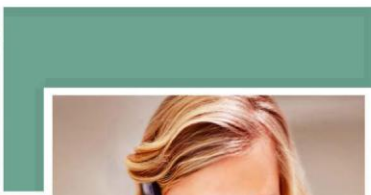

**HD** 



**SIP-T28P**

# Enterprise IP Phone

## User Guide

Version 71.110

Jun 2013

# Copyright

**Copyright © 2013 YEALINK NETWORK TECHNOLOGY CO., LTD.**

Copyright © 2013 Yealink Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Yealink Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use and not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Yealink Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

## Warranty

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS.

YEALINK NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Yealink Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

## Declaration of Conformity



Hereby, Yealink Network Technology CO., LTD. declares that this phone is in conformity with the essential requirements and other relevant provisions of the CE, FCC.

## CE Mark Warning

This device is marked with the CE mark in compliance with EC Directives 2006/95/EC and 2004/108/EC.

## Part 15 FCC Rules

This device is compliant with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## Class B Digital Device or Peripheral

Note: This device is tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

## WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

# GNU GPL INFORMATION

Yealink SIP-T28P firmware contains third-party software under the GNU General Public License (GPL).

Yealink uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Yealink products can be downloaded from Yealink web site:

<http://www.yealink.com/GPLOpenSource.aspx?BaseInfoCatId=293&NewsCatId=293&CatId=293>.

## About This Guide

Thank you for choosing the SIP-T28P IP phone, an exquisitely designed SIP IP phone. This unit provides business telephony features such as Call Hold, Call Transfer, Busy Lamp Field, Multicast Paging and Conference over an IP network.

This guide provides everything you need to quickly use your new phone. Be sure to verify with your system administrator that your network is prepared for configuring your IP phone. As well, be sure to read the Packaging Contents and Regulatory Notices sections in this guide before you set up and use the SIP-T28P IP phone.

If this is your first time using the SIP-T28P IP phone, we recommend that you first refer to the *Quick Installation Guide* and *Quick Reference Guide*, which are available at:

<http://www.yealink.com/DocumentDownload.aspx?CatId=142&flag=142>.

### Note

The Shared Line, Busy Lamp Field List, Network Directory and Network Call Log features are designed for BroadWorks environment. Please refer to BroadWorks documents or contact your system administrator for more information.

## In This Guide

The topics provided in this guide include:

- Chapter 1 [Overview](#)
- Chapter 2 [Getting Started](#)
- Chapter 3 [Customizing Your Phone](#)
- Chapter 4 [Basic Call Features](#)
- Chapter 5 [Advanced Phone Features](#)

## Summary of Changes

This section describes the changes to this guide for each release and guide version.

## Changes for Release 71, Guide Version 71.110

The following sections are new:

- [Recent Call In Dialing](#) on page 77

Major updates have occurred to the following sections:

- [Basic Network Settings](#) on page 15
- [Keypad Lock](#) on page 25
- [Contact Management](#) on page 31
- [DSS Keys](#) on page 51

## Changes for Release 70, Guide Version 70

Major updates have occurred to the following sections:

- [Keypad Lock](#) on page 25
- [Volume](#) on page 29
- [Ring Tones](#) on page 29
- [Call Completion](#) on page 80
- [DSS Keys](#) on page 51
- [Do Not Disturb \(DND\)](#) on page 84
- [Call Forward](#) on page 87
- [Call Pickup](#) on page 99
- [Busy Lamp Field \(BLF\)](#) on page 107

# Table of Contents

## About This Guide ..... v

In This Guide .....	v
Summary of Changes .....	v
Changes for Release 71, Guide Version 71.110 .....	v
Changes for Release 70, Guide Version 70 .....	vi

## Table of Contents .....vii

## Overview ..... 1

Hardware Component Instructions.....	1
Icon Instructions.....	3
LED Instructions.....	5
User Interfaces .....	5
Phone User Interface .....	6
Web User Interface.....	6
Documentations .....	8

## Getting Started..... 9

Packaging Contents.....	9
Phone Installation.....	11
Phone Initialization .....	14
Phone Status .....	14
Basic Network Settings.....	15
Registration .....	17
Idle Screen.....	17

## Customizing Your Phone ..... 19

General Settings .....	19
Contrast.....	19
Backlight .....	20
Language.....	21
Time & Date .....	22
Administrator Password .....	24
Key as Send.....	25
Keypad Lock.....	25

Audio Settings .....	29
Volume .....	29
Ring Tones .....	29
Contact Management .....	31
Directory .....	32
Local Directory .....	33
Blacklist .....	44
Remote Phone Book .....	44
Call History Management .....	47
System Customizations .....	49
Logo Customization .....	49
Headset Use .....	49
DSS Keys .....	51
Account Management .....	60
Dial Plan .....	62
Emergency Number .....	68
Live Dialpad .....	69
Hot Line .....	70
<b>Basic Call Features .....</b>	<b>73</b>
Placing Calls .....	73
Answering Calls .....	75
Ending Calls .....	77
Redialing Numbers .....	77
Recent Call In Dialing .....	77
Auto Answer .....	78
Auto Redial .....	79
Call Completion .....	80
Call Return .....	82
Call Mute .....	82
Call Hold/Resume .....	83
Do Not Disturb (DND) .....	84
Call Forward .....	87
Call Transfer .....	93
Call Waiting .....	94
Conference .....	95
Local Conference .....	95
Network Conference .....	96
Call Park .....	98
Call Pickup .....	99
Anonymous Call .....	103
Anonymous Call Rejection .....	104
<b>Advanced Phone Features .....</b>	<b>107</b>



---

Busy Lamp Field (BLF) .....	107
Call Recording .....	110
Hot Desking .....	112
Intercom .....	114
Outgoing Intercom Calls .....	114
Incoming Intercom Calls .....	114
Multicast Paging .....	116
Sending RTP Stream .....	116
Receiving RTP Stream .....	118
Music on Hold .....	120
Automatic Call Distribution (ACD) .....	121
Messages .....	123
Short Message Service (SMS) .....	123
Voice Mail .....	126
Message Waiting Indicator (MWI) .....	127
<b>Troubleshooting .....</b>	<b>131</b>
<b>Regulatory Notices .....</b>	<b>141</b>
Service Agreements .....	141
Limitations of Liability .....	141
Safety Instructions .....	141
<b>Appendix A - Time Zones .....</b>	<b>143</b>
<b>Index .....</b>	<b>145</b>



# Overview


This chapter provides the overview of the SIP-T28P IP phone. The topics include:

- [Hardware Component Instructions](#)
- [Icon Instructions](#)
- [LED Instructions](#)
- [User Interfaces](#)
- [Documentations](#)





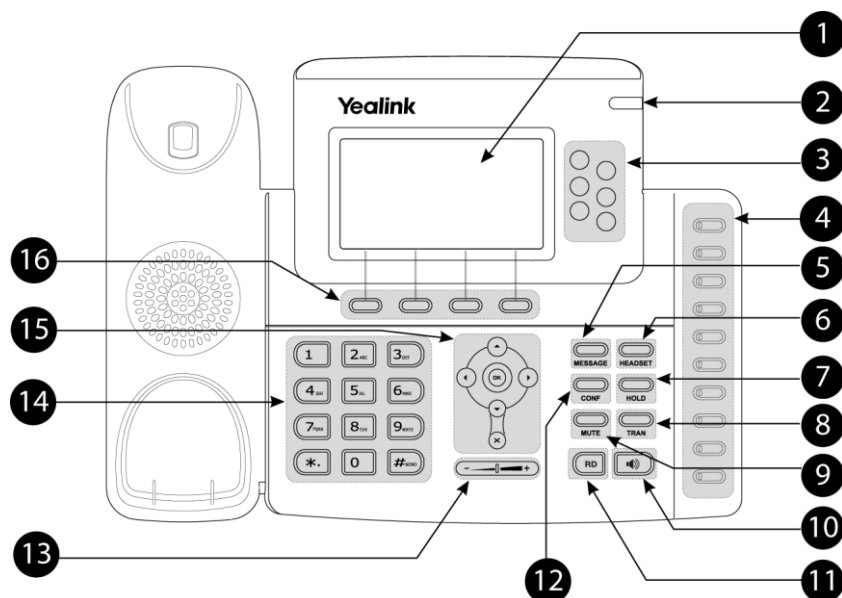


If you require additional information or assistance with your new phone, contact your system administrator.

## Hardware Component Instructions

The main hardware components of the SIP-T28P IP phone are the LCD screen and the keypad.








 
 
 
 


 
 
 


 











Hardware component instructions of the SIP-T28P IP phone are:

	Item	Description
①	LCD Screen	Shows information about calls, messages, soft keys, time, date and other relevant data: <ul style="list-style-type: none"> <li>• Call information — caller ID, call duration</li> <li>• Icons (for example, )</li> <li>• Missed call text or second incoming caller information</li> <li>• Prompt text (for example, "Saving config files!")</li> <li>• Time and date</li> </ul>
②	Power Indicator LED	Indicates phone power status and phone status.
③	Line Keys	Use these keys to activate up to six accounts and assign various features.
④	Memory Keys	Use these keys to assign various features.
⑤	MESSAGE Key	Indicates and accesses voice mails.
⑥	HEADSET Key	Toggles and indicates the headset mode.
⑦	HOLD Key	Places a call on hold or resumes a held call.
⑧	TRAN Key	Transfers a call to another party.
⑨	MUTE Key	Mutes or un-mutes an active call.
⑩	Speakerphone Key	Toggles the hands-free speakerphone mode.
⑪	RD Key	Redials a previously dialed number.
⑫	CONF Key	Conducts a conference call with multiple other parties.
⑬	Volume Key	Adjusts the volume of the handset, headset, speaker, and ringer.
⑭	Keypad	Provides the digits, letters, and special characters in context-sensitive applications.
⑮	   	Scroll through the displayed information.
		Confirms actions or answers incoming calls.
		Cancels actions or rejects incoming calls.
⑯	Soft Keys	Label automatically to identify their context-sensitive features.

## Icon Instructions

Icons appear on the phone LCD screen are described in the following table:

Icons	Description
	Network is unavailable
	Registered successfully
	Registration failed
	Registering
	Hands-free speakerphone mode
	Handset mode
	Headset mode
	Multi-lingual lowercase letters input mode
	Multi-lingual uppercase letters input mode
	Alphanumeric input mode
	Numeric input mode
	Voice Mail
	Text Message
	Auto Answer
	Do Not Disturb
	Call Forward/Forwarded Calls
	Call Hold
	Call Mute
	Ringer volume is 0

Icons	Description
	Keypad Lock
	Received Calls
	Placed Calls
	Missed Calls
	Recording box is full
	A call cannot be recorded
	Recording starts successfully
	Recording cannot be started
	Recording cannot be stopped

## LED Instructions

### Power Indicator LED

LED Status	Description
Solid green	The phone is powered on.
Fast Flashing green	The phone is ringing (Hardware version must be 1.0.0.1 or higher).
Slow flashing green	The phone receives a voice mail (Hardware version must be 1.0.0.1 or higher).
Off	The phone is powered off.

### Line key LED

LED Status	Description
Solid green	The line is in conversation. The line is seized.
Fast flashing green	The line receives an incoming call.
Slow flashing green	The call is placed on hold.
Off	The line is inactive.

### Line key LED (configured as BLF key)

LED Status	Description
Solid green	The monitored user is idle.
Fast flashing green	The monitored user receives an incoming call.
Slow flashing green	The monitored user is busy.
Off	The monitored user does not exist.

### Memory key LED (configured as BLF key)

LED Status	Description
Solid green	The monitored user is idle.
Flashing red	The monitored user receives an incoming call.
Solid red	The monitored user is busy.
Off	The monitored user does not exist.

## User Interfaces

There are two ways to customize specific configurations on your SIP-T28P IP phone:

- Using the user interface on the IP phone.
- Using the user interface in an internet browser window from your PC.

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration

changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone user interface or the web user interface.

## Phone User Interface

You can customize your phone by pressing the **Menu** soft key to access the phone user interface. The Advanced Settings option is only accessible to an administrator, and the default administrator password is admin (case-sensitive). For more information on customizing your phone using the available options from the phone user interface, refer to [Customizing Your Phone](#) on page 19.

## Web User Interface

In addition to the phone user interface, you can also customize your phone via web user interface. In order to access the web user interface, you need to know the IP address of your new phone. To obtain the IP address, press the **OK** key on the phone. Enter the IP address (e.g., http://192.168.0.10 or 192.168.0.10) in the address bar of web browser on your PC. The default administrator user name and password are both admin (case-sensitive).

The options you can use to customize the IP phone via phone user interface and/or via web user interface are listed in the following table:

Options	Phone User Interface	Web User Interface
<b>Status</b>	√	√
--IPv4		
--MAC		
--Firmware		
--Network		
--Phone		
--Accounts		
<b>Basic Call Features</b>		√
--Auto Answer	√	
--Auto Redial	√	
--Call Completion	√	
--Call Forward	√	
--Call Waiting	√	
--Call Park	√	
--Call Pickup	√	
--Call Return	√	



Options	Phone User Interface	Web User Interface
--Conference		
--Anonymous Call	√	
--Anonymous Call Rejection	√	
--DND	√	
<b>Basic Phone Settings</b>		
--Language	√	√
--Time & Date	√	√
--Administrator Password	√	√
--Ring Tones	√	√
--Contrast	√	√
--Backlight	√	√
--Call Waiting	√	√
--Keypad Lock	√	√
--Phone Volume	√	
--Logo Customization		√
--Call History Management	√	√
--Contact Management		
--Directory		√
--Local Directory	√	√
--Blacklist	√	√
--Remote Phone Book		√
--Dial Plan		√
--DSS Keys	√	√
--Key as Send	√	√
--Hot Line	√	√
--Live Dialpad		√
--Emergency Call		√
<b>Advanced Phone Features</b>		√
--BLF	√	
--Call Recording	√	
--Hot Desking	√	
--Intercom	√	
--Multicast Paging		
--Music on Hold		
--ACD	√	
--Messages	√	
<b>SIP Account</b>		√
--User Options		
--Register Status	√	
--Activation	√	

Options	Phone User Interface	Web User Interface
--Label	√	
--Display Name	√	
--Register Name	√	
--User Name	√	
--Password	√	
--SIP Server1/2	√	
--Server Option		
--Registrar Port		
--Outbound Status	√	
--Outbound Proxy	√	
--NAT Traversal		
--STUN Status	√	
--STUN Server	√	

**Note**

The table above lists most of the feature options. Please refer to the relevant sections for more information.

## Documentations

The following table shows documentations available for the SIP-T28P IP phone.

Name	Contents	Where found	Format/Language
Quick Installation Guide	Basic set up of the phone	In the package	PDF/English
Quick Reference Guide	Basic call features and phone customizations	In the package	PDF/English
User Guide	Phone/ Web user interface settings Basic call features and advanced phone features	CD attached in the package	PDF/English

**Note**

You can also download the latest documentations from website:  
<http://www.yealink.com/DocumentDownload.aspx?CatId=142&flag=142>.

# Getting Started

This chapter provides basic installation instructions and information for obtaining the best performance with the SIP-T28P IP phone. The topics include:


- [Packaging Contents](#)
- [Phone Installation](#)
- [Phone Initialization](#)
- [Phone Status](#)
- [Basic Network Settings](#)
- [Registration](#)
- [Idle Screen](#)

If you require additional information or assistance with your new phone, contact your system administrator.


## Packaging Contents

The following components are included in your SIP-T28P IP phone package:


- **SIP-T28P IP phone**

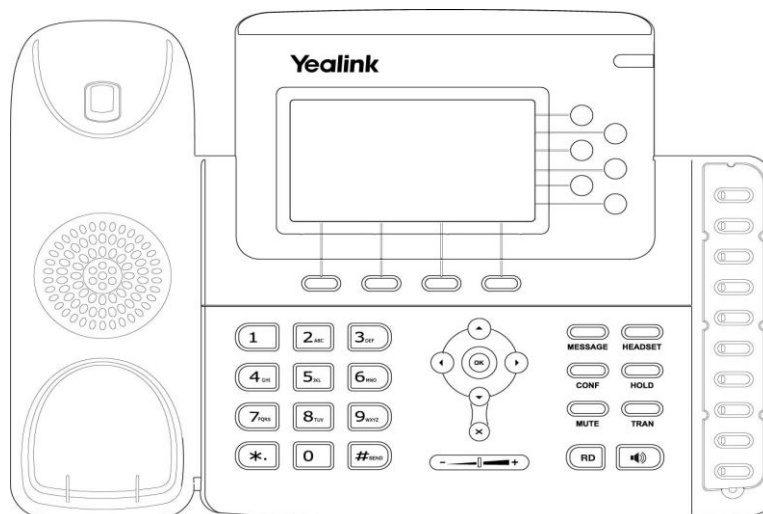


- **Phone Stand**

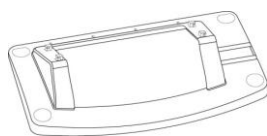


- **Power Adapter**

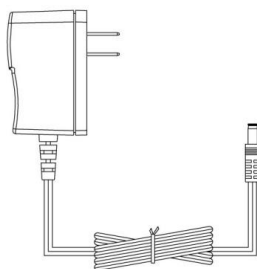


- **Handset & Handset Cord**

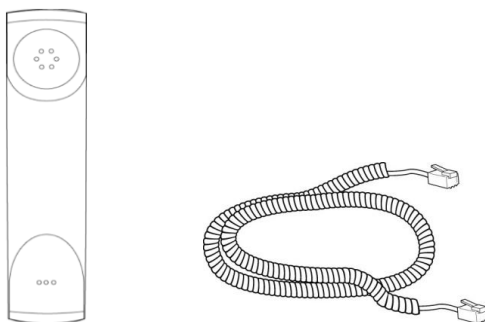

- **Ethernet Cable**

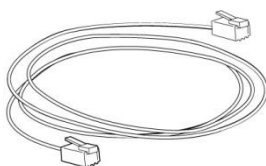

- **Quick Installation Guide & Quick Reference Guide**

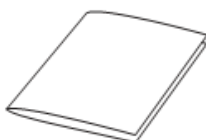

- CD-ROM



Check the list before installation. If you find anything missing, contact your system administrator.


## Phone Installation

If your phone is already installed, proceed to [Phone Initialization](#) on page 14.


This section introduces how to install the phone with the components in the packaging contents:

- Attach the stand
- Connect the handset and optional headset
- Connect the network and power

### 1) Attach the stand

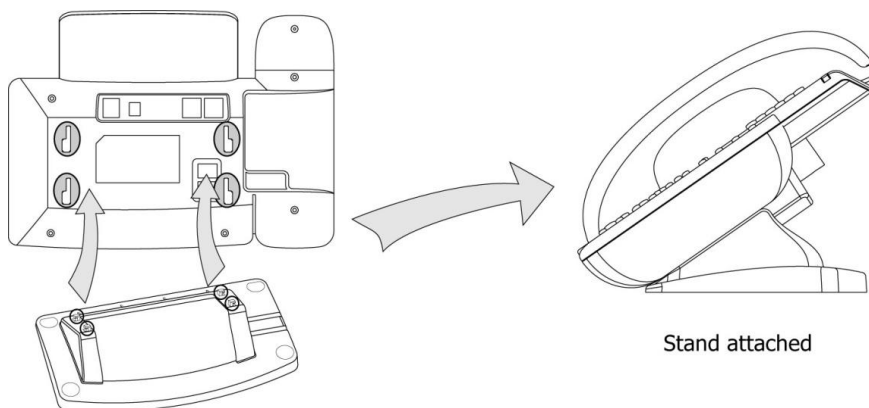

## 2) Connect the handset and optional headset

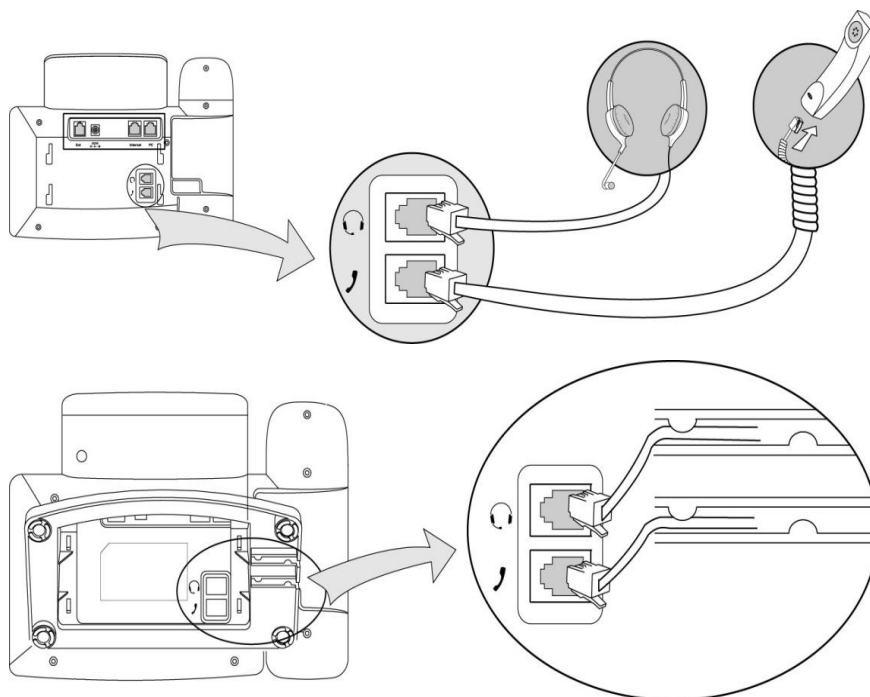

### Note

A headset is not provided in the packaging contents. Contact your system administrator for more information.

## 3) Connect the network and power

You have two options for power and network connections. Your system administrator will advise you which one to use.


- AC power
- Power over Ethernet (PoE)

### AC Power

#### To connect the AC power:

1. Connect the DC plug on the power adapter to the DC5V port on the phone and connect the other end of the power adapter into an electrical power outlet.

2. Connect the supplied Ethernet cable between the Internet port on the phone and the Internet port in your network or switch/hub device port.

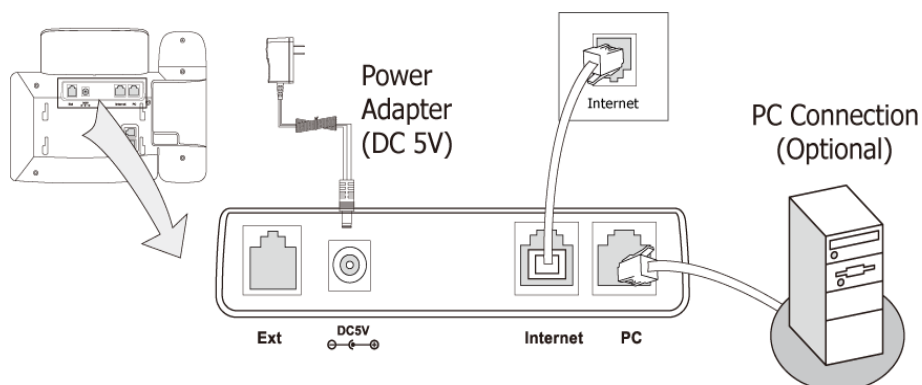


## Power over Ethernet

Using a regular Ethernet cable, the SIP-T28P IP phone can be powered from a PoE (IEEE 802.3af) compliant switch or hub.

### To connect the PoE:

1. Connect the Ethernet cable between the Internet port on the phone and an available port on the in-line power switch/hub.

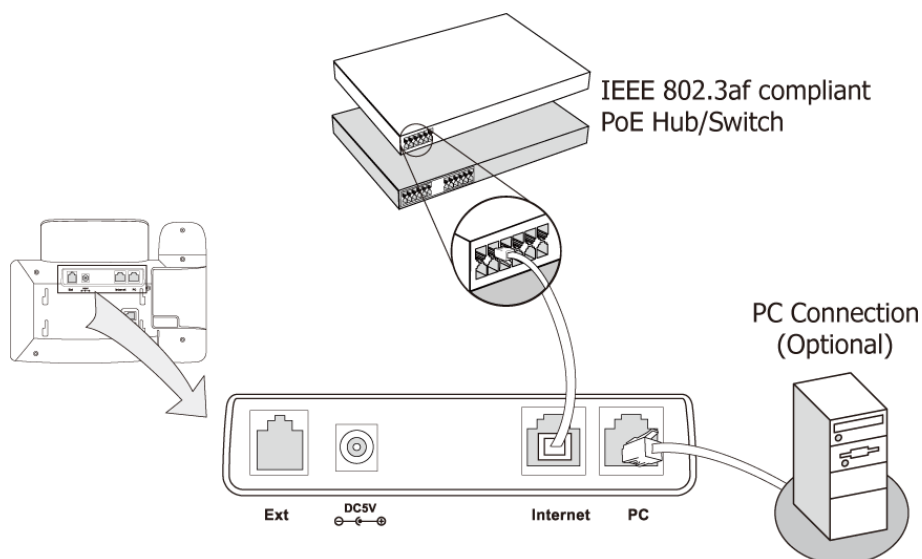

### Note

If in-line power is provided, you don't need to connect the AC adapter. Make sure the Ethernet cable and switch/hub is PoE compliant.

The phone can also share the network with other network devices such as a PC (personal computer). It is an optional connection.

**Important!** Do not unplug or remove power to the phone while it is updating firmware and configurations.

## Phone Initialization

After your phone has been powered on, the system boots up and performs the following steps:

### Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Initializing, Please Wait" during the initialization.

### DHCP (Dynamic Host Configuration Protocol)

By default the phone attempts to contact a DHCP server in your network to obtain valid IPv4 and IPv6 network settings, e.g., IP address, subnet mask, default gateway address and DNS address.

#### Note

If your network does not use DHCP, proceed to [Basic Network Settings](#) on page 15.




## Phone Status


You can view the system status of your phone via phone user interface or web user interface.

Available information of phone status includes:

- Network status including IPv4 status, IPv6 status, IP mode, MAC address, LAN type, LAN IP and LAN mask.
- Phone status including device model, hardware version, firmware version, product ID, MAC address and device certificate status (including factory, installed and not installed).
- Account status indicating the register status of SIP accounts.

**To view the phone status via phone user interface:**

1. Press , or press **Menu->Status**.
2. Press  or  to scroll through the list and view the specific information.

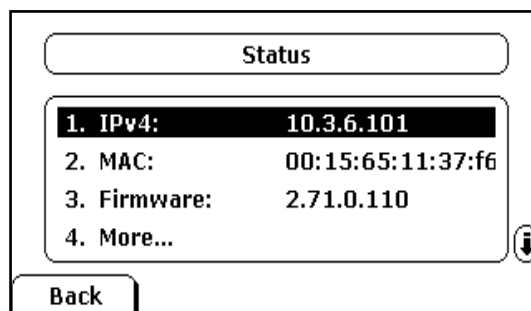



To view the phone status via web user interface:

1. Open the web browser of your computer.
2. Enter the IP address in the browser's address bar, and then press **Enter**.
3. Enter the user name (admin) and password (admin) in the login page.
4. Click **Confirm** to log in.

The phone status displays on the first page of the web user interface.

## Basic Network Settings

If your phone cannot contact a DHCP server for any reason, you need to configure network settings manually. IP phones support to use the IPv4 address only, the IPv6 address only or both IPv4 and IPv6 addresses.

To configure the IP address mode via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Network->WAN Port**.
2. Press ◀ or ▶ to select **IPv4**, **IPv6** or **IPv4 & IPv6** from the **IP Mode** field.

WAN Port Option

1. IP Mode	IPv4 & IPv6	◀▶
2. IPv4		
3. IPv6		

Back Save

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

To configure a static IPv4 address via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Network->WAN Port->IPv4->Static IP Client**.
2. Enter the desired values in the **IPv4**, **Subnet Mask**, **Default Gateway**, **Pri DNS** and **Sec DNS** fields respectively.

Static IP Client

1. IPv4:	192.168.0.10
2. Subnet Mask:	255.255.255.0
3. Default Gateway:	192.168.0.254
4. Pri DNS:	202.101.103.55

Back 123 Delete Save

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

To configure a static IPv6 address via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Network->WAN Port->IPv6->Static IPv6 Client**.
2. Enter the desired values in the **IPv6 IP**, **IPv6 IP Prefix**, **IPv6 Gateway**, **IPv6 Pri.DNS** and **IPv6 Sec.DNS** fields respectively.

Static IPv6 Client

1. IPv6 IP: 2005:1:1:1::12

2. IPv6 IP Prefix: 64

3. IPv6 Gateway: 2005:1:1:1::1

4. IPv6 Pri.DNS: 2005:1:1:1::89

Back 123 Delete Save

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set the WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

To configure PPPoE via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Network->WAN Port->IPv4->PPPoE IP Client**.

PPPoE IP Client

1. PPPoE User:

2. PPPoE PWD:

Back 2aB Delete Save

2. Enter the user name and password in the corresponding fields.
3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

**Note**


Using the wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information on these parameters, contact your system administrator.

## Registration

Generally, your phone will be deployed with multiple other phones. In this case, your system administrator will configure the phone parameters beforehand, so that after you start up your phone, the phone will be registered and ready to use. If your phone is not registered, you may have to register it. For more information on how to register your phone, refer to [Account Management](#) on page 60.

## Idle Screen

If the phone has successfully started up, the idle screen is shown as below:

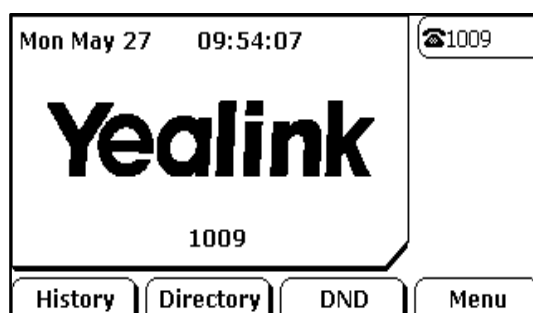

The idle screen shows time and date, label of each account, logo and four soft keys.



# Customizing Your Phone

You can customize your SIP-T28P IP phone by configuring the contrast, time & date, ring tones and so on. You can add contacts to the phone's local directory manually or from call history. You can also handle incoming calls from different contacts in different ways. This chapter provides basic operating instructions for customizing your phone. The topics include:

- [General Settings](#)
- [Audio Settings](#)
- [Contact Management](#)
- [Call History Management](#)
- [System Customizations](#)



If you require additional information or assistance with your new phone, contact your system administrator.

## General Settings


### Contrast

You can configure the contrast of the LCD screen to a comfortable level.

To configure the contrast via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) -> **Phone Settings->Contrast**.
2. Press  or , or the **Switch** soft key to increase or decrease the intensity of contrast.

The default contrast level is 6.

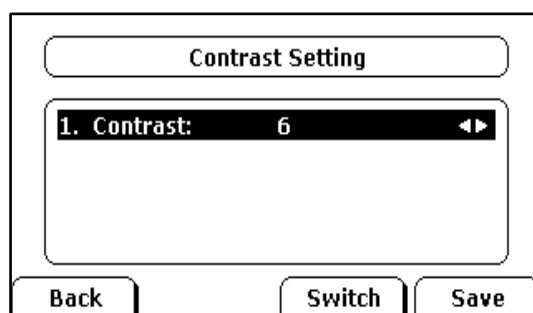

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure contrast via web user interface at the path **Settings->Preference**.

## Backlight


You can configure the backlight feature to adjust the brightness of the phone LCD screen. Backlight intensity is used to adjust to the backlight intensity of the LCD screen. Backlight time specifies the delay time to turn off the backlight when the IP phone is inactive.

You can configure the backlight status on the LCD screen as the following types:

- **Always Off:** Backlight is turned off permanently.
- **Always On:** Backlight is on permanently.
- **15, 30, 60, 120:** Backlight is turned off when the phone is inactive after the specified time (in seconds).

To configure the backlight via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Phone Settings->Backlight**.
2. Press ◀ or ▶, or the **Switch** soft key to select the desired level from the **Backlight Intensity** field.
3. Press ◀ or ▶, or the **Switch** soft key to select the desired type from the **Backlight Time** field.

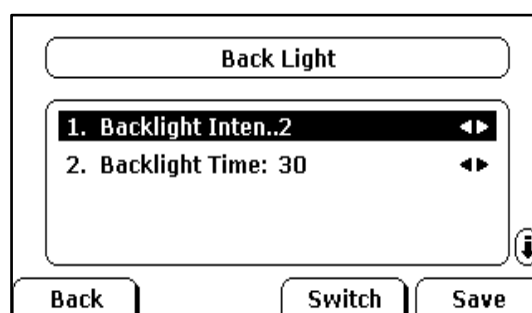

4. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the backlight via web user interface at the path **Settings->Preference**.



## Language

The default language of the phone user interface is English. The phone will detect and use the same language as which of your internet browser for the web user interface. If the language of your internet browser is not supported by the phone, the web user interface will use English. You can change the language for the phone user interface and the web user interface respectively.

### Note

Not all of the support languages are available for selection. The available languages depend on the language packs currently loaded to the IP phone. Please contact your system administrator for more information on the available languages of your new phone.

**To change the language for the phone user interface:**

1. Press **Menu->Settings->Basic Settings->Language**.
2. Press  or  to select the desired language.




3. Press the **Save** soft key to accept the change.

Text appearing on the LCD screen will use the selected language.

**To change the language for the web user interface:**

1. Click on **Settings->Preference**.

2. Select the desired language from the pull-down list of **Language**.

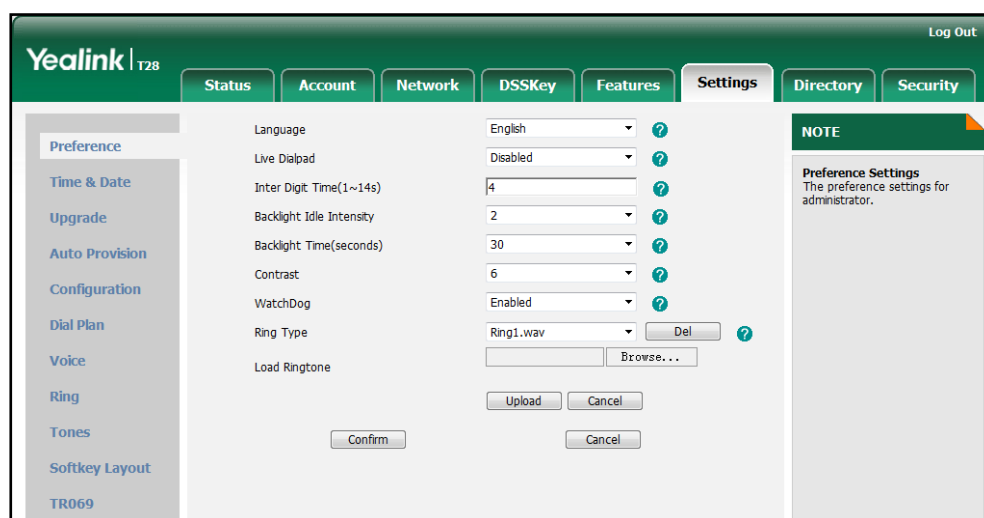

3. Click **Confirm** to accept the change.


Text displaying on the web user interface will use the selected language.

## Time & Date

The time and date display on the LCD screen when the phone is idle. If the phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, you need to configure the time and date manually. For more information on the SNTP server, contact your system administrator.

**To configure the SNTP settings via phone user interface:**

1. Press **Menu->Settings->Basic Settings->Time & Date->SNTP Settings**.
2. Press **◀** or **▶**, or the **Switch** soft key to select the time zone that applies to your area from the **Time Zone** field.  
The default time zone is "+8 China(Beijing)".
3. Enter the domain names or IP addresses in the **NTP Server1** and **NTP Server2** fields respectively.
4. Press **◀** or **▶**, or the **Switch** soft key to select the desired value from the **Daylight Saving** field.

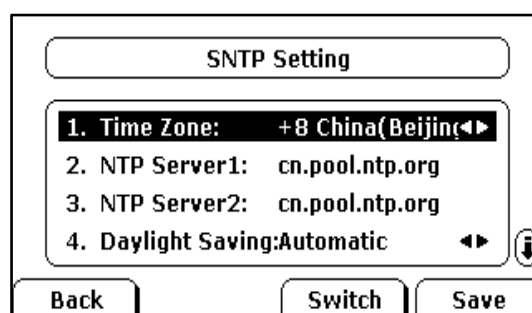



5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

**Note**

Please refer to [Appendix A - Time Zones](#) for the list of available time zones on the IP phone.

To configure the time and date manually via phone user interface:

1. Press **Menu->Settings->Basic Settings->Time & Date->Manual Settings**.
2. Enter the specific date in the **Date** field.
3. Enter the specific time in the **Time** field.

The screenshot shows a 'Manual Setting' screen with two input fields. The first field is labeled '1. Date(Y-M-D):' and contains the text '13 - 05 - 16'. The second field is labeled '2. Time(H:M:S):' and contains the text '11 : 23 : 23'. At the bottom of the screen, there are two buttons: 'Back' on the left and 'Save' on the right. A small downward arrow icon is located at the bottom right of the input area.

4. Press the **Save** soft key to accept the change.  
The date and time displaying on the LCD screen will change accordingly.

To configure the time and date format via phone user interface:

1. Press **Menu->Settings->Basic Settings->Time & Date->Time & Date Format**.
2. Press **◀** or **▶**, or the **Switch** soft key to select the desired time format from the **Clock** field.
3. Press **◀** or **▶**, or the **Switch** soft key to select the desired date format from the **Date Format** field.

The screenshot shows a 'Time & Date Format' screen. It has two fields: '1. Clock:' with the value '24 Hour' and '2. Date Format:' with the value 'WWW MMM DD'. Both fields have double arrow icons (◀▶) to the right of the text, indicating they can be toggled. At the bottom, there are three buttons: 'Back' on the left, 'Switch' in the middle, and 'Save' on the right. A small downward arrow icon is located at the bottom right of the input area.

4. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

There are 7 available date formats. For example, the date format is “WWW DD MMM”, “WWW” represents the abbreviation of the week, “DD” represents the two-digit day, and “MMM” represents the first three letters of the month.

The date formats you need to know:

Date Format	Example(2013-1-16)
WWW MMM DD	Wed Jan 16
DD-MMM-YY	16-Jan-13
YYYY-MM-DD	2013-01-16
DD/MM/YYYY	16/01/2013
MM/DD/YY	01/16/13
DD MMM YYYY	16 Jan 2013
WWW DD MMM	Wed 16 Jan

You can also configure the time and date via web user interface at the path **Settings->Time & Date**.

## Administrator Password

The Advanced Settings option is only accessible to an administrator. The default administrator password is admin. For security reasons, you should change the default administrator password as soon as possible.

**To change the administrator password via phone user interface:**

1. Press **Menu->Settings->Advanced Settings** (password: admin) -> **Set Password**.



2. Enter the old password in the **Current PWD** field.
3. Enter the new password in the **New PWD** field.
4. Enter the new password again in the **Confirm PWD** field.
5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.


You can also configure the administrator password via web user interface at the path **Security->Password**.

## Key as Send

You can set the "\*" or "#" to perform as a send key while dialing.

To configure the key as send feature via phone user interface:

1. Press **Menu->Features->Key as Send**.
2. Press  or , or the **Switch** soft key to select **#** or **\*** from the **Key as Send** field, or select **Disable** to disable this feature.

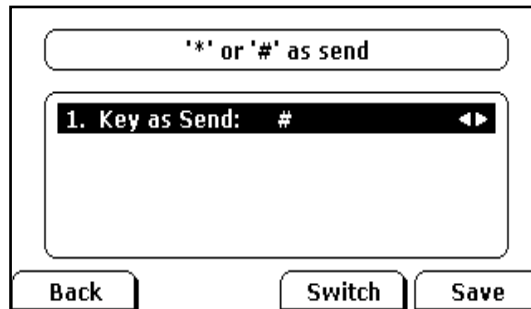

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure key as send via web user interface at the path **Features->General Information**.

## Keypad Lock

You can lock the keypad of your phone temporarily when you are not using it. This feature helps to protect your phone from unauthorized use.



Keypad Lock consists of the following:

- Menu Key:** The **Menu** soft key and **MESSAGE** key are locked. You cannot access the menu of the phone until unlocked.
- Function Keys:** The function keys are locked. You cannot use the **MESSAGE, RD, CONF, HOLD, MUTE, TRAN, OK, X**, navigation keys, soft keys, line keys and memory keys until unlocked.
- All Keys:** All keys are locked except the **Volume** key. You are only allowed to dial emergency numbers, reject incoming calls by pressing the **X** key, answer incoming calls by lifting the handset, pressing the **Speakerphone** key, the **HEADSET** key or the **OK** key, place an active call on hold by pressing the **Hold** soft key or the **HOLD** key and end the call by pressing the **X** key.



### Note


The emergency number setting, if desired, must be made before lock activation. For more information, refer to [Emergency Number](#) on page 68.


**To activate the keypad lock via phone user interface:**

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Phone Settings->Keypad Lock**.
2. Press  or  , or the **Switch** soft key to select the desired type from the **Keypad Lock** field.



3. Press the **Save** soft key to accept the change.
4. Long press  to lock the keypad immediately when the phone is idle.  
The LCD screen prompts "Keypad Locked!" and displays the icon .

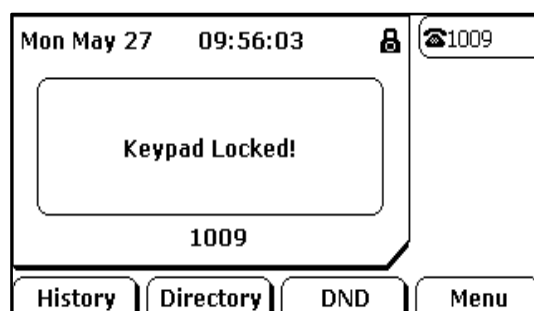

You can specify the interval (in seconds) to automatically lock the keypad instead of long pressing .


**To configure the interval of automatic keypad lock via web user interface:**

1. Click on **Features->Phone Lock**.

2. Enter the desired interval in the **Phone Lock Time Out (0~3600s)** field.

3. Click **Confirm** to accept the change.

#### Note

The default interval is 0 second, that is, you can long press  to lock the keypad only.

You can configure the interval of automatic keypad lock via web user interface only.

To unlock the keypad, you must know the keypad unlock PIN of the phone. The default keypad unlock PIN is 123.

**To change the keypad unlock PIN via phone user interface:**

1. Press **Menu->Settings->Basic Settings->Phone Unlock PIN**.


2. Enter the old PIN in the **Current PIN** field.
3. Enter the new PIN in the **New PIN** field.
4. Enter the new PIN again in the **Confirm PIN** field.
5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

#### Note

The unlock PIN length must be within 15 characters.


### To unlock the keypad via phone user interface:

1. Press any locked key, the LCD screen prompts "Please Enter PIN".

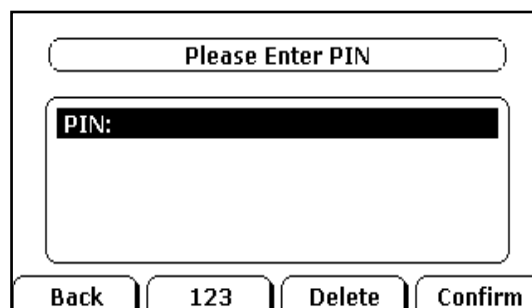

2. Enter the PIN in the **PIN** field.
3. Press the **Confirm** soft key to unlock the keypad.



The  icon disappears from the LCD screen.


You can long press  or wait for a period of time (if configured) to lock the keypad again.

### Note

You can also unlock the keypad by administrator password. When you enter the administrator password to unlock the keypad, the phone will then turn to the **Reset Phone PIN** interface.

### To deactivate the keypad lock via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) -> **Phone Settings->Keypad Lock**.
2. Press  or , or the **Switch** soft key to select **Disable** from the **Keypad Lock** field.

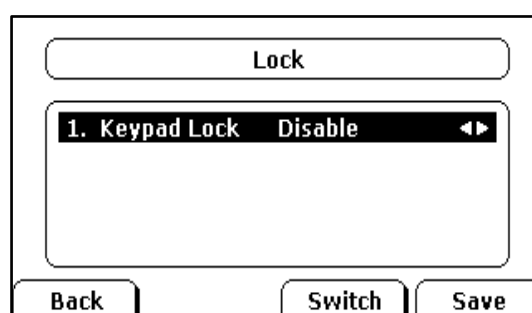

3. Press the **Save** soft key to accept the change.


You can also activate or deactivate the keypad lock via web user interface at the path **Features->Phone Lock**.


## Audio Settings

### Volume


You can press the **Volume** key to adjust the ringer volume when the phone is idle. You can also press the **Volume** key to adjust the receiver volume of currently used audio devices (handset, speakerphone or headset) when the phone is during a call.


**To adjust the volume when the phone is idle:**

1. Press  to adjust the ringer volume.

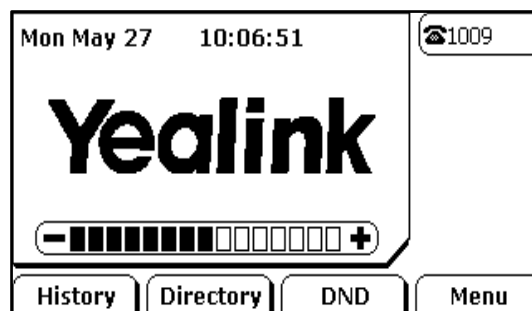

**To adjust the volume when the phone is during a call:**

1. Press  to adjust the volume of currently used audio device (handset, speakerphone or headset).

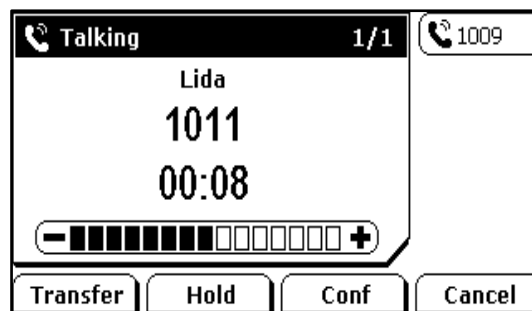



**Note** If the ringer volume is adjusted to minimum, the  icon will appear on the LCD screen.


### Ring Tones

Ring tones are used to indicate incoming calls. You can select different ring tones to distinguish the different accounts registered on your phone, or to distinguish your phone from your neighbor's.

**To select a ring tone for the phone via phone user interface:**

1. Press **Menu->Settings->Basic Settings->Ring Tones**.

- Press  or  to select the desired ring tone.

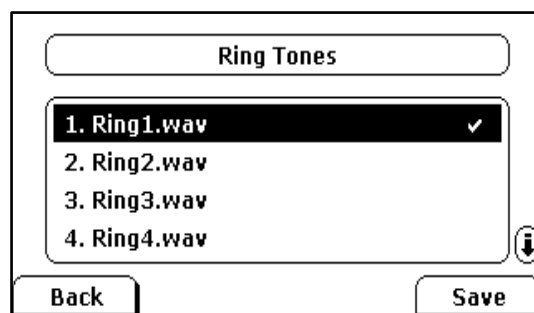


- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

To select a ring tone for the account via web user interface:

- Click on **Account**.
- Select the desired account from the pull-down list of **Account**.
- Click on **Basic**.
- Select the desired ring tone from the pull-down list of **Ring Type**.

If **Common** is selected, this account will use the ring tone selected for the phone at the path of the web user interface **Settings->Preference**. Refer to the above instruction.

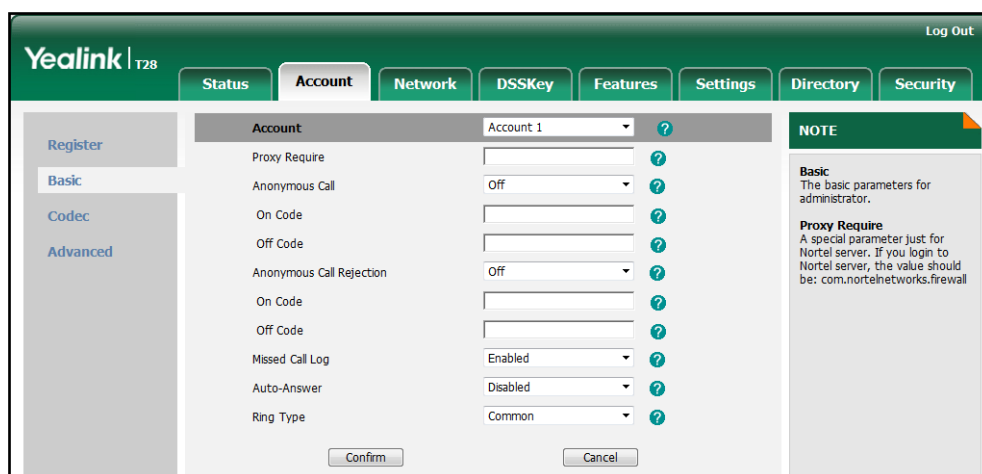

- Click **Confirm** to accept the change.

**Note**

You can select a ring tone for the account via web user interface only.



To upload custom ring tones for your phone via web user interface:

1. Click on **Settings->Preference**.
2. Click **Browse** to locate a ring tone (file format must be \*.wav) file from your local system.

The screenshot shows the Yealink T28 web interface. The 'Settings' tab is selected, and the 'Preference' sub-tab is active. On the left, a sidebar lists various settings categories: Preference, Time & Date, Upgrade, Auto Provision, Configuration, Dial Plan, Voice, Ring, Tones, Softkey Layout, and TR069. The main area displays various settings for the phone, including Language (English), Live Dialpad (Disabled), Inter Digit Time (4s), Backlight Idle Intensity (2), Backlight Time (30s), Contrast (6), Watch Dog (Enabled), Ring Type (Ring1.wav), and Load Ringtone (C:\Documents and Settings\...). The 'Browse...' button next to the Load Ringtone field is highlighted. At the bottom, there are 'Upload', 'Cancel', and 'Confirm' buttons. A 'NOTE' box on the right states: 'Preference Settings: The preference settings for administrator.'

3. Click **Upload** to upload the file.

#### Note

The ring tone for an incoming call on the phone may be different. For example, when the phone receives an incoming call from a contact stored in the local directory, it will play the ring tone assigned to the contact in the contact directory (refer to [Adding Contacts](#) in the [Contact Management](#) section). Otherwise, the phone will play the ring tone assigned to the account. If both the contact ring tone and the account ring tone are not assigned, then the phone will play the ring tone assigned for the phone.

All custom ring tone files must be within 100KB. You can upload custom ring tones for your phone via web user interface only.

## Contact Management





This section provides the operating instructions for managing contacts. The topics include:


- [Directory](#)
- [Local Directory](#)
- [Blacklist](#)
- [Remote Phone Book](#)

## Directory

Directory provides easy access to the lists you use frequently. The lists may contain Local Directory, History, Remote Phone Book and LDAP.

**To configure the directory via web user interface:**

1. Click on **Directory->Setting**.
2. In the **Directory** block, select the desired list from the **Disabled** column and then click  .  
The selected list appears in the **Enabled** column.
3. Repeat the step 2 to add more lists to the **Enabled** column.
4. To remove a list from the **Enabled** column, select the desired list and then click  .
5. To adjust the display order of list, select the desired list and then click  or  .  
The phone LCD screen displays the list(s) in the adjusted order.

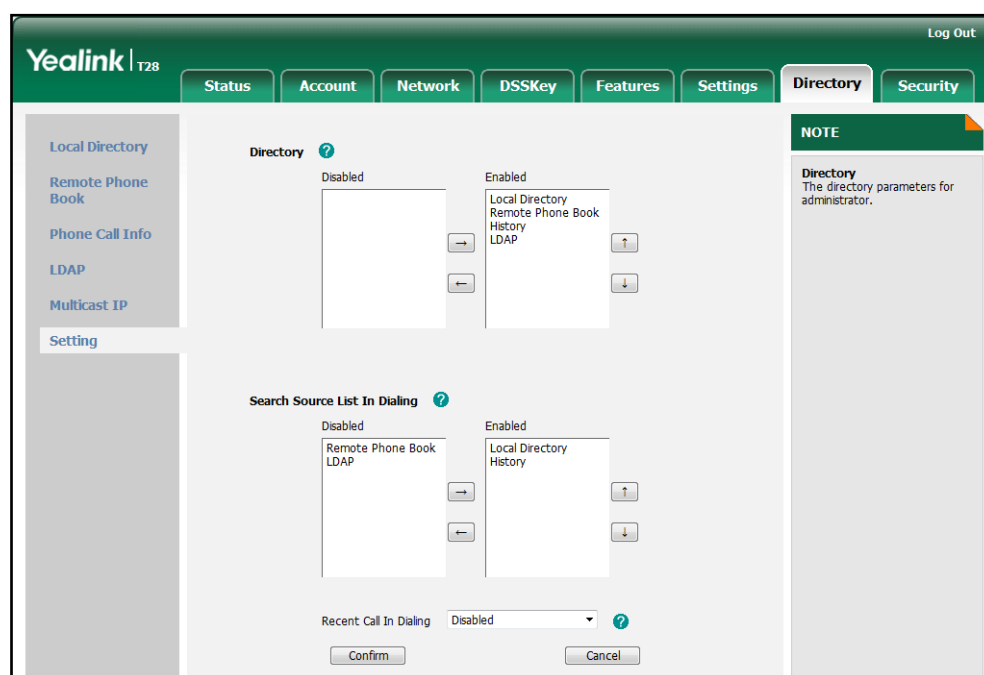

6. Click **Confirm** to accept the change.


### Note

You can configure the directory via web user interface only.

**To check the directory via phone user interface:**

1. Press the **Directory** soft key when the phone is idle.

The phone LCD screen displays the list(s) in the directory.

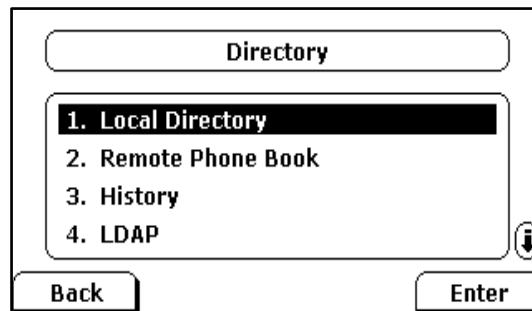

If there is only one list in the directory, pressing the **Directory** soft key enters this list directly.

## Local Directory

The built-in phone directory stores the names and phone numbers of your contacts. You can store up to 1000 contacts and 7 groups (including the default All Contacts and Blacklist) in your phone's local directory. You can add new groups and add new contacts to different groups in the local directory. You can edit, delete or search for a contact in the local directory. You can also dial a contact from the local directory.

## Adding Groups

To add a group to the local directory:



1. Press the **Directory** soft key.


The IP phone enters the local directory directly as there is only Local Directory in the directory by default.



If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press the **AddGroup** soft key.
3. Enter the desired group name in the **Name** field.

- Press  or , or the **Switch** soft key to select the desired group ring tone from the **Ring Tones** field.

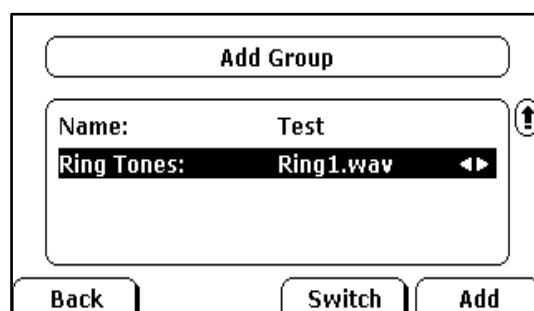

- Press the **Add** soft key to accept the change or the **Back** soft key to cancel.

## Editing Groups

To edit a group in the local directory:


- Press the **Directory** soft key.



The IP phone enters the local directory directly as there is only Local Directory in the directory by default.



If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

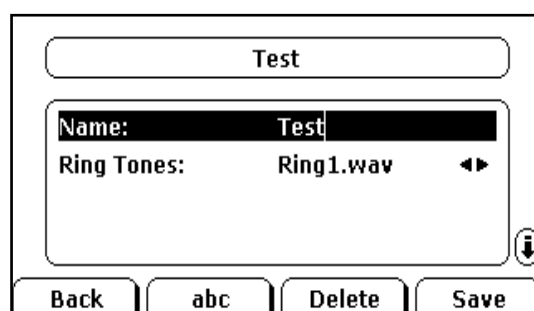- Select the desired group (e.g., Test).
- Press the **Option** soft key, and then select **Detail** from the prompt list.



- Press  or  to highlight the group information and then edit.
- Press the **Save** soft key to accept change or the **Back** soft key to cancel.

## Deleting Groups

To delete a group from the local directory:

1. Press the **Directory** soft key.


The IP phone enters the local directory directly as there is only Local Directory in the directory by default.



If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Select the desired group (e.g., Test).
3. Press the **Option** soft key, and then select **Delete** from the prompt list.

The LCD screen prompts "Delete selected Group?".

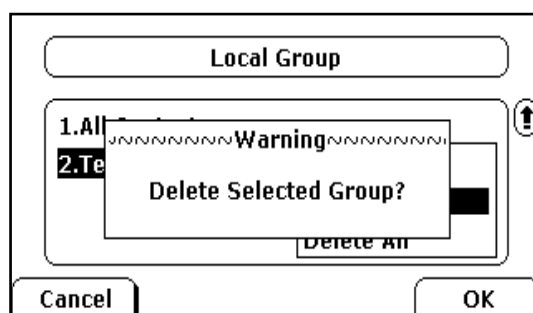

4. Press the **OK** soft key to confirm the deleting or the **Cancel** soft key to cancel.

### Note

You can also delete all groups by pressing the **Option** soft key and then select **Delete All**. For more information, refer to the above steps.

## Adding Contacts

You can add contacts to your local directory in the following ways:


- Manually
- From call history
- From remote phone book

## Adding Contacts Manually

To add a contact to the local directory manually:

1. Press the **Directory** soft key.

The IP phone enters the local directory directly as there is only Local Directory in the directory by default.

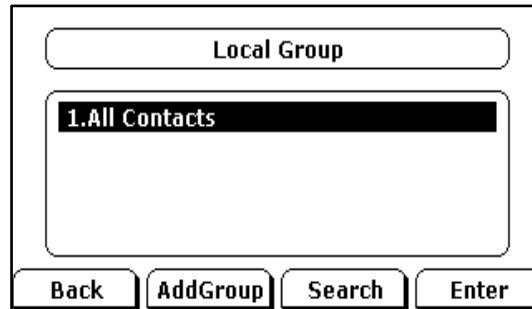


If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press the **Enter** soft key.

If the groups have been added to the local directory, select the desired group and then press the **Enter** soft key.

3. Press the **Add** soft key.

4. Enter the name and the office, mobile or other numbers in the corresponding fields.

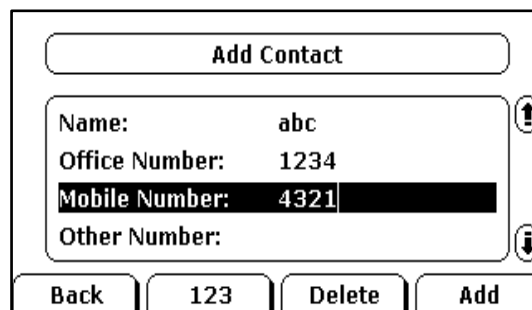

5. Press  $\leftarrow$  or  $\rightarrow$ , or the **Switch** soft key to select the desired account from the **Account** field.

If **Auto** is selected, the phone will use the first available account when placing calls to the contact from the local directory.

6. Press  $\leftarrow$  or  $\rightarrow$ , or the **Switch** soft key to select the desired ring tone from the **Ring Tones** field.

7. Press the **Add** soft key to accept the change or the **Back** soft key to cancel.


### Note

If the contact has existed in the directory, the LCD screen will prompt "ContactName existed!".

## Adding Contacts from Call History

To add a contact to the local directory from the call history:

1. Press the **History** soft key.
2. Press  $\uparrow$  or  $\downarrow$  to highlight the desired entry.
3. Press the **Option** soft key, and then select **Add to Contacts** from the prompt list.

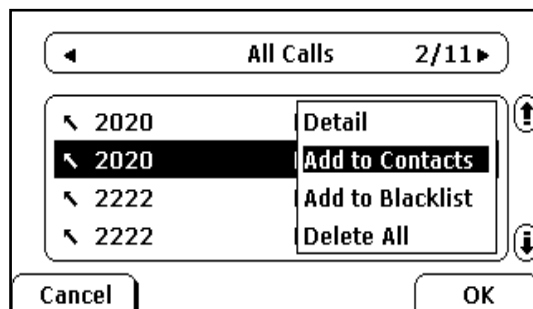

4. Enter the contact name.
  5. Press the **Save** soft key to accept the change.
- The entry is successfully saved to the local directory.

## Adding Contacts from Remote Phone Book

To add a contact to the local directory from the remote phone book:

1. Press **Menu->Directory->Remote Phone Book**.  
If Remote Phone Book is added to the directory, press **Directory->Remote Phone Book** to enter the remote phone book.
2. Press  $\uparrow$  or  $\downarrow$  to highlight the desired contact.
3. Press the **Option** soft key, and then select **Add to Contacts** from the prompt list.
4. Press the **Save** soft key to save the contact to the local directory.  
If the contact has already existed in the local directory, the LCD screen will prompt "Overwrite the original contact?". Press the **OK** soft key to overwrite the original contact in the local directory or the **Cancel** soft key to cancel.

For more information on remote phone book operating, refer to [Remote Phone Book](#) on page 44.

## Editing Contacts

To edit a contact in the local directory:

1. Press the **Directory** soft key.

The IP phone enters the local directory directly as there is only Local Directory in the directory by default.




If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press the **Enter** soft key.

If the groups have been added to the local directory, select the desired group and then press the **Enter** soft key.

3. Press or to highlight the desired contact.
4. Press the **Option** soft key, and then select **Detail** from the prompt list.

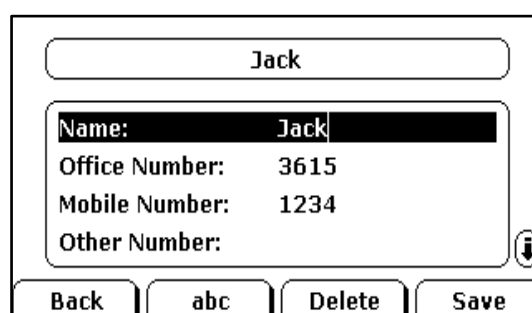

5. Press or to highlight the contact information and then edit.
6. Press the **Save** soft key to accept change or the **Back** soft key to cancel.


## Deleting Contacts

To delete a contact from the local directory:

1. Press the **Directory** soft key.



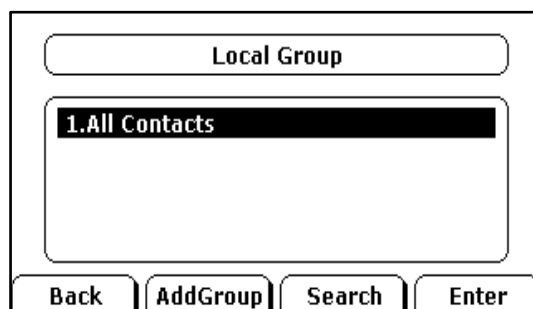

The IP phone enters the local directory directly as there is only Local Directory in the directory by default.




If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press the **Enter** soft key.

If the groups have been added to the local directory, select the desired group and then press the **Enter** soft key.

3. Press  or  to highlight the desired contact.
4. Press the **Option** soft key, and then select **Delete** from the prompt list.

The LCD screen prompts "Delete Selected Item?".

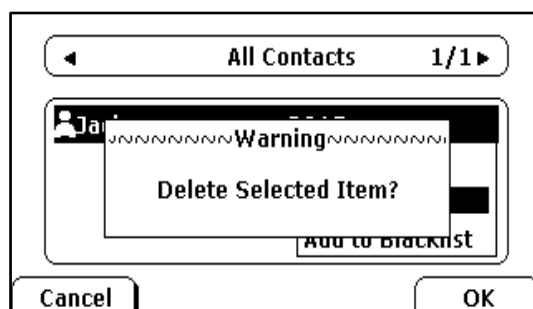

5. Press the **OK** soft key to confirm the deleting or the **Cancel** soft key to cancel.

## Placing Calls to Contacts

To place a call to a contact from the local directory:

1. Press the **Directory** soft key.

The IP phone enters the local directory directly as there is only Local Directory in the directory by default.



If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press the **Enter** soft key.

If the groups have been added to the local directory, select the desired group and then press the **Enter** soft key.

3. Press  or  to highlight the desired contact.

4. Do one of the following:

- If only one number of the contact is stored in the local directory, press the **Dial** soft key to dial out the number.
- If multiple numbers of the contact are stored in the local directory, press the **Dial** soft key to display a list of numbers.

Press  or  to highlight the desired number.

Press the **Dial** soft key to dial out the number.

## Searching for Contacts



**To search for a contact in the local directory:**


1. Press the **Directory** soft key.

The IP phone enters the local directory directly as there is only Local Directory in the directory by default.



If Local Directory is removed from the directory, press **Menu->Directory->Local Directory** to enter the local directory.

2. Press  or  to highlight the **All Contacts** field.
3. Press the **Search** soft key.
4. Enter a few continuous characters of the contact name or the contact phone number using the keypad.

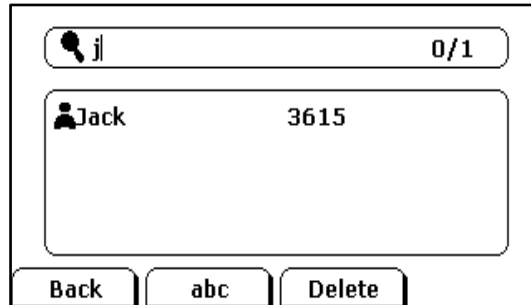


 


The contacts whose name or phone number matches the characters entered will appear on the LCD screen. You can dial from the result list.


## Search Source List in Dialing

You can search for a contact in your desired list when the phone is in the dialing interface. The lists may contain Local Directory, History, Remote Phone Book and LDAP.

**To configure search source list in dialing via web user interface:**

1. Click on **Directory->Setting**.
2. In the **Search Source List In Dialing** block, select the desired list from the **Disabled** column and then click  .  
The selected list appears in the **Enabled** column.
3. Repeat the step 2 to add more lists to the **Enabled** column.
4. To remove a list from the **Enabled** column, select the desired list and then click  .
5. To adjust the display order of search results, select the desired list and then click  or  .

The phone LCD screen displays the search results in the adjusted order.

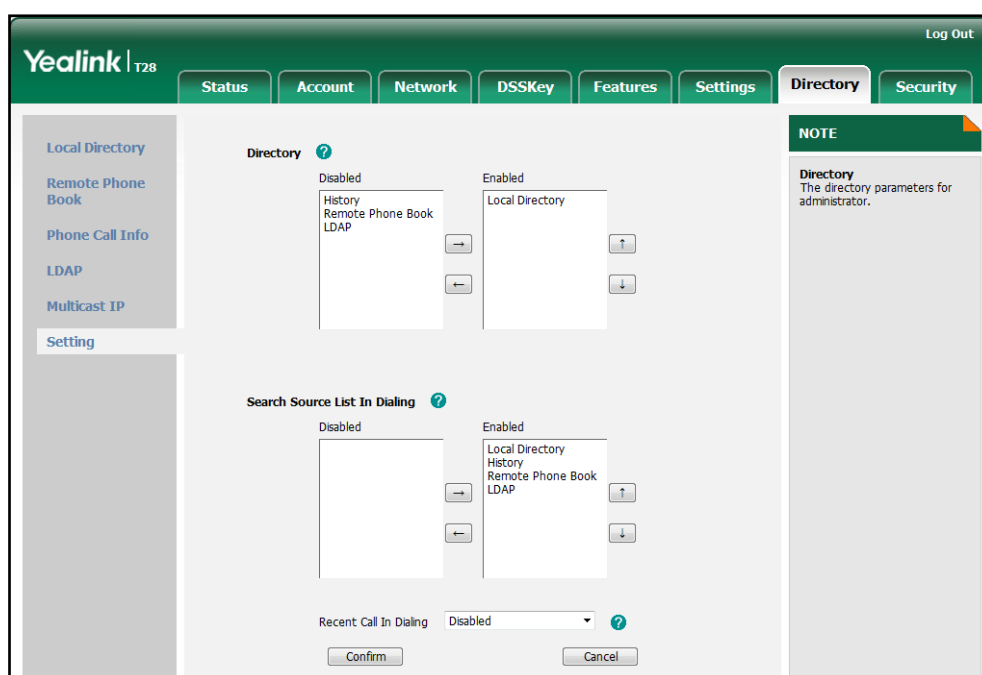



- Click **Confirm** to accept the change.


#### Note

You can configure search source list in dialing via web user interface only.

#### To search for a contact in the enabled search source lists:

- Pick up the handset, press the speakerphone or press the line key.
- Enter a few continuous characters of the contact name or the contact phone number using the keypad.

The contacts in the enabled search source lists whose name or phone number matches the characters entered will appear on the LCD screen. You can press  or  to scroll to the desired contact and then place a call to the contact.

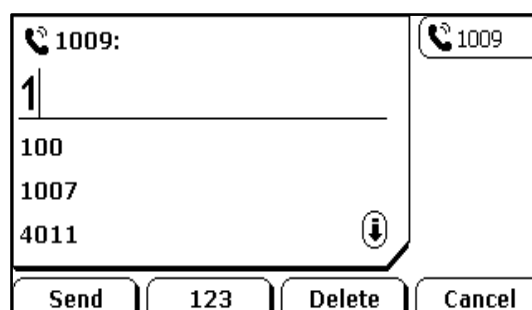

## Importing/Exporting Contact Lists

You can manage your phone's local directory via phone or web user interface. But you can only import or export the contact list via web user interface.

**To import an XML file of contact list via web user interface:**


1. Click on **Directory->Local Directory**.
2. Click **Browse** to locate a contact list file (file format must be \*.xml) from your local system.

3. Click **Import XML** to import the contact list.  
The web user interface prompts "The original contact will be covered, Continue?".
4. Click **OK** to complete importing the contact list.

**To import a CSV file of contact list via web user interface:**

1. Click on **Directory->Local Directory**.
2. Click **Browse** to locate a contact list file (file format must be \*.csv) from your local system.
3. (Optional.) Check the **Show Title** checkbox.  
It will prevent importing the title of the contact information which is located in the first line of the CSV file.
4. Click **Import CSV** to import the contact list.
5. (Optional.) Mark the **On** radio box in the **Delete Old Contacts** field.  
It will delete all existing contacts while importing the contact list.

- (Optional.) Select the contact information you want to import into the local directory from the pull down list of **Index**.

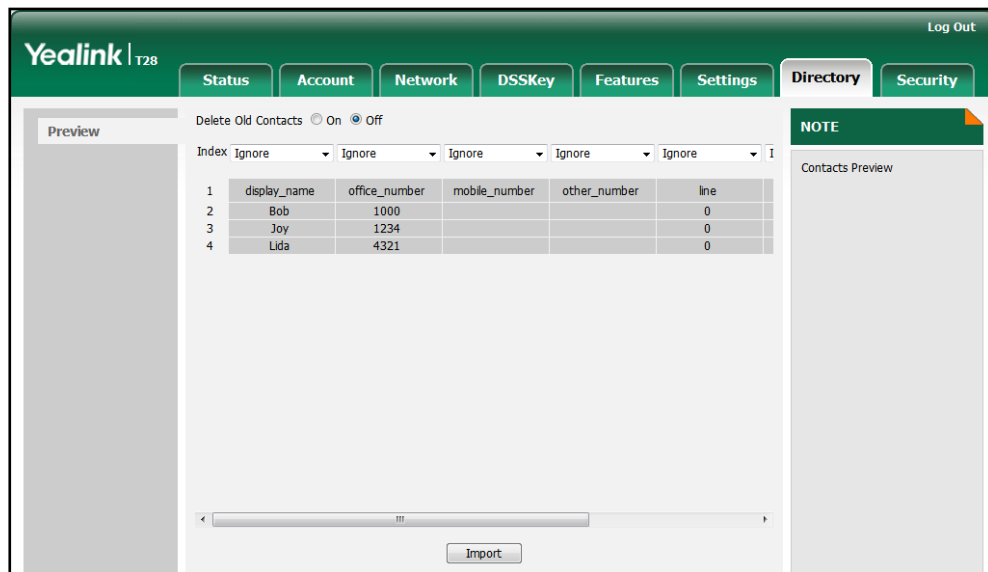

- Click **Import** to complete importing the contact list.

To export a contact list via web user interface:

- Click on **Directory**->**Local Directory**.
- Click **Export XML** (or **Export CSV**).
- Click **Save** to save the contact list to your local system.

**Note** You can import/export contact lists via web user interface only.

## Blacklist

The built-in phone directory stores the names and phone numbers of the blacklist. You can store up to 30 contacts in your phone's blacklist directory. You can add, edit, delete or search for a contact in the blacklist directory. You can also dial a contact in the blacklist directory, but an incoming call from the blacklist directory will be rejected automatically.

Operating instructions of adding blacklists, editing blacklists, deleting blacklists, placing call to blacklists and searching for a contact in the blacklist, refer to the operating instructions of [Local Directory](#) on page 33.

## Remote Phone Book

You can access your corporate directory through your phone. You can add local contacts from the corporate directory. You can search for a contact in the corporate directory. You can also dial a contact from the corporate directory.

You can configure your new phone to access up to 5 corporate directories. The phone user interface can display at most 1000 entries of remote phonebooks. Contact your system administrator for the access URL of the corporate directory.

**To configure an access URL for remote phone book via web user interface:**

1. Click on **Directory->Remote Phone Book**.
2. Enter the access URL in the **Remote URL** field.
3. Enter the name in the **Display Name** field.

Index	Remote URL	Display Name
1	http://10.3.6.172:8080/phone/RemotePhonebook.xml	Xmyl
2		
3		
4		
5		

Sremote Name: Disabled  
Sremote Name Flash Time(Seconds): 3600

Confirm Cancel

**NOTE**  
**Remote Phone Book**  
This feature allows you to download contact list from the server. Input the phonebook URL and rename the phone book.

4. Click **Confirm** to accept the change.

#### Note

You can configure an access URL for remote phone book via web user interface only.

**To access your corporate directory via phone user interface:**

1. Press **Menu->Directory->Remote Phone Book**.

If Remote Phone Book is added to the directory, press **Directory->Remote Phone Book** to enter the remote phone book.

2. Select the desired remote group, and then press the **Enter** soft key.

The phone connects to load the corporate directory, and then displays the corporate contact list on the LCD screen.

**Remote Group**


1.Sales Dep  
2.Financial Dep  
3.Product Dep  
4.Market Dep

Back Update Search Enter

3. Press the **Back** soft key to back to the previous interface.

**To search for a contact in the corporate directory:**

1. Press **Menu->Directory->Remote Phone Book**.  
If Remote Phone Book is added to the directory, press **Directory->Remote Phone Book** to enter the remote phone book.
2. Select the desired remote group, and then press the **Enter** soft key to load the corporate directory.
3. Press the **Search** soft key.
4. Enter a few continuous characters of the contact name or continuous numbers of the contact phone number using the keypad.

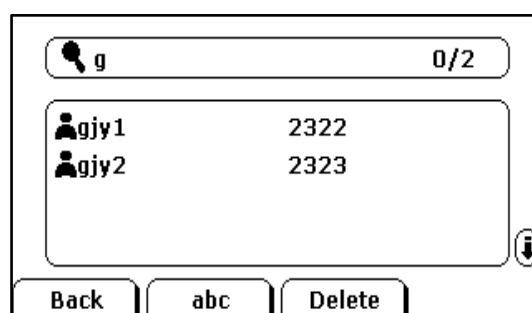

The contacts whose name or phone number matches the characters entered will appear on the LCD screen. You can dial from the result list.

**To place a call from the corporate directory:**

1. Press **Menu->Directory->Remote Phone Book**.  
If Remote Phone Book is added to the directory, press **Directory->Remote Phone Book** to enter the remote phone book.
2. Select the desired remote group, and then press the **Enter** soft key to load the corporate directory.
3. Select the desired contact in the corporate directory.
4. Press the **Dial** soft key.

In addition, you can enable the phone to present the caller identity stored in the corporate directory when receiving a call.

**To enable the presentation of caller identity stored in the remote phone book:**

1. Click on **Directory->Remote Phone Book**.
2. Select **Enabled** from the pull-down list of **Sremote Name**.
3. Enter the refresh period of corporate directory in the **Sremote Name Flash Time (Seconds)** field.



The default value is 3600 seconds.

- Click **Confirm** to accept the change.

## Call History Management

The SIP-T28P IP phone maintains call history lists of Placed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history lists support to store 100 entries in all. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

To enable the history record feature via phone user interface:

- Press **Menu->Features->History Setting**.
- Press **◀** or **▶**, or the **Switch** soft key to select **Enable** from the **History Record** field.

- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.





To check the call history:

- Press the **History** soft key.  
The LCD screen displays **All Calls** list.
- Press **◀** or **▶** to switch between **All Calls**, **Placed Calls**, **Received Calls**, **Missed Calls** and **Forwarded Calls**.
- Press **▲** or **▼** to select the desired entry.





4. Press the **Option** soft key, and then select **Detail** from the prompt list.

The detailed information of the entry appears on the LCD screen.

**To dial a call from the call history list:**





1. Press the **History** soft key.
2. Press  or  to switch between **All Calls**, **Placed Calls**, **Received Calls**, **Missed Calls** and **Forwarded Calls**.
3. Press  or  to select the desired entry.
4. Press the **Send** soft key.

**To add a contact to the local directory or blacklist from the call history list:**



1. Press the **History** soft key.
2. Press  or  to switch between **All Calls**, **Placed Calls**, **Received Calls**, **Missed Calls** and **Forwarded Calls**.
3. Press  or  to select the desired entry.
4. Press the **Option** soft key, and then select **Add to Contacts** (or **Add to Blacklist**) from the prompt list.
5. Enter the desired values in the corresponding fields, and then press the **Save** soft key.

For more information, refer to [Contact Management](#) on page 31.

**To delete an entry from the call history list:**

1. Press the **History** soft key.
2. Press  or  to switch between **All Calls**, **Placed Calls**, **Received Calls**, **Missed Calls** and **Forwarded Calls**.
3. Press  or  to select the desired entry.
4. Press the **Delete** soft key.

**To delete all entries from the call history list:**

1. Press the **History** soft key.
2. Press  or  to switch between **All Calls**, **Placed Calls**, **Received Calls**, **Missed Calls** and **Forwarded Calls**.
3. Press the **Option** soft key, and then select **Delete All** from the prompt list.
4. Press the **OK** soft key.  
The LCD screen prompts "Delete all records?".
5. Press the **OK** soft key to confirm the deleting or the **Cancel** soft key to cancel.

## System Customizations

### Logo Customization

You can upload your custom logo which will be shown on the idle screen.

To upload a custom logo via web user interface:

1. Click on **Features->General Information**.
2. Select **Custom Logo** from the pull-down list of **Use Logo**.

The screenshot shows the Yealink T28 web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security'. The left sidebar lists various settings categories: Forward&DND, General Information, Audio, Intercom, Transfer, Call Pickup, Remote Control, Phone Lock, ACD, SMS, and Action URL. The main content area is titled 'General Information' and contains several settings: Call Waiting (Enabled), Call Waiting On Code, Call Waiting Off Code, Auto Redial (Disabled), Auto Redial Interval (1~300s) (10), Use Logo (Custom logo), Upload Logo (with a 'Browse...' button), Allow IP Call (Enable), IP Direct Auto Answer (Disabled), Call List Show Number (Disabled), Voice Mail Tone (Enable), DHCP Hostname (SIP-T28P), and Reboot In Talking (Disabled). A 'NOTE' section on the right provides details about Call Waiting, Key As Send, and Hotline Number. At the bottom, there are 'Confirm' and 'Cancel' buttons.

3. Click **Browse** to locate the logo file from your local system.
4. Click **Upload** to upload the file.
5. Click **Confirm** to accept the change.

#### Note

The logo file format must be \*.dcb, contact your system administrator for more information.


You can upload a custom logo via web user interface only.

### Headset Use


Physically connect your headset and activate the headset mode for use. For more information on physically connecting a headset, refer to [Phone Installation](#) on page 11

## Headset Mode Activation/Deactivation

To activate the headset mode:

1. Press  on the phone.  
The **HEADSET** key LED illuminates solid green when the headset mode is activated. Press the line key or the **Answer** soft key to answer a call, the call will connect to your headset automatically. Enter the desired number and then press the **Send** soft key, the phone will use the headset to place a call automatically. For more information on using the headset to place a call, refer to [Placing Calls](#) on page 73.

To deactivate the headset mode:


1. Press  again on the phone.  
The **HEADSET** key LED turns off when the headset mode is deactivated.

## Headset Prior

You can use headset in priority when enabling the headset prior feature. This feature is especially useful for permanent or full-time headset users.

To enable headset prior via web user interface:

1. Click on **Features->General Information**.
2. Select **Enabled** from the pull-down list of **Headset Prior**.

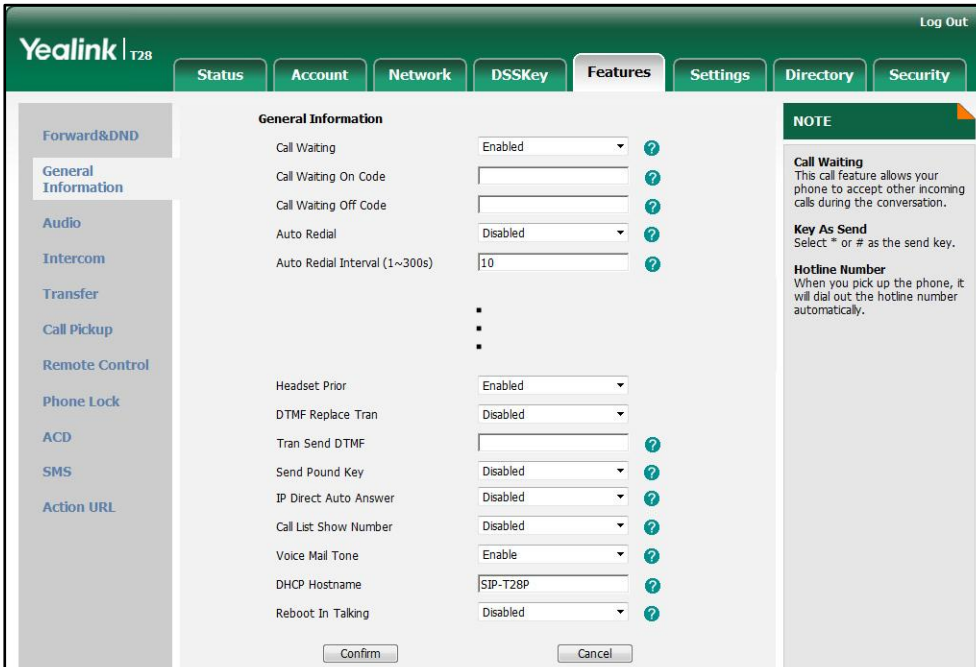

The screenshot shows the Yealink T28 web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security'. The 'Features' tab is selected, and the 'General Information' sub-tab is active. On the left sidebar, 'General Information' is highlighted. The main content area lists various settings:

- Call Waiting: Enabled
- Call Waiting On Code: [Empty field]
- Call Waiting Off Code: [Empty field]
- Auto Redial: Disabled
- Auto Redial Interval (1~300s): 10
- Headset Prior: Enabled
- DTMF Replace Tran: Disabled
- Tran Send DTMF: [Empty field]
- Send Pound Key: Disabled
- IP Direct Auto Answer: Disabled
- Call List Show Number: Disabled
- Voice Mail Tone: Enable
- DHCP Hostname: SIP-T28P
- Reboot In Talking: Disabled

At the bottom of the settings area are 'Confirm' and 'Cancel' buttons. On the right, a 'NOTE' section contains the following information:

- Call Waiting**: This call feature allows your phone to accept other incoming calls during the conversation.
- Key As Send**: Select \* or # as the send key.
- Hotline Number**: When you pick up the phone, it will dial out the hotline number automatically.

3. Click **Confirm** to accept the change.

To use headset prior, you should activate the headset mode in advance:

1. Physically connect the headset.

- Press  to activate the headset mode.

**Note**

If the headset prior feature is enabled, the headset mode will not be deactivated until you press the **HEADSET** key again.


You can configure headset prior via web user interface only.

## Dual Headset

You can use two headsets when enabling the dual headset feature. To use this feature, you must physically connect headsets to the headset jack and handset jack respectively. Once the phone joins in a call, people with the headset connected to the headset jack has a full-duplex conversation, another people with the headset connected to the handset jack is only allowed to listen to.

To enable dual headset via web user interface:

- Click on **Features->General Information**.
- Select **Enabled** from the pull-down list of **Dual-Headset**.

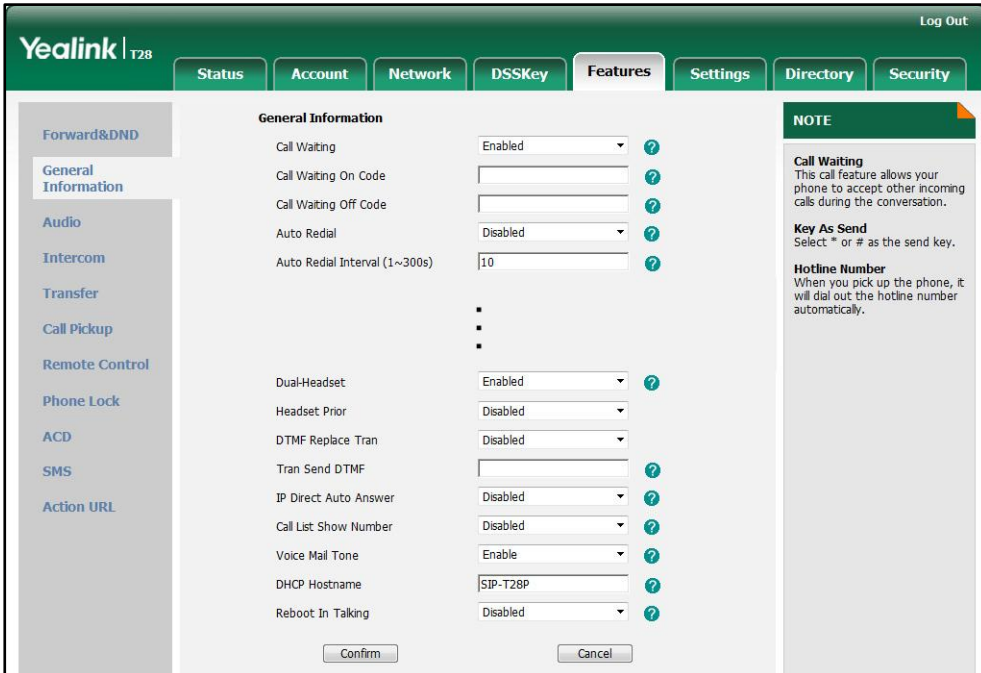

The screenshot shows the Yealink T28 web interface. The 'Features' tab is selected, and the 'General Information' sub-tab is active. The 'Dual-Headset' setting is set to 'Enabled'. Other settings include Call Waiting (Enabled), Call Waiting On Code, Call Waiting Off Code, Auto Redial (Disabled), Auto Redial Interval (10), and various other call features. A 'NOTE' section on the right provides additional information about Call Waiting, Key As Send, and Hotline Number.

- Click **Confirm** to accept the change.

**Note**

You can configure dual headset via web user interface only.

## DSS Keys

There are three types of DSS keys: Memory Keys, Line Keys and Programmable Keys. The details will be introduced in the following. The use of line keys and memory keys are

almost the same. The SIP-T28P IP phone supports 10 memory keys and 6 line keys.

## Memory Keys

You can assign predefined functionalities to the memory keys located on the right of the phone. Memory keys allow you to have quick access to features such as call return and voice mail. The memory key LEDs will indicate the monitoring status when the keys are assigned specific features, such as BLF. The default key type of each memory key is N/A, which indicates that this memory key provides no functionality.

**To configure the memory key via phone user interface:**

1. Press **Menu->Features->DSS Keys->Memory Keys**.
2. Select the desired memory key, and then press the **Enter** soft key.
3. Select the desired key type from the **Type** field.
4. (Optional.) Select the desired key event type from the **Key Type** field.
5. (Optional.) Select the desired line from the **Account ID** field.
6. (Optional.) Enter the corresponding value in the **Value** field.
7. (Optional.) Enter the corresponding value in the **Extension** field.
8. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the memory key via web user interface at the path **DSSKey->Memory Key**.

### Note

When the phone is idle, you can also long press the memory key to configure it directly on the phone.

The memory key features are explained in the following subchapters in detail:

- Line
- Speed Dial
- Voice Mail
- Directed Pickup
- Group Pickup
- DTMF
- Prefix
- Local Group
- XML Group
- XML Brower
- LDAP
- Conference

- Forward
- Transfer
- Hold
- DND
- SMS
- Group Listening
- Zero Touch
- URL
- Keypad Lock
- Directory

For more information, contact your system administrator.

### Line

You can use this key feature to accept the incoming calls, place active calls on hold or resume a held call. It performs the same as a hard line key.

**Dependencies:** *Type (Line)*

*Account ID (the account this feature will be applied to)*

**Usage:** When receiving an incoming call, the DSS key LED flashes green:

1. Press the DSS key to accept the incoming call.
2. Press the DSS key to place the active call on hold.
3. Press the DSS key again to resume the held call.

### Speed Dial

You can use this key feature to speed up dialing the numbers often used or hard to remember.

**Dependencies:** *Type (Speed Dial)*

*Account ID (the account this feature will be applied to)*

*Value (the number you want to dial out)*

**Usage:** Press the DSS key to dial out the number specified in the **Value** field, using the account selected from the **Account ID** field.

### Voice Mail

You can use this key feature to connect voice mail quickly. For more information, refer to [Voice Mail](#) on page 126.

**Dependencies:** *Type (Key Event)*

*Key Type (Voice Mail)*

*Account ID (the account this feature will be applied to)*

*Value (the voice mail access code)*

**Usage:** Press the DSS key to dial out the voice mail access code, you can follow the voice prompt to listen to the voice mails.

### **Directed Pickup**

You can use this key feature to answer someone else's incoming call on the phone.

**Dependencies:** *Type (Key Event)*

*Key Type (Direct Pickup)*

*Account ID (the account this feature will be applied to)*

*Value (the directed pickup code followed by the specific phone number)*

**Usage:** Press the DSS key on your phone when the specific phone number receives an incoming call. The call is answered on your phone.

### **Group Pickup**

You can use this key feature to answer incoming calls in a group that is associated with their own group.

**Dependencies:** *Type (Key Event)*

*Key Type (Group Pickup)*

*Account ID (the account this feature will be applied to)*

*Value (the group pickup feature code)*

**Usage:** Press the DSS key on your phone when a phone number in the group receives an incoming call. The call is answered on your phone.

### **DTMF**

You can use this key feature to send the specification of arbitrary key sequences via DTMF.

**Dependencies:** *Type (Key Event)*

*Key Type (DTMF)*

*Value (DTMF sequence)*

### **Note**

DTMF sequence only contains "0-9", "\*", "#" and "A-D".

**Usage:** Press the DSS key during an active call to send the key sequence specified in the **Value** field.

### **Prefix**

You can use this key feature to add a specified prefix number before the dialed number.

**Dependencies:** *Type (Key Event)*

*Key Type (Prefix)*

*Value (the prefix number)*



**Usage:** Press the DSS key when the phone is idle, the phone enters into the dialing interface and displays the prefix number which you specified in the **Value** field, enter other digits and then dial out.

### Local Group

You can use this key feature to access the group in the local directory quickly. For more information, refer to [Local Directory](#) on page 33.

**Dependencies:** *Type (Key Event)*

*Key Type (Local Group)*

*Local Group (the group you want to access)*

**Usage:** Press the DSS key to access the group specified in the **Local Group** field.

### XML Group

You can use this key feature to access the remote group in your corporate directory quickly. You should configure the remote phone book in advance. For more information, refer to [Remote Phone Book](#) on page 44.

**Dependencies:** *Type (Key Event)*

*Key Type (XML Group)*

*PhoneBook Name (the remote group you want to access if the remote phone book is configured)*

**Usage:** Press the DSS key to access the remote group specified in the **PhoneBook Name** field.

### XML Browser

You can use this key feature to access the XML browser quickly. The XML browser allows you to create custom services which meet your functional requirements on the server. You can customize practical applications, such as weather report, stock information, Google search, etc.

**Dependencies:** *Type (XML Browser)*

*Value (the access URL for xml browser)*

**Usage:** Press the DSS key to access the XML browser specified in the **Value** field.

### LDAP

You can use this key feature to access the LDAP search interface quickly.

**Dependencies:** *Type (Key Event)*

*Key Type (LDAP)*

**Usage:**

1. Press the DSS key to access the LDAP search interface.
2. Enter a few continuous characters of the contact name or continuous numbers of the contact phone number using the keypad.

The contacts whose name or phone number matches the characters entered will appear on the LCD screen.

### Conference

You can use this key feature to set up a conference call. For more information, refer to [Conference](#) on page 95.

**Dependencies:** *Type (Key Event)*

*Key Type (CONF)*

*Value (the number you want to add to the conference)*

**Usage:** Press the DSS key during an active call to set up a conference with the number specified in the **Value** field.

#### Note

When leaving the **Value** field blank, the DSS key performs the same function as the **CONF** key or the **Conf** soft key during a call.

### Forward

You can use this key feature to forward an incoming call to someone else. For more information, refer to [Call Forward](#) on page 87.

**Dependencies:** *Type (Key Event)*

*Key Type (Forward)*

*Value (the number you want to forward to)*

**Usage:** Press the DSS key to forward an incoming call to the number specified in the **Value** field.

#### Note

When leaving the **Value** field blank, the DSS key performs the same function as the **Forward** soft key when receiving an incoming call.

### Transfer

You can use this key feature to handle the call differently depending on the transfer mode on DSS key when there is an active call on the phone.

**Dependencies:** *Type (Key Event)*

*Key Type (Transfer)*

*Value (the number you want to transfer to)*

**Usage:**

- When the transfer mode on DSS key is **Blind Transfer**, press the DSS key to complete the blind transfer to the number specified in the **Value** field.
- When the transfer mode on DSS key is **Attended Transfer**, press the DSS key to dial out the number specified in the **Value** field, and then you can perform the attended or semi-attended transfer.

- When the transfer mode on DSS key is **New Call**, press the DSS key to place a new call to the number specified in the **Value** field.

**Note**

You can configure the transfer mode on DSS key via web user interface at the path **Features->Transfer**. For more information on how to configure the transfer mode on DSS key, refer to [Busy Lamp Field \(BLF\)](#) on page 107.

When leaving the **Value** field blank, the DSS key performs the same function as the **TRAN** key or the **Transfer** soft key during a call. For more information, refer to [Call Transfer](#) on page 93.

**Hold**

You can use this key feature to place an active call on hold or retrieve a held call.

**Dependencies:** *Type (Key Event)*

*Key Type (Hold)*

**Usage:**

1. Press the DSS key during an active call to place the call on hold.
2. Press the DSS key again to retrieve the held call.

**DND**

You can use this key feature to activate or deactivate the DND feature. You can also use this key feature to access the custom DND interface. For more information, refer to [Do Not Disturb \(DND\)](#) on page 84.

**Dependencies:** *Type (Key Event)*

*Key Type (DND)*

**Usage:**

When the phone is in phone mode:

1. Press the DSS key to activate the DND feature.
2. Press the DSS key again to deactivate the DND feature.

When the phone is in custom mode:

1. Press the DSS key to access the custom DND interface.
2. Activate or deactivate the DND feature for an account or all accounts.

**Note**

When the DND feature is activated, the incoming calls will be rejected automatically.

**SMS**

You can use this key feature to access the text message feature quickly. For more information, refer to [Short Message Service \(SMS\)](#) on page 123.

**Dependencies:** *Type (Key Event)*

*Key Type (SMS)*

**Usage:** Press the DSS key when the phone is idle to access the text message feature.

### Group Listening

You can use this key feature to activate the Speakerphone and Handset/Headset mode at the same time. It is suitable for the group conversation which has more than one person at one side. You are able to speak and listen through the handset/headset, meanwhile the others nearby can only listen through the speaker.

**Dependencies:** *Type (Key Event)*

*Key Type (Group Listening)*

**Usage:**

1. During a call, press the DSS key to activate the group listening mode.  
You can then speak and listen through the handset/headset, other people at your side can listen through speaker at the same time.
2. Press the DSS key again to deactivate the group listening mode.

### Zero Touch

You can use this key feature to configure auto provision and network parameters quickly.

**Dependencies:** *Type (Key Event)*

*Key Type (Zero Touch)*

**Usage:**

1. Press the DSS key to access the zero touch screen.
2. Press the **OK** soft key within a few seconds.
3. Configure the network parameters in the corresponding fields.
4. Press the **Next** soft key.
5. Configure the auto provision parameters in the corresponding fields.
6. Press the **OK** soft key.

The phone will reboot to update configurations.

### URL


You can use this key feature to trigger the phone to send a HTTP GET request contained a specific URL.

**Dependencies:** *Type (URL)*


*Value (the URL contained in the HTTP GET request)*

**Usage:** Press the DSS key to trigger the phone to send a HTTP GET request contained the URL specified in the **Value** field.

### Keypad Lock

You can use this key feature to immediately lock the keypad of your phone instead of long pressing . For more information, refer to [Keypad Lock](#) on page 25.

**Dependencies:** *Type (Keypad Lock)*

**Usage:** Press the DSS key to immediately lock the keypad of your phone instead of long pressing .

## Directory

You can use this key feature to easy access to the lists you use frequently. For more information, refer to [Directory](#) on page 32.

**Dependencies:** *Type (Directory)*

**Usage:** Press the DSS key to immediately access to the lists you use frequently.

### Note

The DSS key performs the same function as the **Directory** soft key when the phone is idle.

## Line Keys

You can assign predefined functionalities to the line keys as memory keys. You can also define a label for the line key feature which will appear on the LCD screen. The default key type of each line key is Line.

**To configure the line key via phone user interface:**

1. Press **Menu->Features->DSS Keys->Line Keys**.
2. Select the desired line key, and then press the **Enter** soft key.
3. Select the desired key type from **Type** field.
4. (Optional.) Select the desired key event type from the **Key Type** field.
5. (Optional.) Select the desired line from the **Account ID** field.
6. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
7. (Optional.) Enter the corresponding value in the **Value** field.
8. (Optional.) Enter the corresponding value in the **Extension** field.
9. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the line key via web user interface at the path **DSSKey->Line Key**.

For more information on using the line keys, refer to [Memory Keys](#) introduced above on page 52.

## Programmable Keys

You can customize the soft keys, navigation keys and function keys on the keypad.

**To customize the programmable keys via web user interface:**

1. Click on **DSSKey->Programmable Key**.

2. Customize specific features for these keys.

Key	Type	Line	Value	Label	Extension
SoftKey 1	History	Local Call Log			
SoftKey 2	Directory	N/A			
SoftKey 3	DND	N/A			
SoftKey 4	Menu	N/A			
Up	History	Local Call Log			
Down	Directory	N/A			
Left	Switch Account	N/A			
Right	Switch Account	N/A			
OK	Status	N/A			
Cancel	N/A	N/A			
CONF	N/A	N/A			
HOLD	N/A	N/A			
MUTE	N/A	N/A			
TRAN	Forward	N/A			

**NOTE**

**Key Type**  
The free function key 'Types' Speed Dial, Key Event, Intercom.

**Key Event**  
Key events are predefined shortcuts to phone and call functions.

**Intercom**  
Enable the 'Intercom' mode and it is useful in an office environment as a quick access to connect to the operator or the secretary.

3. Click **Confirm** to accept the change.

#### Note

You can configure the programmable keys via web user interface only.

## Account Management

You can register one or multiple accounts on the SIP-T28P IP phone. You can also configure each line key associated with an account or configure multiple line keys associated with an account.

### Account Registration

To register an account via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Accounts**.
2. Select the desired account and then press the **Enter** soft key.
3. Select **Enable** from the **Activation** field.

- Enter the desired values in the **Label**, **Display Name**, **Register Name**, **User Name**, **Password** and **SIP Server1** fields respectively. Contact your system administrator for more information.

Line


1. Activation:	Enable	◀▶
2. Label:	2828	
3. Display Name:	2828	
4. Register Name:	2828	

Back Switch Save


- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.
- Repeat steps 2 to 5 until you have registered all accounts.

The following figures show single or multiple accounts registered on the phone:

**Single account:**

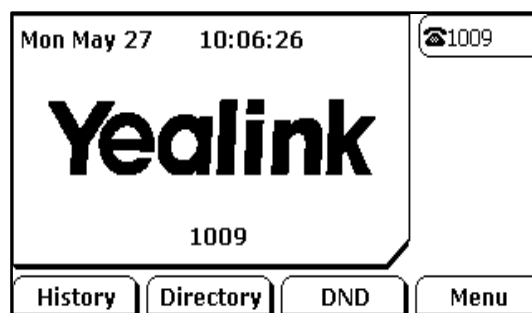

**Multiple accounts:**

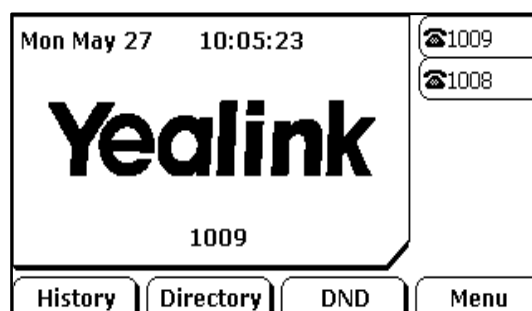


**To disable an account via phone user interface:**

- Press **Menu->Settings->Advanced Settings** (password: admin) ->**Accounts**.
- Select the desired account and then press the **Enter** soft key.
- Select **Disable** from the **Activation** field.
- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also register or disable an account via web user interface at the path **Account->Register**.

## Multiple Line Keys per Account

You can configure multiple line keys associated with an account. This enhances call visualization and simplifies call handling. If this is the case, the LCD screen resembles the following figure:

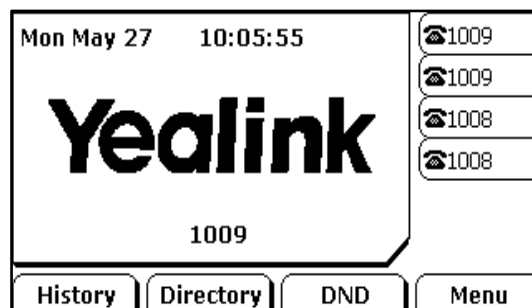

Incoming calls to this line will be distributed evenly among the available line keys. Similarly, outgoing calls will be distributed.

Your phone can be configured to have a combination of lines with a single line key and lines with multiple line keys.

## Dial Plan

Dial plan is a string of characters that governs the way your SIP-T28P IP phone processes the inputs received from your phone keypad. The SIP-T28P IP phone supports the following dial plan features:

- [Replace Rule](#)
- [Dial-now](#)
- [Area Code](#)
- [Block Out](#)

The basic expression syntax you need to know:

.	The dot "." can be used as a placeholder or multiple placeholders for any character. Example: "12." would match "123", "1234", "12345", "12abc", etc.
x	An "x" can be used as a placeholder for any character. Example: "12x" would match "121", "122", "123", "12a", etc.
[]	The square brackets "[]" can be used as a placeholder for a single character which matches any of a set of characters. Example: "91[5-7]1234" would match "9151234", "9161234", "9171234".
()	The parentheses "( )" can be used to group together patterns, for instance, to logically combine two or more patterns. Example: "91([5-7])1(x)" would match "91511", "91618", "91715", etc.
\$	The "\$" should be followed by the sequence number of a parenthesis. The



“\$” plus the sequence number means the whole character or characters placed in the parenthesis. The number directs to the right parenthesis when there are more than one. Example:  
 A replace rule configuration: Prefix: "9([5-7]) (.)", Replace: "5\$2". When you enter "96123" to dial out on your phone, the number will be replaced as "5123" and then dialed out. “\$2” means the characters in the second parenthesis, that is, “123”.

## Replace Rule

You can configure one or more replace rules to remove the specified string and replace it with another string. You can configure a pattern with wildcards (refer to the expression syntax in the table above), so that any string that matches the pattern will be replaced. This feature is convenient for you to dial out a long number. For example, a replace rule is configured as "Prefix: 1" and "Replace: 1234567", when you try to dial out the number “1234567”, you just need to enter “1” on the phone and then press the **Send** soft key.

**To add a replace rule via web user interface:**

1. Click on **Settings->Dial Plan->Replace Rule**.
2. Enter the string (e.g., 1) in the **Prefix** field.
3. Enter the string (e.g., 1234) in the **Replace** field.
4. Enter the desired line ID in the **Account** field or leave it blank.

**Yealink T28** Log Out

Status Account Network DSSKey Features **Settings** Directory Security

Preference  
Time & Date  
Upgrade  
Auto Provision  
Configuration  
**Dial Plan**  
Voice  
Ring  
Tones  
Softkey Layout  
TR069

**Replace Rule** Dial-now Area Code Block Out

Index	Prefix	Replace	Account	
1				<input type="checkbox"/>
2				<input type="checkbox"/>
3				<input type="checkbox"/>
4				<input type="checkbox"/>
5				<input type="checkbox"/>
6				<input type="checkbox"/>
7				<input type="checkbox"/>
8				<input type="checkbox"/>
9				<input type="checkbox"/>
10				<input type="checkbox"/>

Prefix  Replace  Account

**NOTE**

**Digit 0-9 \***  
Identifies a specific digit (do not use # if it is defined as send key).

**[digit-digit]**  
Identifies any digit dialed that is included in the range.

**[digit-digit,digit]**  
Specifies a range as a comma separated list.

**x**  
Matches any single digit/character which is dialed.

**.**  
Matches an arbitrary number of digits.

5. Click **Add** to add the replace rule.

When you enter the number "1" using the keypad and then press the **Send** soft key, the phone will dial out "1234" instead.

#### Note

The valid values of **Account** field can be one or more digits among 1, 2, 3, 4, 5 and 6. Each digit must be separated by a ",". For example, when you enter the value "1, 2" in the **Account** field, this replace rule will apply to account1 and account2.

If you leave the **Account** field blank or enter 0, the replace rule will apply to all accounts.

#### To edit a replace rule via web user interface:

1. Click on **Settings->Dial Plan->Replace Rule**.
2. Select the desired replace rule by checking the check box.
3. Edit the values in the **Prefix** and **Replace** fields.
4. Enter the desired line ID in the **Account** field or leave it blank.
5. Click **Edit** to accept the change.

#### To delete one or more replace rules via web user interface:

1. Click on **Settings->Dial Plan->Replace Rule**.
2. Select the one or more replace rules by checking the check box(es).
3. Click **Del** to delete the replace rule(s).

#### Note

You can configure the replace rule via web user interface only.

## Dial-now

You can configure one or more dial-now rules on your phone. When the dialed out number matches the dial-now string, the number will be dialed out automatically. For example, a dial-now rule is configured as "2xx", then entering any three-digit string begins with 2 will be dialed out automatically on the phone.

#### To add a dial-now rule via web user interface:

1. Click on **Settings->Dial Plan->Dial-now**.
2. Enter the desired value (e.g., 1001) in the **Rule** field.
3. Enter the desired line ID in the **Account** field or leave it blank.

For more information on the valid values of **Account** field, refer to [Replace Rule](#) on page 63.

Index	Dial-now Rule	Account	
1			<input type="checkbox"/>
2			<input type="checkbox"/>
3			<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>
10			<input type="checkbox"/>

Rule:  Account:

**NOTE**

**Digit 0-9 \***  
Identifies a specific digit (do not use # if it is defined as send key).

**[digit-digit]**  
Identifies any digit dialed that is included in the range.

**[digit-digit,digit]**  
Specifies a range as a comma separated list.

**x**  
Matches any single digit/character which is dialed.

**.**  
Matches an arbitrary number of digits.

- Click **Add** to add the dial-now rule.

When you enter the number “1001” using the keypad, the phone will dial out “1001” automatically without pressing any key.

#### Note

You can also edit or delete the dial-now rule, refer to [Replace Rule](#) on page 63 for more information.

You can configure the dial-now rule via web user interface only.

### Delay Time for Dial-now Rule

You can configure the delay time for dial-now rules. That is, you can configure your phone to dial out the phone number automatically, which matches a dial-now rule, after the specified delay time.

To configure the delay time for dial-now rule via web user interface:

- Click on **Features->General Information**.

2. Enter the time within 1-14 (in seconds) in the **Time-Out For Dial-Now Rule** field.

The screenshot shows the Yealink T28 web interface with the 'Features' tab selected. The 'General Information' section is expanded, showing a list of settings. The 'Time-Out For Dial-Now Rule' is currently set to 1. A 'NOTE' sidebar on the right contains the following information:

- Call Waiting**: This call feature allows your phone to accept other incoming calls during the conversation.
- Key As Send**: Select \* or # as the send key.
- Hotline Number**: When you pick up the phone, it will dial out the hotline number automatically.

3. Click **Confirm** to accept the change.

**Note** You can configure the delay time for dial-now rule via web user interface only.

## Area Code

Area codes are also known as Numbering Plan Areas (NPAs). They usually indicate geographical areas in a country. This feature is necessary only when dialing the number outside the code area. For example, area code is configured as "Code: 0592, Min Length: 4, Max Length: 11", then when you dial out the number "56789", which has the digits between 4 to 11, the phone will add the area code and dial out the number "059256789".

**To configure the area code via web user interface:**

1. Click on **Settings->Dial Plan->Area Code**.
2. Enter the desired values in the **Code**, **Min Length (1-15)** and **Max Length (1-15)** fields.
3. Enter the desired line ID in the **Account** field or leave it blank.

For more information on the valid values of **Account** field, refer to [Replace Rule](#) on page 63.

4. Click **Confirm** to accept the change.

#### Note

The default values of minimum and maximum length are 1 and 15 respectively.  
You can configure the area code via web user interface only.

## Block Out

You can block some specific numbers from being dialed on your phone. When you dial a block out number on your phone, the dialing will fail and the LCD screen will prompt "Forbidden Number".

**To add a block out number via web user interface:**

1. Click on **Settings->Dial Plan->Block Out**.
2. Enter the desired value in the **BlockOut Number** field.
3. Enter the desired line ID in the **Account** field or leave it blank.

For more information on the valid values of **Account** field, refer to [Replace Rule](#) on page 63.

**Yealink T28** Log Out

Status Account Network DSSKey Features **Settings** Directory Security

Preference  
Time & Date  
Upgrade  
Auto Provision  
Configuration  
Dial Plan  
Voice  
Ring  
Tones  
Softkey Layout  
TR069

**Replace Rule** **Dial-now** **Area Code** **Block Out**

BlockOut Number1	4321	Account	2
BlockOut Number2		Account	
BlockOut Number3		Account	
BlockOut Number4		Account	
BlockOut Number5		Account	
BlockOut Number6		Account	
BlockOut Number7		Account	
BlockOut Number8		Account	
BlockOut Number9		Account	
BlockOut Number10		Account	

Confirm Cancel

**NOTE**

**Digit 0-9 \***  
Identifies a specific digit (do not use # if it is defined as send key).

**[digit-digit]**  
Identifies any digit dialed that is included in the range.

**[digit-digit,digit]**  
Specifies a range as a comma separated list.

**x**  
Matches any single digit/character which is dialed.

**.**  
Matches an arbitrary number of digits.

- Click **Confirm** to add the block out number.

#### Note

You can configure a block out number via web user interface only.

## Emergency Number

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

#### Note

Contact your local phone service provider for available emergency numbers in your area.

**To specify emergency numbers via web user interface:**

- Click on **Features->Phone Lock**.
- Enter the emergency services number in the **Emergency** field.

For multiple numbers, enter a "," between each emergency number. The default emergency numbers are 112, 911 and 110.

The screenshot shows the Yealink T28 web interface. The 'Features' tab is selected. Under 'Phone Lock', the 'Keypad Lock Type' is set to 'Disabled'. The 'Phone Unlock PIN(0~15 Digit)' is masked with dots. The 'Phone Lock Time Out(0~3600s)' is set to '0'. The 'Emergency' field contains '112,911,110'. There are 'Confirm' and 'Cancel' buttons at the bottom. A 'NOTE' box on the right states: 'Keyboard Lock: The keyboard lock parameters for administrator.'

3. Click **Confirm** to accept the change.

#### Note

You can configure the emergency numbers via web user interface only.


## Live Dialpad

You can enable the live dialpad feature on the SIP-T28P IP phone, which enables the IP phone to automatically dial out the phone number without pressing any other key. You can also configure a period of delay time to dial out the phone number. The phone will dial out the phone number automatically after the specified delay time.

**To enable the live dialpad feature via web user interface:**

1. Click on **Settings->Preference**.
2. Select **Enabled** from the pull-down list of **Live Dialpad**.

- Enter the desired delay time in the **Inter Digit Time (1~14s)** field.

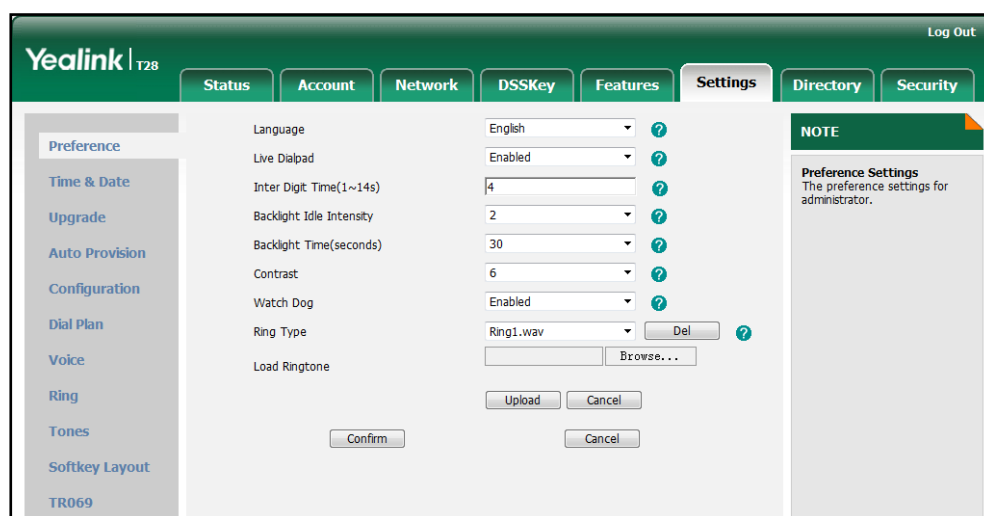

- Click **Confirm** to accept the change.

#### Note

The default delay time of live dialpad feature is 4s.

You can configure live dialpad via web user interface only.


## Hot Line

You can dial a hotline number immediately once you lift the handset, press the **Speakerphone** key or press a line key. You can also configure a period of delay time to dial out the hotline number. The phone will dial out the hotline number automatically after the specified delay time.

**To configure the hot line number via phone user interface:**

- Press **Menu->Features->Hot Line**.
- Enter the desired number in the **Hot Number** field.
- Enter the delay time (in seconds) in the **HotLine Delay** field.

The valid values range from 0 to 10.

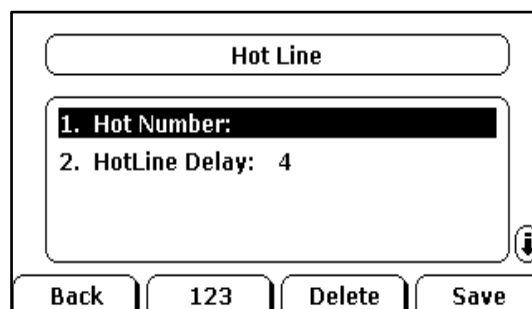

- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.



You can also configure hot line via web user interface at the path **Features->General Information**.



## Basic Call Features

---

The SIP-T28P IP phone is designed to be easily used like a regular phone on a public switched telephone network (PSTN). You can place calls, answer calls, transfer a call to someone else, or conduct a conference call.

This chapter provides basic operating instructions for the SIP-T28P IP phone. The topics include:

- [Placing Calls](#)
- [Answering Calls](#)
- [Ending Calls](#)
- [Redialing Numbers](#)
- [Recent Call In Dialing](#)
- [Auto Answer](#)
- [Auto Redial](#)
- [Call Completion](#)
- [Call Return](#)
- [Call Mute](#)
- [Call Hold/Resume](#)
- [Do Not Disturb \(DND\)](#)
- [Call Forward](#)
- [Call Transfer](#)
- [Call Waiting](#)
- [Conference](#)
- [Call Park](#)
- [Call Pickup](#)
- [Anonymous Call](#)
- [Anonymous Call Rejection](#)

If you require additional information or assistance with your new phone, contact your system administrator.

## Placing Calls

You can place a call in three ways using your SIP-T28P IP phone:

- Using the handset


- Using the speakerphone
- Using the headset

You can also dial the number first, and then choose the way you want to speak to the other party.



You can search the call history, the local contact directory or the remote phone book and dial from the search results. For more information, refer to [Contact Management](#) on page 31 and [Call History Management](#) on page 47.

During a call, you can alternate between Speakerphone, Headset, or Handset modes by pressing the **Speakerphone** key, the **HEADSET** key, or picking up the handset.

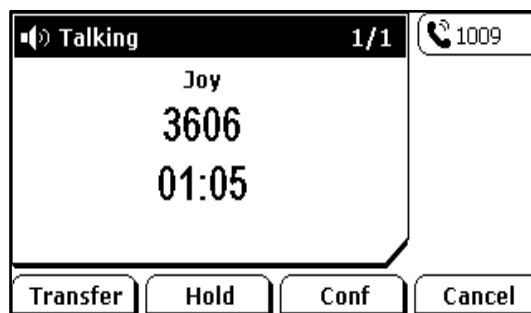The call duration of active calls is visible on the LCD screen. In the figure below, the call to the number "3606" has lasted 1 minute and 5 seconds.



#### To place a call using the handset:

1. Pick up the handset.
2. Enter the desired number using the keypad.
3. Press  ,  , or the **Send** soft key.

By default, the **#** key is configured as a send key. You can set the **\*** key as send key or set neither of them as send keys. For more information, refer to [Key as Send](#) on page 25.



 
#### Note

You can also dial using the SIP URI or IP address. To obtain the IP address of the phone, press the **OK** key. The maximum SIP URI or IP address length is 32 characters. For example, SIP URI: 2210@sip.com, IP: 192.168.1.15.

Your phone may not support direct IP dialing. Contact your system administrator for more information.

#### To place a call using the hands-free speakerphone mode:







Do one of the following:

- With the handset on-hook, press  or the line key to obtain a dial tone.  
Enter the desired number using the keypad.  
Press  ,  , or the **Send** soft key.
- With the handset on-hook, enter the desired number using the keypad.

 Press  ,  ,  , or the **Send** soft key.

#### To place a call using the headset:

 Do one of the following:






- With the optional headset connected, press  to activate the headset mode.  
Press the line key to obtain a dial tone.  
Enter the desired number using the keypad.  
Press  ,  , or the **Send** soft key.
- With the optional headset connected, press  to activate the headset mode.  
Enter the desired number using the keypad.  
Press  ,  , or the **Send** soft key.



#### Note

To permanently enable your headset, refer to [Headset Prior](#) on page 50.

#### To place multiple calls:

You can have more than one call on your SIP-T28P IP phone. To place a new call during an active call, do one of the following:

- Press the line key. The active call is placed on hold.  
Enter the desired number using the keypad.  
Press  ,  , or the **Send** soft key.
- Press  or the **Hold** soft key to place the original call on hold.  
Press the **New Call** soft key.  
Enter the desired number using the keypad.  
Press  ,  , or the **Send** soft key.

You can press  or  to switch between the calls, and then press the **Resume** soft key to retrieve the desired call.

## Answering Calls

When you are not in another call, you can answer a call in three ways:

- Using the handset
- Using the speakerphone

- Using the headset

**Note**

You can ignore incoming calls by pressing the **X** key, the **Reject** soft key or the **Silence** soft key. You can also activate Do Not Disturb mode to ignore all incoming calls without ring on your phone. For more information, refer to [Do Not Disturb \(DND\)](#) on page 84.

You can forward incoming calls to someone else by pressing the **Forward** soft key. For more information, refer to [Call Forward](#) on page 87.

**Answering When Not in Another Call**


In all cases, the active call will appear on the LCD screen showing call duration and destination.

**To answer a call using the handset:**

1. Pick up the handset.

 
**To answer a call using the hands-free speakerphone mode:**

Do one of the following:

- Press  .
- With the handset on-hook and the headset mode deactivated, press the **Answer** soft key.
- With the handset on-hook and the headset mode deactivated, press the line key (the line key LED flashes green).



**To answer a call using the headset:**

Do one of the following:

- Press  .
- With the headset mode activated, press the **Answer** soft key.
- With the headset mode activated, press the line key (the line key LED flashes green).

**Answering When in Another Call**


If you have an active call, and an incoming call arrives on the phone, do one of the following:

- Press the **Answer** soft key.  
The incoming call is answered and the original call is placed on hold.
- Press  to access the new call.  
Press  or the **Answer** soft key.  
The incoming call is answered and the original call is placed on hold.

## Ending Calls

### To end a call:

Do one of the following:

- If you are using the handset, press the **Cancel** soft key or hang up the handset.
- If you are using the headset, press the **Cancel** soft key.
- If you are using the speakerphone, press  or the **Cancel** soft key.

### Note

To end a call placed on hold, you can press the **Cancel** soft key to end the call directly, or press the **Resume** soft key to resume the call before ending it.





## Redialing Numbers

### To redial the last dialed number from your phone:

1. Press  twice.

A call to your last dialed number is attempted.

### To redial a previously dialed number from your phone:

1. Press  when the phone is idle.
2. Press  or  to select the desired entry from the placed calls list, and then press  or the **Send** soft key.


## Recent Call In Dialing

You can view the placed calls list when the phone is in the pre-dialing interface. You should enable the recent call in dialing feature in advance.

### To enable the recent call in dialing feature via web user interface:

1. Click on **Directory->Setting**.

2. Select **Enabled** from the pull-down list of **Recent Call In Dialing**.

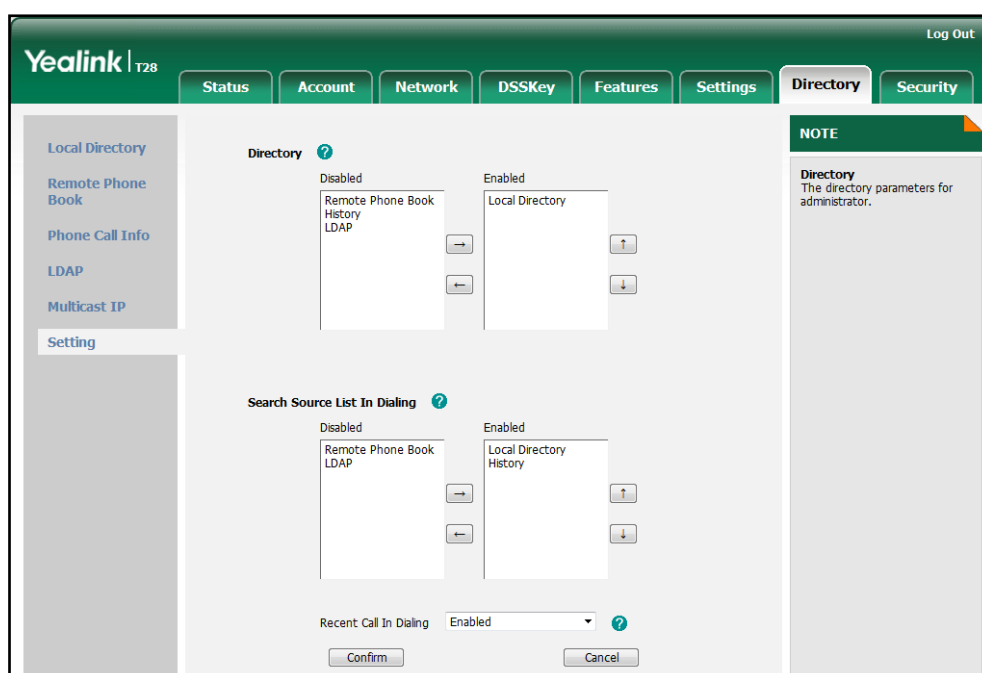


3. Click **Confirm** to accept the change.

### Note

You can enable the recent call in dialing feature via web user interface only.

To view placed calls list when the phone is in the dialing interface:

1. Pick up the handset, press the speakerphone or press the line key.  
The phone LCD screen displays the placed calls list.

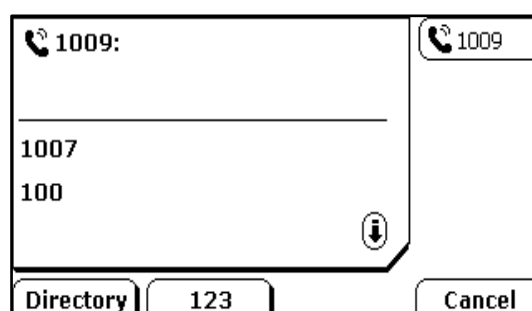



## Auto Answer


You can use the auto answer feature to automatically answer an incoming call on a line. Auto answer is configurable on a per-line basis.

To configure auto answer via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin) ->**Accounts**.



2. Select the desired account and then press the **Enter** soft key.
3. Press  or  , or the **Switch** soft key to select **Enable** from the **Auto Answer** field.

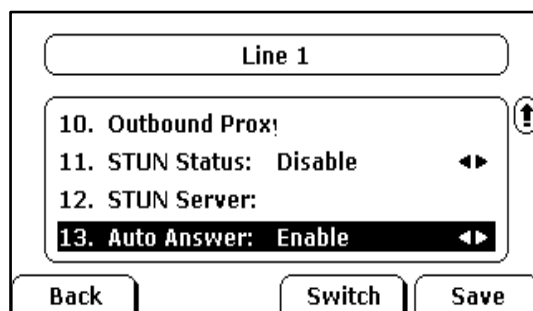

4. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.  
The **AA** icon appears on the LCD screen.



You can also configure auto answer via web user interface at the path **Account->Basic**.



#### Note

The auto answer feature is only applicable when there is no other call in progress on the phone.


## Auto Redial

You can enable the auto redial feature to redial the phone number automatically when the called party is busy. You can also configure the times of the auto redial and the time to wait between redial attempts.

**To configure auto redial via phone user interface:**

1. Press **Menu->Features->Auto Redial**.
2. Press  or  , or the **Switch** soft key to select **Enable** from the **Auto Redial** field.
3. Enter the desired time in the **Redial Interval** field.  
The default time interval is 10s.
4. Enter the desired times in the **Redial Times** field.

The default times are 10.

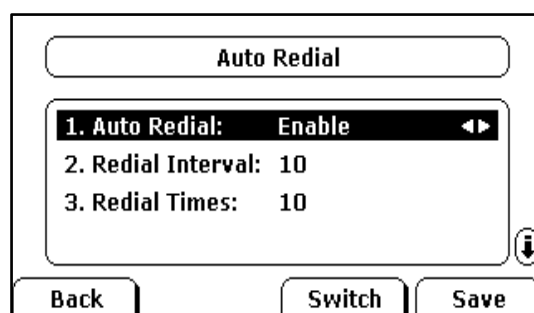


5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.


You can also configure auto redial via web user interface at the path **Features->General Information**.

**To use auto redial:**

When the called party is busy, the following prompt will appear on the LCD screen of the phone:

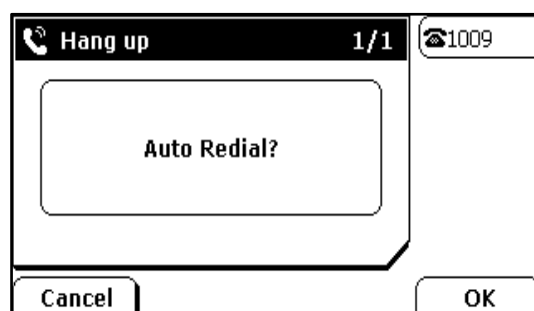

1. Press the **OK** soft key to activate auto redial. The following prompt will appear on the LCD screen of the phone:

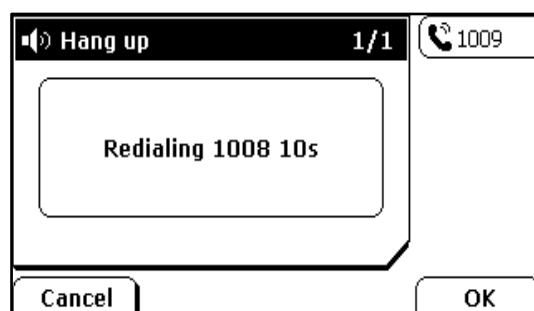

2. Wait for a period of time or press the **OK** soft key to redial the phone number. The phone will retry as many times as you configured until the called party is idle.


## Call Completion

You can use the call completion feature to notify the caller who failed to reach a desired

callee when the callee becomes available to receive a call.

**To configure call completion via phone user interface:**

1. Press **Menu->Features->Call Completion**.
2. Press ◀ or ▶, or the **Switch** soft key to select **Enable** from the **Call Completion** field.

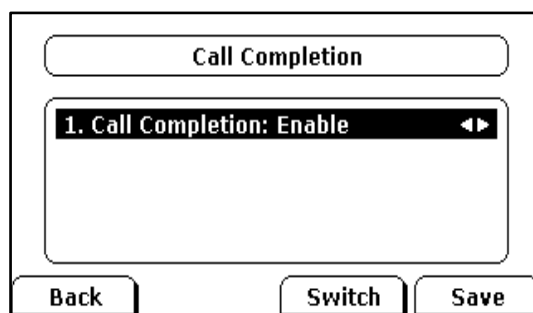


3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure call completion via web user interface at the path **Features->General Information**.


**To use call completion:**

When the called party is busy, the following prompt will appear on the LCD screen of the phone:

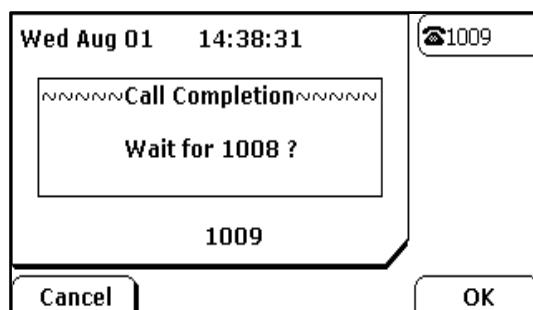

1. Press the **OK** soft key, the phone returns to the idle screen and call completion is activated.

When the called party becomes idle, the following prompt appears on the LCD screen of the phone:

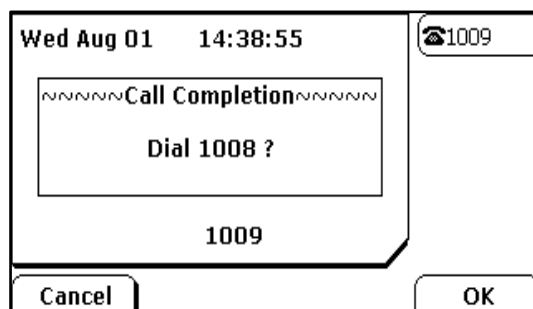

2. Press the **OK** soft key to redial the number.





### Note


The call completion feature is not available on all servers. For more information, contact your system administrator.

## Call Return

You can press a call return key to place a call back to the last incoming call.

To configure a call return key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select a desired DSS key.
3. Press  or  , or the **Switch** soft key to select **Key Event** from the **Type** field.
4. Press  or  , or the **Switch** soft key to select **Call Return** from the **Key Type** field.

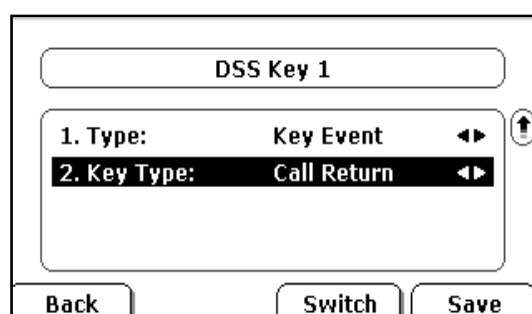


5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure a call return key via web user interface at the path **DSSKey**.


## Call Mute

You can mute the microphone of the active audio device during an active call, and then the other party cannot hear you.


To mute a call:

1. Press  during an active call.

The phone LCD screen indicates that the call is on mute.

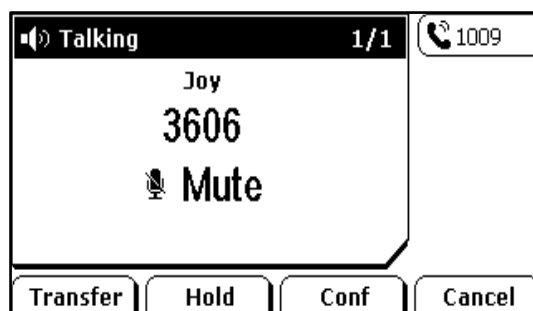

**To un-mute a call:**

1. Press  again to un-mute the call.

## Call Hold/Resume

You can place an active call on hold. At any time, at most one active call can be in progress on your phone, other calls can be received and made while placing the original call on hold. When placing a call on hold, your IP PBX might play a melody to the other party while waiting.

**To place a call on hold:**

1. Press  or the **Hold** soft key during a call.


The phone LCD screen shows the call is on hold and the line key LED flashes green.





### Note

The phone will beep softly every 30 seconds to remind you that you still have a call on hold.

**To resume a held call:**

1. Press  or the **Resume** soft key.

**Multiple Calls on Hold:**

If multiple calls are placed on hold, press  or  to switch between the calls, and then press the **Resume** soft key to retrieve the desired call.

If more than two calls are on hold, an indication appears on the LCD screen, for example "2/4", indicating that this is the second call out of four calls.

If multiple calls are on hold on more than one line key, you can view the details of the calls by pressing the corresponding line key, and then press the **Resume** soft key to retrieve the call.

## Do Not Disturb (DND)

You can use the DND feature to reject the incoming calls automatically on the phone and the callers can hear a busy signal or a message depending on your server.

You can enable/disable the DND feature for the phone system, or you can customize the DND feature for each account or all accounts. The following describes the DND modes:

- **Phone** (default): DND in phone mode means that the DND feature is effective for the phone system.
- **Custom**: DND in custom mode means that you can configure the DND feature for each account or all accounts.

You can also configure the phone to receive incoming calls from authorized numbers when the DND feature is enabled.

To configure the DND mode via web user interface:

1. Click on **Features->Forward & DND**.
2. In the **DND** block, mark the desired radio box in the **Mode** field.

3. Click **Confirm** to accept the change.

**Note**

You can configure the DND mode via web user interface only.

**To activate DND in phone mode:**

1. Press the **DND** soft key when the phone is idle.


The **DND** icon on the idle screen indicates that the DND feature is enabled.





Incoming calls will be rejected automatically and "n New Missed Call(s)" ("n" indicates the number of the missed calls) will prompt on the LCD screen.


**To activate DND in custom mode for a specific account:**

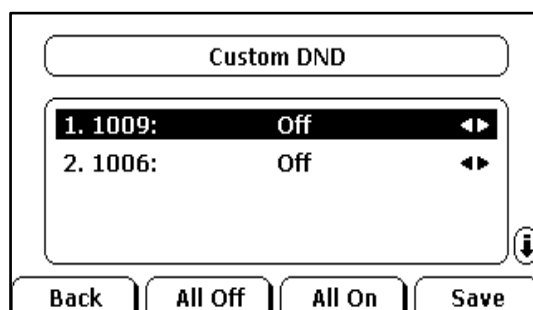1. Press the **DND** soft key when the phone is idle.

The LCD screen displays a list of the accounts on the phone.



2. Press  or  to select the desired account.
3. Press  or  soft key to select **On** to activate DND.
4. Press the **Save** soft key to accept the change.

The **DND** icon appears on the idle screen and the associated line icon changes to .


Incoming calls on this line will be rejected automatically and "**n New Missed Call(s)**" ("n" indicates the number of the missed calls) will prompt on the LCD screen.




To activate DND in custom mode for all accounts:

1. Press the **DND** soft key when the phone is idle.


The LCD screen displays a list of the accounts on the phone.

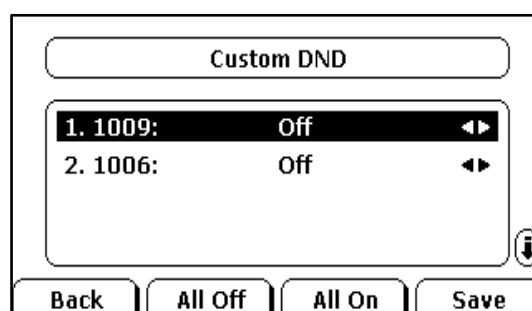

2. Press the **All On** soft key to activate DND for all accounts.
3. Press the **Save** soft key to accept the change.

The **DND** icon appears on the idle screen and all line icons change to .

Incoming calls will be rejected automatically and "**n New Missed Call(s)**" ("n" indicates the number of the missed calls) will prompt on the LCD screen.

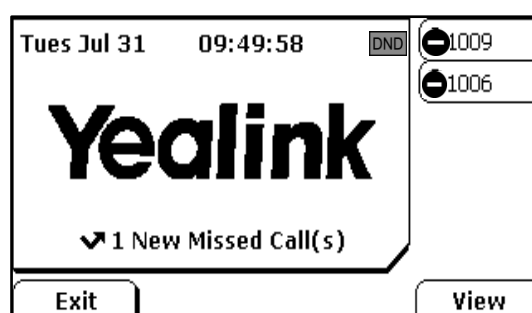

#### Note

The prompt message displays only if the Missed Call Log feature for the line is enabled. The Missed Call Log feature can be configured via web user interface at the path **Account->Basic**.

The Do Not Disturb feature is local to the phone, and may be overridden by the server settings. For more information, contact your system administrator.



To configure the DND authorized numbers via web user interface:

1. Click on **Features->Forward & DND**.
2. Select **Enabled** from the pull-down list of **DND Emergency**.
3. Enter the numbers in the **DND Authorized Numbers** field.  
For multiple numbers, enter a "," between each number.
4. Click **Confirm** to accept the change.  
When the DND feature is enabled on the phone, the phone can still receive incoming calls from the numbers specified in the **DND Authorized Numbers** field.

**Note**

You can configure the DND authorized numbers via web user interface only.

## Call Forward

You can configure your phone to forward incoming calls to another party by the static forwarding. You can also forward calls while your phone is ringing, refer to the dynamic forwarding.

### Static Forwarding

You can configure three types of call forward:

- **Always Forward:** Incoming calls are immediately forwarded.
- **Busy Forward:** Incoming calls are immediately forwarded if the phone is busy.
- **No Answer Forward:** Incoming calls are forwarded if not answered after a period of time.

You can enable/disable the call forward feature for the phone system, or you can customize the call forward feature for each account or all accounts. The following describes the call forward modes:

- **Phone** (default): Call forward in phone mode means that the call forward feature is effective for the phone system.
- **Custom:** Call forward in custom mode means that you can configure the call forward feature for each account or all accounts.

To configure the call forward mode via web user interface:

1. Click on **Features->Forward & DND**.

- In the **Forward** block, mark the desired radio box in the **Mode** field.

- Click **Confirm** to accept the change.

### Note

You can configure the call forward mode via web user interface only.

### To enable call forward in phone mode:

- Press **Menu->Call Control->Call Forwarding**.
- Press **▲** or **▼** to select the desired forwarding type, and then press the **Enter** soft key.
- Depending on your selection:
  - If you select **Always Forward**:
    - Press **◀** or **▶**, or the **Switch** soft key to select **Enable** from the **Always** field.
    - Enter the destination number you want to forward all incoming calls to in the **Forward To** field.
    - (Optional.) Enter the always forward on code or off code respectively in the **On Code** or **Off Code** field.

- If you select **Busy Forward**:

- 1) Press ◀ or ▶, or the **Switch** soft key to select **Enable** from the **Busy** field.
- 2) Enter the destination number you want to forward all incoming calls to when the phone is busy in the **Forward To** field.
- 3) (Optional.) Enter the busy forward on code or off code respectively in the **On Code** or **Off Code** field.

c.) If you select **No Answer Forward**:

- 1) Press ◀ or ▶, or the **Switch** soft key to select **Enable** from the **No Answer** field.
- 2) Enter the destination number you want to forward all unanswered incoming calls to in the **Forward To** field.
- 3) Press ◀ or ▶, or the **Switch** soft key to select the ring time to wait before forwarding in the **After Ring Time** field.  
The default ring time is 12 seconds.
- 4) (Optional.) Enter the no answer forward on code or off code respectively in the **On Code** or **Off Code** field.



4. Press the **Save** soft key to accept the change.


The  icon on the idle screen indicates the call forward feature is enabled.

**To enable call forward in custom mode:**



1. Press **Menu->Call Control->Call Forwarding**.
2. Press ▲ or ▼ to select the desired account, and then press the **Enter** soft key.
3. Press ▲ or ▼ to select the desired forwarding type, and then press the **Enter** soft key.

4. Depending on your selection:

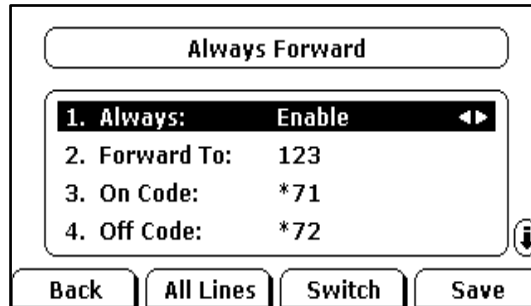
- a.) If you select **Always Forward**, you can enable it for a specific account.
- 1) Press  or  , or the **Switch** soft key to select **Enable** from the **Always** field.
  - 2) Enter the destination number you want to forward all incoming calls to in the **Forward To** field.
  - 3) (Optional.) Enter the always forward on code or off code respectively in the **On Code** or **Off Code** field.





You can also enable the always forward feature for all accounts. After the always forward feature was enabled for a specific account, do as below:

- 1) Press  or  to highlight the **Always** field.
- 2) Press the **All Lines** soft key.

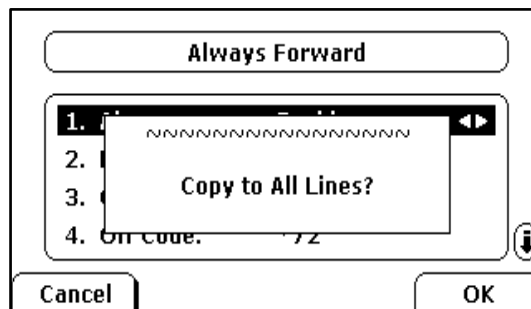The LCD screen prompts "Copy to All Lines?".



- 3) Press the **OK** soft key to accept the change or the **Cancel** soft key to cancel.

- b.) If you select **Busy Forward**, you can enable it for a specific account.
- 1) Press  or  , or the **Switch** soft key to select **Enable** from the **Busy** field.
  - 2) Enter the destination number you want to forward all incoming calls to when the phone is busy in the **Forward To** field.

- 3) (Optional.) Enter the busy forward on code or off code respectively in the **On Code** or **Off Code** field.

The screenshot shows a menu titled "Busy Forward". Inside the menu, there are four items: "1. Busy: Enable", "2. Forward To: 123", "3. On Code: \*73", and "4. Off Code: \*74". At the bottom of the menu, there are four buttons: "Back", "All Lines", "Switch", and "Save".

You can also enable the busy forward feature for all accounts. After the busy forward feature was enabled for a specific account, do as below:

- 1) Press  $\uparrow$  or  $\downarrow$  to highlight the **Busy** field.
- 2) Press the **All Lines** soft key.


The LCD screen prompts "Copy to All Lines?".

The screenshot shows the "Busy Forward" menu with a prompt "Copy to All Lines?" displayed in the center. The prompt is surrounded by a box of "N" characters. The menu items are partially visible: "1. Busy:", "2. Forward To:", "3. On Code:", and "4. Off Code:". At the bottom, there are two buttons: "Cancel" and "OK".

- 3) Press the **OK** soft key to accept the change or the **Cancel** soft key to cancel.
- c.) If you select **No Answer Forward**, you can enable it for a specific account.
- 1) Press  $\leftarrow$  or  $\rightarrow$ , or the **Switch** soft key to select **Enable** from the **No Answer** field.
  - 2) Enter the destination number you want to forward all unanswered incoming calls to in the **Forward To** field.
  - 3) Press  $\leftarrow$  or  $\rightarrow$ , or the **Switch** soft key to select the ring time to wait before forwarding in the **After Ring Time** field.

The default ring time is 12 seconds.


- 4) (Optional.) Enter the no answer forward on code or off code respectively in the **On Code** or **Off Code** field.

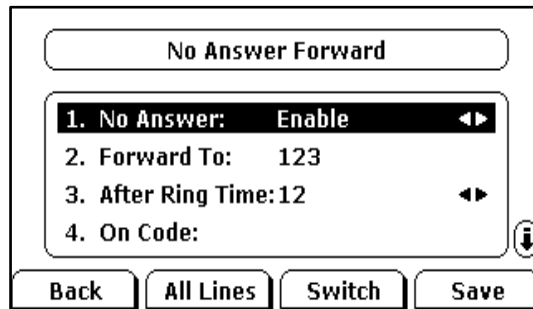

You can also enable the no answer forward feature for all accounts. After the no answer forward feature was enabled for a specific account, do as below:

- 1) Press or to highlight the **No Answer** field.
- 2) Press the **All Lines** soft key.

The LCD screen prompts "Copy to All Lines?".

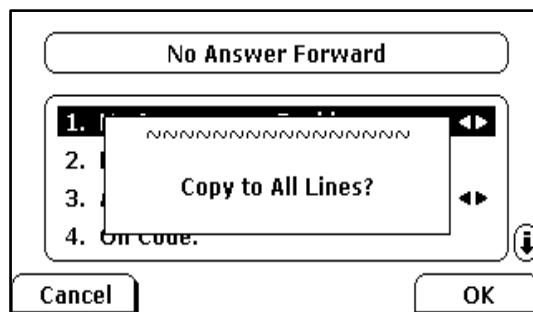

- 3) Press the **OK** soft key to accept the change or the **Cancel** soft key to cancel.
  5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.
- The icon appears on the idle screen and the associated line icon changes to .

You can also configure the call forward feature via web user interface at the path **Features->Forward & DND**.

#### Note

You can also enter the SIP URL or IP address in the **Forward To** field. For more information on using the SIP URL or IP address, refer to [Placing Calls](#) on page 73.



The call forward feature is local to the phone, and may be overridden by the server settings. Call forward on code or off code may be different between servers. For more information, contact your system administrator.



#### To disable call forward in phone mode:

Do one of the following:

- Press when the phone is idle.








- Press **Menu->Call Control->Call Forwarding**.

Press  or  to select the desired forwarding type, then press the **Enter** soft key.

Press  or  , or the **Switch** soft key to select **Disable** to disable call forward.

Press the **Save** soft key to accept the change.


#### To disable call forward in custom mode for a specific account:



1. Press **Menu->Call Control->Call Forwarding** or press  when the phone is idle.
2. Press  or  to select the desired account, then press the **Enter** soft key.
3. Press  or  to select the desired forwarding type, then press the **Enter** soft key.
4. Press  ,  or the **Switch** soft key to select **Disable** to disable call forward.
5. Press the **Save** soft key to accept the change.

## Dynamic Forwarding

#### To forward an incoming call to another party:

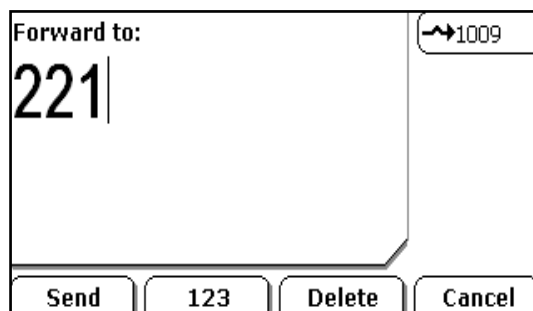1. When the phone is ringing, press the **Forward** soft key.
2. Enter the number you want to forward the incoming call to.



3. Press  ,  , or the **Send** soft key.

The LCD screen prompts a call forward message.

## Call Transfer


You can transfer a call to another party in one of the three ways:


- **Blind Transfer:** Transfer a call directly to another party without consulting.
- **Semi-Attended Transfer:** Transfer a call when the target phone is ringing.
- **Attended Transfer:** Transfer a call with prior consulting.

#### To perform a blind transfer:



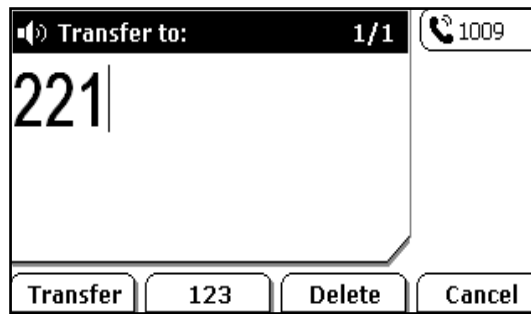

1. Press  or the **Transfer** soft key during a call.

2. Enter the number you want to transfer the call to.







3. Press  or the **Transfer** soft key to complete the transfer.  
Then the call is connected to the number to which you are transferring.

#### To perform a semi-attended transfer:

1. Press  or the **Transfer** soft key during a call.
2. Enter the number you want to transfer the call to.
3. Press  or  to dial out.
4. Press  or the **Transfer** soft key to complete the transfer when receiving ringback.

#### To perform an attended transfer:





1. Press  or the **Transfer** soft key during a call.
2. Enter the number you want to transfer the call to.
3. Press  or  to dial out.
4. After the party answers the call, press  or the **Transfer** soft key to complete the transfer.

If you are using a handset, the transfer can be completed by hanging up the handset.  
You can cancel the transfer before the call is connected by pressing the **Cancel** soft key.

## Call Waiting


You can enable or disable the call waiting feature on the phone. If the call waiting feature is enabled, you can receive another call when there is an active call on the phone. Otherwise, another incoming call is automatically rejected by the phone with a busy message when there is an active call on the phone. You can also enable or disable the phone to play a warning tone when receiving another call.

#### To configure call waiting via phone user interface:

1. Press **Menu->Features->Call Waiting**.
2. Press  or , or the **Switch** soft key to select **Enable** from the **Call Waiting** field.
3. Press  or , or the **Switch** soft key to select **Enable** from the **Play Tone** field.



- (Optional.) Enter the call waiting on code or off code respectively in the **CW On Code** or **CW Off Code** field.

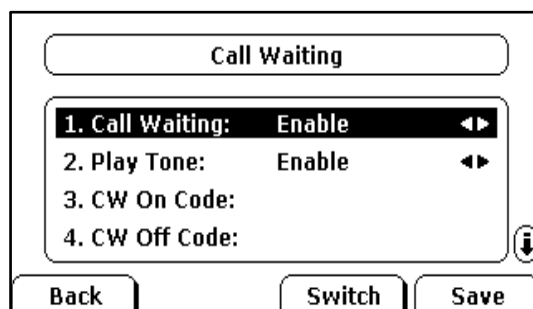

- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the call waiting feature via web user interface at the path **Features->General Information**.

## Conference

You can create a conference with other parties using the phone's local conference feature. You can create a conference between an active call and a call on hold (on the same or another line) by pressing the **CONF** key or the **Conf** soft key. The network conference feature allows you to add and remove specific conference parties.

### Note

The network conference feature is not available on all servers. For more information, contact your system administrator.



## Local Conference


The SIP-T28P IP phone supports up to 3 parties (including yourself) in a conference call. This is the default method of conference called Local Conference.


**To set up a local conference call:**

- Place a call to the first party.
- When the first party answers the call, press  or the **Conf** soft key to place a new call.




The active call is placed on hold.

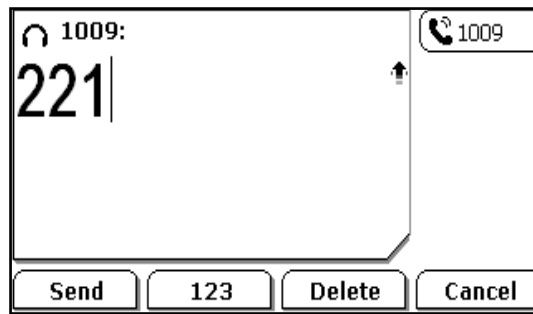
3. Enter the number of the second party and press  ,  , or the **Send** soft key.



4. When the second party answers the call, you can consult with him or her before adding to the conference.
5. Press  or the **Conf** soft key again to join all parties in the conference.

**To join two calls in a conference:**

1. Place two calls using two different accounts on the phone (for example, place the first call using account 1, and then place the second call using account 2).
2. Press  or  to select the call for conference and make sure the call is active (for example, select the call on account 1).
3. Press  or the **Conf** soft key to join the two calls in the conference on account 1.

You can press  or the **Hold** soft key to place the conference on hold. You can press the **Split** soft key to split the conference call into two individual calls. To drop the conference call, press the **Cancel** soft key.

## Network Conference

You can use the network conference feature on the SIP-T28P IP phone to conduct a conference with multiple participants.

This feature allows you to perform the following:

- Join two calls together into a conference call.
- Invite another party into an active conference call.

To use this feature, contact your system administrator for the network conference URI in advance.

**To configure the network conference feature via web user interface:**

1. Click on **Account**.
2. Select the desired account from the pull-down list of **Account**.
3. Click on **Advanced**.
4. Select **Network Conference** from the pull-down list of **Conference Type**.
5. Enter the conference URI (e.g., conference@example.com) in the **Conference URI**








field.

6. Click **Confirm** to accept the change.

#### Note

You can configure the network conference feature via web user interface only.

#### To set up a network conference call:

1. Place a call to the first party.
2. Press  or the **Conf** soft key to create a new call.  
The active call is placed on hold.
3. Enter the number of the second party and press , , or the **Send** soft key.
4. When the second party answers the call, press  or the **Conf** soft key to add the second party to the conference.
5. Press the **Conf** soft key to create a new call.  
The conference is placed on hold.
6. Enter the number of the new party and then press , , or the **Send** soft key.
7. When the new party answers the call, press  or the **Conf** soft key to add the new party to the conference.
8. Repeat steps 5 to 7 until you have added all intended parties.

The procedures to set up a network conference call for specific servers may be different from introduced above. Contact your system administrator for more information.







## Call Park


You can use call park feature to place a call on hold, and then retrieve the call from another phone in the system (for example, a phone in another office or conference room). You can park an active call by pressing the call park key on the phone. If the call is parked successfully, the response is either a voice prompt confirming that the call was parked, or a visible indication on the LCD screen.

### Note

The call park feature is not available on all servers. Contact your system administrator for more information.

To configure a call park key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press  or  , or the **Switch** soft key to select **Key Event** from the **Type** field.
4. Press  or  , or the **Switch** soft key to select **Call Park** from the **Key Type** field.
5. Press  or  , or the **Switch** soft key to select the desired line from the **Account ID** field.
6. Enter the call park feature code in the **Value** field.

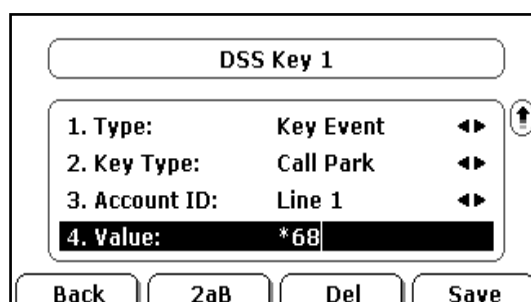

DSS Key 1	
1. Type:	Key Event
2. Key Type:	Call Park
3. Account ID:	Line 1
4. Value:	*68

Back   2aB   Del   Save

7. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure a call park key via web user interface at the path **DSSKey**.

To use the call park feature:

1. User on phone A places a call to phone B.
2. User on phone A wants to take the call in a conference room for privacy, then presses the call park key on phone A.
3. User on phone A walks to an available conference room where the phone is designated as phone C. The user dials the call park retrieve feature code to retrieve the parked call.

The system establishes call between phone C and B.

#### Note

The call park feature code and call park retrieve feature code are predefined on the system server. Contact your system administrator for more information.

If the parked call is not retrieved within a period of time assigned by the system, the phone performing call park feature will receive call back.

## Call Pickup

You can use call pickup feature to answer someone else's incoming call on the phone. The SIP-T28P IP phone supports the directed call pickup and group call pickup features. Directed call pickup is used for picking up a call that is ringing at a specific phone number. Group call pickup is used for picking up a call that is ringing at any phone number in the group. The pickup group should be predefined, contact your system administrator for more information.

You can pick up an incoming call by using the **DPickup/GPickup** soft key. To use the call pickup feature, you need to configure the call pickup code beforehand on a global or per-line basis via web user interface.

#### Note

If there are many incoming calls at the same time, pressing the **GPickup** soft key on the phone will pick up the call that rings first.

### Directed Call Pickup

To enable the directed call pickup via web user interface:

1. Click on **Features->Call Pickup**.
2. Select **Enabled** from the pull-down list of **Directed Call Pickup**.

3. Click **Confirm** to accept the change.

To configure the directed call pickup code on a global basis via web user interface:

1. Click on **Features->Call Pickup**.
2. Enter the directed call pickup code in the **Directed Call Pickup Code** field.

The screenshot shows the Yealink T28 web interface. The 'Features' tab is selected, and the 'Call Pickup' sub-tab is active. The left sidebar lists various features: Forward&DND, General Information, Audio, Intercom, Transfer, Call Pickup (highlighted), Remote Control, Phone Lock, ACD, SMS, and Action URL. The main content area displays the 'Call Pickup' configuration. It includes a 'Directed Call Pickup' dropdown set to 'Enabled', a 'Directed Call Pickup Code' text field containing '\*97', a 'Group Call Pickup' dropdown set to 'Enabled', a 'Group Call Pickup Code' text field, a 'Visual Alert for BLF Pickup' dropdown set to 'Disabled', and an 'Audio Alert for BLF Pickup' dropdown set to 'Disabled'. Each dropdown has a help icon (?). At the bottom are 'Confirm' and 'Cancel' buttons. A 'NOTE' box on the right states: 'Call Pickup The call pickup parameters for administrator.'

3. Click **Confirm** to accept the change.

To configure the directed call pickup code on a per-line basis via web user interface:

1. Click on **Account**.
2. Select the desired account from the pull-down list of **Account**.
3. Click on **Advanced**.
4. Enter the directed call pickup code in the **Directed Call Pickup Code** field.


The screenshot shows the Yealink T28 web interface. The 'Account' tab is selected, and the 'Advanced' sub-tab is active. The left sidebar lists: Register, Basic, Codec, and Advanced (highlighted). The main content area displays the 'Advanced' configuration for 'Account 1'. It includes fields for 'Keep Alive Type' (Default), 'Keep Alive Interval (Seconds)' (30), 'Local SIP Port' (5060), 'RPort' (Disabled), 'SIP Session Timer T1 (0.5~10s)' (0.5), 'SIP Session Timer T2 (2~40s)' (4), 'SIP Session Timer T4 (2.5~60s)' (5), and 'Subscribe Period (Seconds)' (1800). Below these are three vertical dots indicating more settings. Further down are 'Music Server URI', 'Directed Call Pickup Code' (containing '\*97'), 'Group Call Pickup Code', 'Distinctive Ring Tones' (Disabled), 'Unregister When Reboot' (Disabled), and 'Out Dialog BLF' (Disabled). Each field has a help icon (?). At the bottom are 'Confirm' and 'Cancel' buttons. A 'NOTE' box on the right states: 'Advanced The Advanced parameters for administrator.'

5. Click **Confirm** to accept the change.

To pick up a call directly:

1. Pick up the handset.

The **DPickup** soft key appears on the LCD screen.

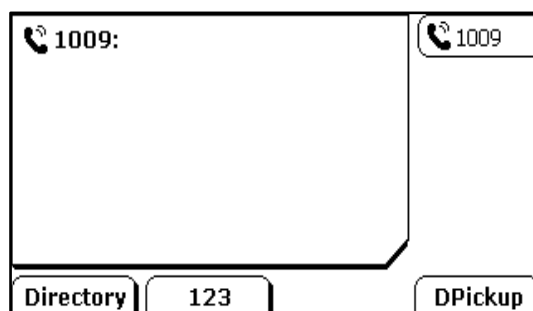

2. Press the **DPickup** soft key on your phone when a phone receives an incoming call.
3. Enter the phone number which receives an incoming call.
4. Press the **DPickup** soft key again.


The call is answered on your phone.

You can also configure a DSS key as a directed pickup key via phone user interface or web user interface. You can pick up a call by pressing the directed pickup key directly.

## Group Call Pickup

To enable the group call pickup via web user interface:

1. Click on **Features->Call Pickup**.
2. Select **Enabled** from the pull-down list of **Group Call Pickup**.

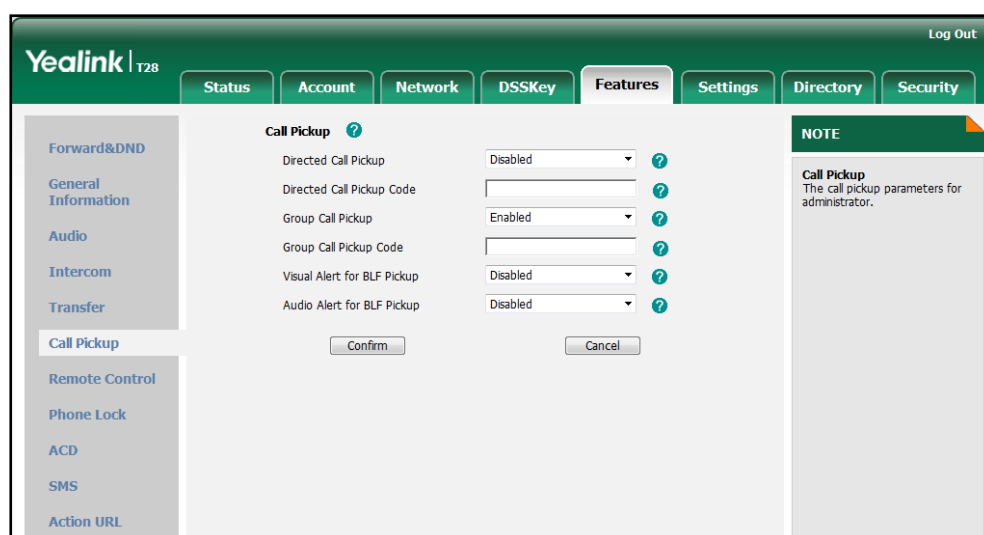

3. Click **Confirm** to accept the change.

To configure the group call pickup code on a global basis via web user interface:

1. Click on **Features->Call Pickup**.

2. Enter the group call pickup code in the **Group Call Pickup Code** field.

The screenshot shows the Yealink T28 web interface. The 'Features' tab is active. Under the 'Call Pickup' section, the following settings are visible:

- Directed Call Pickup: Disabled
- Directed Call Pickup Code: (empty field)
- Group Call Pickup: Enabled
- Group Call Pickup Code: \*98
- Visual Alert for BLF Pickup: Disabled
- Audio Alert for BLF Pickup: Disabled

There are 'Confirm' and 'Cancel' buttons at the bottom of the configuration area. A 'NOTE' box on the right states: 'Call Pickup: The call pickup parameters for administrator.'

3. Click **Confirm** to accept the change.

To configure the group call pickup code on a per-line basis via web user interface:

1. Click on **Account**.
2. Select the desired account from the pull-down list of **Account**.
3. Click on **Advanced**.
4. Enter the group call pickup code in the **Group Call Pickup Code** field.

The screenshot shows the Yealink T28 web interface. The 'Account' tab is active, and the 'Advanced' sub-tab is selected. The 'Account' dropdown is set to 'Account 1'. The following settings are visible:

- Keep Alive Type: Default
- Keep Alive Interval (Seconds): 30
- Local SIP Port: 5060
- RPort: Disabled
- SIP Session Timer T1 (0.5~10s): 0.5
- SIP Session Timer T2 (2~40s): 4
- SIP Session Timer T4 (2.5~60s): 5
- Subscribe Period (Seconds): 1800
- Music Server URI: (empty field)
- Directed Call Pickup Code: (empty field)
- Group Call Pickup Code: \*98
- Distinctive Ring Tones: Disabled
- Unregister When Reboot: Disabled
- Out Dialog BLF: Disabled

There are 'Confirm' and 'Cancel' buttons at the bottom. A 'NOTE' box on the right states: 'Advanced: The Advanced parameters for administrator.'


5. Click **Confirm** to accept the change.

To pick up a call in the group:

1. Pick up the handset.



The **GPickup** soft key appears on the LCD screen.

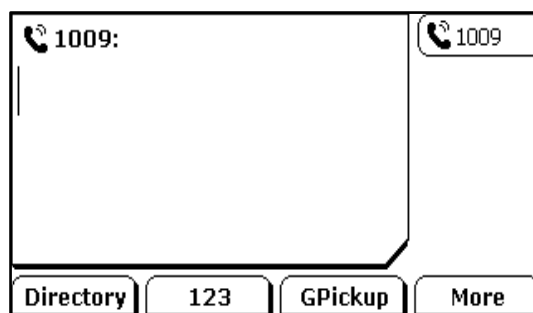

2. Press the **GPickup** soft key on your phone when a phone in the group receives an incoming call.

The call is answered on your phone.

You can also configure a DSS key as a group pickup key via phone user interface or web user interface. You can pick up a call by pressing the group pickup key directly.

#### Note

The directed call pickup code and group call pickup code are predefined on the system server. Contact your system administrator for more information.

The call pickup code configured on a per-line basis takes precedence over that configured on a global basis.





## Anonymous Call

You can use anonymous call feature to block the identity and phone number from showing up to the called party when you call someone. For example, you want to call to consult some of the services, but you don't want to be harassed. Anonymous call is configurable on a per-line basis.


#### Note

The anonymous call feature is not available on all servers. Contact your system administrator for the anonymous call on code and off code.

**To configure anonymous call via phone user interface:**

1. Press **Menu->Features->Anonymous Call**.
2. Press  or  , or the **Switch** soft key to select the desired line from the **Line ID** field.
3. Press  or  , or the **Switch** soft key to select **Enable** from the **Anonymous Call** field.
4. (Optional.) Enter the anonymous call on code in the **Call On Code** field.

- (Optional.) Enter the anonymous call off code in the **Call Off Code** field.

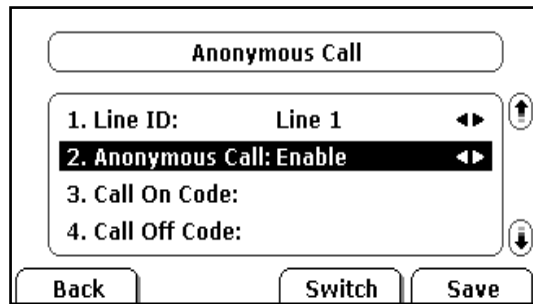


- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure anonymous call via web user interface at the path **Account->Basic**.

**To place an anonymous call:**

- Using the specific line on the phone to place a call to phone B.  
The LCD screen of phone B prompts an incoming call from anonymity.

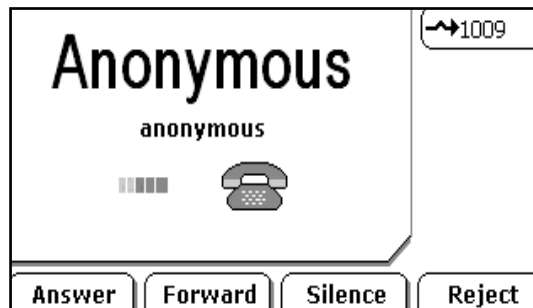

## Anonymous Call Rejection

You can use anonymous call rejection feature to reject incoming calls from anonymous callers. Anonymous call rejection automatically rejects incoming calls from callers who deliberately block their identities and numbers from showing up. Anonymous call rejection is configurable on a per-line basis.

**To configure anonymous call rejection via phone user interface:**

- Press **Menu->Features->Anonymous Call**.
- Press **▲** or **▼**, or the **Switch** soft key to select the desired line from the **Line ID** field.
- Press **▲** or **▼** to scroll to the **Anonymous Rejection** field.
- Press **◀** or **▶**, or the **Switch** soft key to select **Enable** from the **Anonymous Rejection** field.
- (Optional.) Enter the anonymous call rejection on code in the **Reject On Code** field.

6. (Optional.) Enter the anonymous call rejection off code in the **Reject Off Code** field.

Anonymous Call

4. Call Off Code:

5. Anonymous Re...Enable ◀▶

6. Reject On Code:

7. Reject Off Code:

Back Switch Save

7. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure anonymous call rejection via web user interface at the path **Account->Basic**.



## Advanced Phone Features

This chapter provides operating instructions for the advanced features of the SIP-T28P IP phone. The topics include:

- [Busy Lamp Field \(BLF\)](#)
- [Call Recording](#)
- [Hot Desking](#)
- [Intercom](#)
- [Multicast Paging](#)
- [Music on Hold](#)
- [Automatic Call Distribution \(ACD\)](#)
- [Messages](#)





If you require additional information or assistance with your new phone, contact your system administrator.

### Busy Lamp Field (BLF)

You can use the BLF feature to monitor a specific user for status changes on the phone. For example, you can configure a BLF key on the phone for monitoring the status of a friend's phone (busy or idle). When the friend makes a call, the BLF key (memory key) LED illuminates solid red on your phone to indicate that the friend's phone is in use and busy. For more BLF key LED indications, refer to [LED Instructions](#) on page 5.

You can press a BLF key to dial out the monitored phone number when the monitored phone is idle. You can receive a visual alert and an audio alert when the monitored phone number receives an incoming call. You can also pick up a call directly by pressing the BLF key when the monitored phone number receives an incoming call. For more information, contact your system administrator.

**To configure a BLF key via phone user interface:**

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press  or  , or the **Switch** soft key to select **BLF** from the **Type** field.
4. Press  or  , or the **Switch** soft key to select the desired line from the **Account ID** field.
5. Enter the phone number or extension you want to monitor in the **Value** field.

6. (Optional.) Enter the pickup code in the **Extension** field.

DSS Key 1

1. Type:	BLF	◀▶	⬆
2. Account ID:	Line 1	◀▶	
3. Value:	1008		
4. Extension:	*88		

Back 123 Del Save

7. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the BLF key via web user interface at the path **DSSKey**.

You can enable audio alert for BLF pickup feature on the phone. This allows the monitoring phone to play a warning tone, when the monitored phone number receives an incoming call. You can also enable visual alert for BLF pickup feature on the phone. This allows the LCD screen of the monitoring phone to display the caller ID, when the monitored phone number receives an incoming call.

**To enable the visual and audio alert feature via web user interface:**

1. Click on **Features->Call Pickup**.
2. Select **Enabled** from the pull-down list of **Visual Alert for BLF Pickup**.
3. Select **Enabled** from the pull-down list of **Audio Alert for BLF Pickup**.

Yealink T28 Log Out

Status Account Network DSSKey Features Settings Directory Security

Forward&DND  
General Information  
Audio  
Intercom  
Transfer  
Call Pickup  
Remote Control  
Phone Lock  
ACD  
SMS  
Action URL

**Call Pickup** ?

Directed Call Pickup	Disabled	?
Directed Call Pickup Code		?
Group Call Pickup	Disabled	?
Group Call Pickup Code		?
Visual Alert for BLF Pickup	Enabled	?
Audio Alert for BLF Pickup	Enabled	?

Confirm Cancel

**NOTE**

**Call Pickup**  
The call pickup parameters for administrator.

4. Click **Confirm** to accept the change.


#### Note

You can enable the visual and audio alert feature via web user interface only.

When the monitored phone number receives an incoming call, the followings occur on the phone:

- The phone plays a warning tone (if enabled).
- The BLF key LED flashes.
- The caller ID appears on the LCD screen (if enabled).

In the following figure, the phone LCD screen shows an incoming call from 1007 on the monitored line.

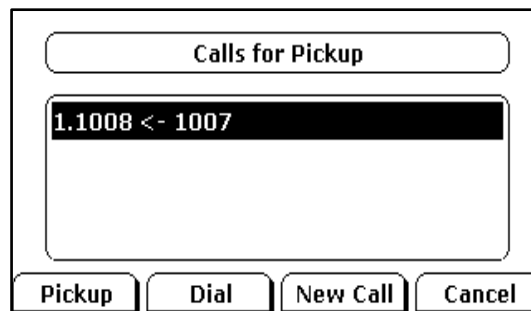

#### Note


If your phone is locked and the type of the keypad lock is set to be **Function Keys** or **All keys**, you cannot use the **Pickup**, **Dial**, **New Call** and **Cancel** soft keys appear in the figure above until unlocked.

When there is an active call on the IP phone, you can transfer the active call to the monitored phone number directly by pressing the BLF key. The phone transfers the active call differently depending on the transfer mode on DSS key. For more information on performing call transfer, refer to [Call Transfer](#) on page 93.

**To configure the transfer mode on DSS key via web user interface:**

1. Click on **Features->Transfer**.
2. Select the desired transfer mode from the pull-down list of **Transfer Mode Via Dsskey**. Depending on your selection:
  - If you select **Blind Transfer**, press the BLF key to blind transfer the call to the monitored phone number.
  - If you select **Attended Transfer**, press the BLF key to dial out the monitored phone number and then you can perform the attended or semi-attended transfer.

- If you select **New Call**, press the BLF key to place a new call to the monitored user.

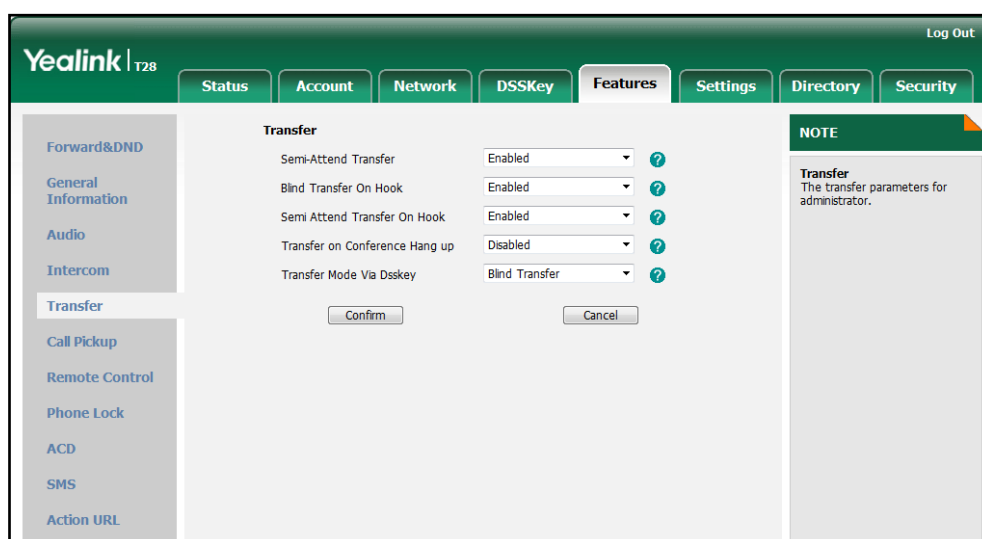

3. Click **Confirm** to accept the change.

### Note

You can configure the transfer mode on DSS key via web user interface only.

## Call Recording

You can record calls by pressing a record key on the SIP-T28P IP phone. There are 2 different ways of configuring call recording and they even work differently:

- **Record:** The phone sends SIP INFO message containing a specific header "Record: on/off" to trigger a recording.
- **URL Record:** The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

### Note

The record feature is not available on all servers. Contact your system administrator for more information.

**To configure a record key via phone user interface:**

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press **◀** or **▶**, or the **Switch** soft key to select **Key Event** from the **Type** field.



4. Press ◀ or ▶, or the **Switch** soft key to select **Record** from the **Key Type** field.

DSS Key 1

1. Type: Key Event

2. Key Type: Record

Back Switch Save

5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

To configure a URL record key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press ◀ or ▶, or the **Switch** soft key to select **URL Record** from the **Type** field.
4. Enter the URL (e.g., `http://10.1.2.224/phonerecording.cgi`) in the **Value** field.

Dss Key 1

1. Type: URL Record

2. Value: 1.2.224/phonereco

Back 2aB Delete Save

5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure the record or URL record keys via web user interface at the path **DSSKey**.

The record and URL record keys control the recording and are available:

- During an active call
- When calls are on hold or mute
- During a blind or attended transfer
- During a conference call
- When the phone prompts you to answer an incoming call

The record and URL record keys are not available:

- When there are no connected calls on your phone
- When you place a new call

**To record a call:**

1. Press a record or URL record key during a call.

If the recording starts successfully, the recording icon appears on the LCD screen and the record or URL record key LED flashes green.

2. Press the record or URL record key again to stop recording.

The recording icon disappears from the LCD screen and the record or URL record key LED turns off.

Recording status indications you need to know:

Circumstance	Icons on the LCD screen
A recording is started	● appears on the LCD screen
A recording cannot be started	⊗ appears for 1 second
A recording cannot be stopped	⊘ appears for 1 second, then goes back
The recording box is full	⌮ appears for 1 second
The cannot be recorded	⊗ appears for 1 second

You can listen to the recordings stored on your server system. For example, you can dial an access code to listen to the recordings.

**Note**

The way in which you listen to the recordings may be different on different servers. Contact your system administrator for more information.

## Hot Desking

Hot desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for hot desking is cost reduction. This feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long at all, which means actual personal offices would be often vacant, consuming valuable space and resources.

You can use hot desking on the SIP-T28P IP phone to log out the existing accounts and then log in a new account, that is, many users can share the phone resource in different time. To use this feature, you need to configure a hot desking key in advance.

**Note**

The hot desking feature is not available on all servers. Contact your system administrator for more information.

**To configure a hot desking key via phone user interface:**

1. Press **Menu->Features->DSS Keys->Memory Keys (or Line Keys)**.

2. Select the desired DSS key.
3. Press ◀ or ▶, or the **Switch** soft key to select **Key Event** from the **Type** field.
4. Press ◀ or ▶, or the **Switch** soft key to select **Hot Desking** from the **Key Type** field.

Dss Key 1

1. Type: Key Event ◀▶

2. Key Type Hot Desking ◀▶

Back Switch Save

5. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure a hot desking key via web user interface at the path **DSSKey**.

#### To use hot desking:

1. Press the hot desking key when the phone is idle.  
The LCD screen prompts "Clear all account config?".

Wed Aug 01 14:56:10 1009

Warning

Clear all account config?

1009

Cancel OK

2. Press the **OK** soft key, registration configurations of all accounts will be cleared immediately.

The login wizard will be shown as below:

Set Hot Desking

1. User Name:

2. Password:

Cancel 2aB Delete Save

3. Enter the login information in each field.

## Intercom



Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. You can press the intercom key to automatically connect with a remote extension for outgoing intercom calls, and the remote extension will automatically answer the incoming intercom calls.


### Note

The intercom feature is not available on all servers. Contact your system administrator for more information.

## Outgoing Intercom Calls

To configure an intercom key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press  or  , or the **Switch** soft key to select **Intercom** from the **Type** field.
4. Select the desired line from the **Account ID** field.

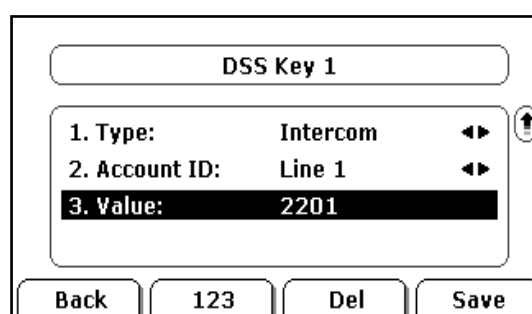

DSS Key 1	
1. Type:	Intercom
2. Account ID:	Line 1
3. Value:	2201

Back 123 Del Save

5. Enter the remote extension number in the **Value** field.
6. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure an intercom key via web user interface at the path **DSSKey**.

To place an intercom call:

1. Press the intercom key when the phone is idle.  
The phone is automatically connected to the extension specified in the **Value** field.
2. Press the intercom key again or the **Cancel** soft key to end the intercom call.

## Incoming Intercom Calls

By default, the SIP-T28P IP phone supports to answer an incoming intercom call automatically. The phone automatically plays a warning tone when it receives an incoming intercom call. In addition, you can enable the phone to mute the microphone


when it automatically answers an incoming intercom call. You can also enable the phone to automatically answer an incoming intercom call while there is already an active call on the phone, the active call is placed on hold.

Intercom features you need to know:

Intercom features	Description
Accept Intercom	Allows you to enable or disable the IP phone to automatically answer an incoming intercom call.
Intercom Mute	Allows you to enable or disable the microphone on the IP phone for Intercom calls.
Warning Tone	Allows you to enable or disable the IP phone to play a warning tone when the IP phone receives an incoming intercom call.
Intercom Barge	Allows you to enable or disable the IP phone to automatically answer an incoming intercom call while there is already an active call on the phone.

To configure intercom features via phone user interface:

1. Press **Menu->Features->Intercom**.
2. Make the desired changes.

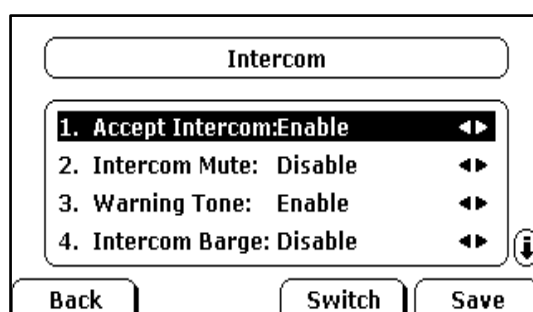

3. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure these specific parameters via web user interface at the path **Features->Intercom**.

### Accept Intercom

You can enable or disable the phone to automatically answer an incoming intercom call. If Accept Intercom is enabled, the phone automatically answers an incoming intercom call. If Accept Intercom is disabled, the phone rejects incoming intercom calls and sends a busy signal to the caller. Accept Intercom is enabled by default.

#### Note

Your administrator can set a time period delay before the phone automatically answers. Contact your system administrator for more information.

### Intercom Mute

You can mute or un-mute the microphone on the phone for intercom calls automatically. If Intercom Mute is enabled, the microphone is muted for intercom calls. If Intercom Mute is disabled, the microphone is un-muted for incoming calls. Intercom Mute is disabled by default.

### Warning Tone

You can enable or disable the phone to play a warning tone when receiving an intercom call. If Warning Tone is enabled, the phone plays a warning tone to alert you before answering the intercom call. If Warning Tone is disabled, the phone automatically answers the intercom call without warning. Warning Tone is enabled by default.

### Intercom Barge





You can enable or disable the phone to automatically answer an incoming intercom call while there is already an active call on the phone. If Intercom Barge is enabled, the phone automatically answers the intercom call and places the active call on hold. If Intercom Barge is disabled, the phone handles an incoming intercom call like a waiting call. Intercom Barge is disabled by default.

## Multicast Paging

You can use multicast paging to quickly and easily forward time sensitive announcements out to people within the multicast group. You can configure a multicast paging key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to allow it to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

## Sending RTP Stream

To configure a multicast paging key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press  or  , or the **Switch** soft key to select **Key Event** from the **Type** field.
4. Press  or  , or the **Switch** soft key to select **Multicast Paging** from the **Key Type** field.
5. Enter the multicast IP address and port number (e.g., 224.5.6.20:10008) in the **Value** field.

The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.

Dss Key 1	
1. Type:	Key Event
2. Key Type	Multicast Paging
3. Value:	224.5.6.20:10008

Back Switch Save

- Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure a multicast paging key via web user interface at the path **DSSKey**.

You can also configure the phone to use a default codec for sending multicast RTP stream via web user interface.

**To configure a default codec for multicast paging via web user interface:**

- Click on **Features->General Information**.
- Select the desired codec from the pull-down list of **Multicast Codec**.

The default codec is G722.

Yealink T28 Log Out

Status Account Network **DSSKey** Features Settings Directory Security

Forward&DND

General Information

Audio

Intercom

Transfer

Call Pickup

Remote Control

Phone Lock

**General Information**

Call Waiting: Enabled

Call Waiting On Code:

Call Waiting Off Code:

Auto Redial: Disabled

Auto Redial Interval (1~300s): 10

Auto Redial Times (1~300): 10

Key As Send: #

Reserve # in User Name: Enabled

Hotline Number:

Multicast Codec: G722

Play Hold Tone: Enabled

Play Hold Tone Delay: 30

Allow Mute: Enabled

Dual-Headset: Disabled

Headset Prior: Disabled

DTMF Replace Tran: Disabled

Tran Send DTMF:

Send Pound Key: Disabled

**NOTE**


**Call Waiting**  
This call feature allows your phone to accept other incoming calls during the conversation.

**Key As Send**  
Select \* or # as the send key.

**Hotline Number**  
When you pick up the phone, it will dial out the hotline number automatically.

- Click **Confirm** to accept the change.

#### Note

If G722 codec is used for multicast paging, the phone LCD screen displays the  icon to indicate that is providing high definition voice.

You can configure a default codec for multicast paging via web user interface only.


#### To send RTP stream:

- Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP: Port). For both sending and receiving of the multicast RTP there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

The following figure shows a multicast RTP session on the phone:

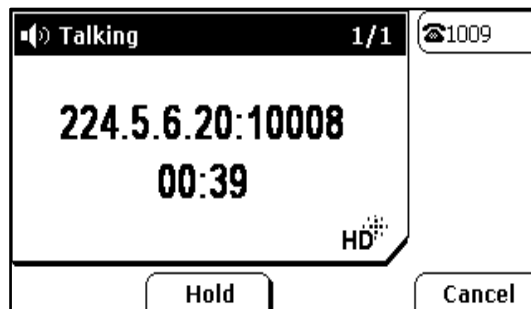

- Press the **Hold** soft key to place the current multicast RTP session on hold.
- Press the **Cancel** soft key to cancel the multicast RTP session.

#### Note

Multicast RTP is one way only from sender to the multicast address(es) (receiver). For outgoing RTP multicasts, all other existing calls on the phone will be placed on hold.

## Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

You can also change the behavior of how the phone handles incoming multicast paging calls by configuring specific parameters via web user interface. The specific parameters are: Paging Barge and Paging Priority Active.

#### Paging Barge

You can use the paging barge feature to define the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call,



then it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress shall take precedence over all incoming multicast paging calls. The valid values in the Paging Barge field are:

- **1 to 10:** Define the priority of the active call, 1 is the highest priority, 10 is the lowest priority.
- **Disabled:** The voice call in progress shall take precedence over all incoming paging calls.

### Paging Priority Active

You can enable or disable this feature to decide how the phone handles the incoming multicast paging calls, when there is already a multicast paging call on the phone. If enabled, the phone will ignore the incoming multicast paging call with a lower priority, otherwise, the phone will play the incoming multicast RTP and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.

**To configure multicast listening addresses via web user interface:**

1. Click on **Directory->Multicast IP**.
2. Select the desired value from the pull-down list of **Paging Barge**.
3. Select the desired value from the pull-down list of **Paging Priority Active**.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:10008) which the phone listens for incoming RTP multicast in the **Listening Address** field.
5. Enter the label in the **Label** field. Label will appear on the LCD screen when receiving the RTP multicast.

The screenshot shows the Yealink T28 web interface. The top navigation bar includes links for Status, Account, Network, DSSKey, Features, and Settings. The left sidebar contains links for Local Directory, Remote Phone Book, Phone Call Info, LDAP, Multicast IP, and Setting. The main configuration area is titled 'Multicast IP' and includes the following fields:

- Paging Barge:** A dropdown menu set to '10'.
- Paging Priority Active:** A dropdown menu set to 'Enabled'.
- Table:** A table with 4 columns: IP Address, Listening Address, Label, and Priority. It contains 10 rows for configuring multicast IP addresses.
- Buttons:** 'Confirm' and 'Cancel' buttons at the bottom.
- NOTE:** A note on the right side stating 'Multicast IP: The multicast IP parameters for administrator.'

IP Address	Listening Address	Label	Priority
1 IP Address	224.5.6.20:10008		1
2 IP Address			2
3 IP Address			3
4 IP Address			4
5 IP Address			5
6 IP Address			6
7 IP Address			7
8 IP Address			8
9 IP Address			9
10 IP Address			10

- Click **Confirm** to accept the change.

### Note

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest priority.

Both the multicast paging sender and the receiver will play a warning tone when pressing the multicast paging key.

You can configure multicast listening addresses via web user interface only.

## Music on Hold

Music on hold (MoH) is the business practice of playing recorded music to fill the silence that would be heard by the callers who have been placed on hold. To use this feature, you should specify a SIP URI pointing to a Music on Hold Server account, when placing a call on hold, the phone will invite this SIP URI to the Music on Hold Server account. The Music on Hold account automatically answers to the SIP INVITE messages and immediately plays audio from some source located anywhere (LAN, Internet) to the held party. Contact your system administrator for the SIP URI.

To configure the music on hold server via web user interface:

- Click on **Account**.
- Select the desired account from the pull-down list of **Account**.
- Click on **Advanced**.
- Enter the SIP URI (e.g., sip:moh@sip.com) in the **Music Server URI** field.

The screenshot shows the Yealink T28P web interface. The 'Account' tab is active, and the 'Advanced' sub-tab is selected. The 'Account' dropdown menu shows 'Account 1'. The 'Music Server URI' field contains 'sip:moh@sip.com'. Other fields include 'Keep Alive Type' (Default), 'Keep Alive Interval' (30), 'Local SIP Port' (5060), 'RPort' (Disabled), 'SIP Session Timer T1' (0.5), 'SIP Session Timer T2' (4), 'SIP Session Timer T4' (5), and 'Subscribe Period' (1800). The 'Music Server URI' field is highlighted. The interface also features a sidebar with 'Register', 'Basic', 'Codec', and 'Advanced' options, a top navigation bar with 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security', and a 'Log Out' button. A 'NOTE' box on the right states: 'Advanced: The Advanced parameters for administrator.'

- Click **Confirm** to accept the change.

When you have placed a call on hold, the held party can hear the music.

**Note**

All involved parties cannot use encrypted RTP (SRTP).

You can configure the music on hold server via web user interface only.



## Automatic Call Distribution (ACD)


ACD is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of multiple persons at the earliest opportunity. The ACD feature on the SIP-T28P IP phone allows the ACD system to distribute large volumes of incoming calls to the registered IP phone users. To use this feature, you should configure an ACD key in advance.

**Note**

Make sure the ACD feature is enabled on your IP phone. For more information on enabling the ACD feature, contact your system administrator.

To configure an ACD key via phone user interface:

1. Press **Menu->Features->DSS Keys->Memory Keys** (or **Line Keys**).
2. Select the desired DSS key.
3. Press  or  , or the **Switch** soft key to select **ACD** from the **Type** field.

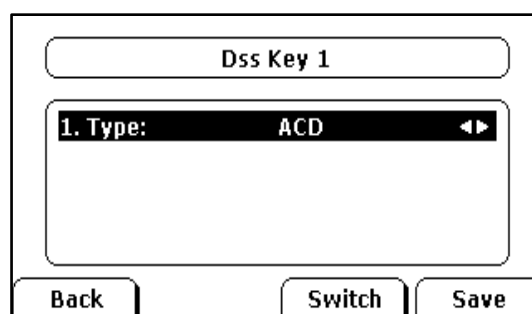

4. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

You can also configure an ACD key via web user interface at the path **DSSKey**.


**To log in the ACD system:**

1. Press the ACD key when the phone is idle.

The phone LCD screen prompts you the following information:

**User ID:** the identity used to log in the queue.

**Password:** the password used to log in the queue.

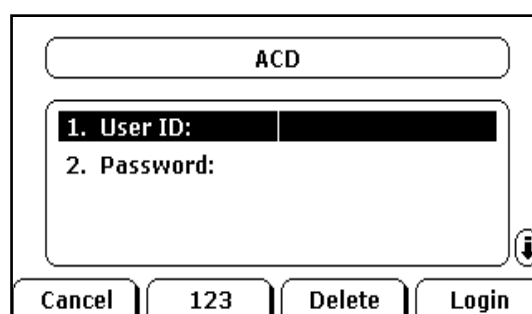

2. Press the **Login** soft key to log in.

**Note**

Contact your system administrator for the User ID and Password to access the ACD system.

After configuring an ACD key, you can press the ACD key to log in the ACD system. After logging in, you are ready to receive calls from the ACD system. You can press the ACD key to show your current phone status. You can press the **Available/Unavailable** soft key to change your phone status. The system server monitors your phone status. When you set the phone status to available, the ACD key LED illuminates solid green, and then the server begins distributing calls to your phone. When you set the phone to unavailable, the ACD key LED illuminates flashing green, and then the server temporarily stops distributing calls to your phone. To log out the ACD system, press the **Logout** soft key.

**Note**

It is recommended you configure no more than one ACD key per phone. At any time, at most one ACD key can be in progress on your phone.

## Messages

### Short Message Service (SMS)

You can send and receive text messages using the SIP-T28P IP phone. New text messages can be indicated both acoustically and visually. When receiving a new text message, the phone will play a warning tone, the phone LCD screen will prompt receiving new text messages with the number of waiting messages (example: 3 New Text Message(s)) and a flashing icon.




You can store text messages in your phone's Inbox, Sentbox, Outbox or Draftbox. Each of the boxes can store up to 100 text messages. If the number of the text messages in one box is more than 100, the phone will directly delete the oldest text message in the box.

#### Note

The SMS feature is not available on all servers. Contact your system administrator for more information.

To read a text message:

1. Press **Menu->Messages->Text Message->Inbox**.

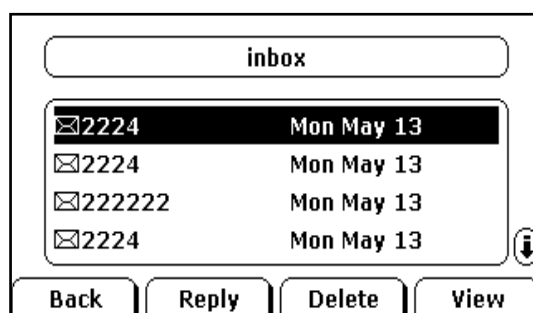


2. Select the desired message and press the **View** soft key.



#### Note

If the phone prompts receiving new text messages, you can also press the **View** soft key to read the new messages directly.

**To send a text message:**

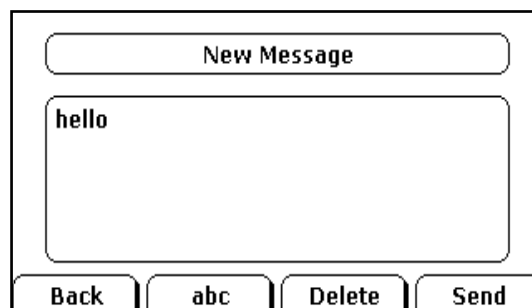1. Press **Menu->Messages->Text Message->New Message**.
2. Compose the new text message. You can press the **abc** soft key to change the input mode.




3. Press the **Send** soft key.
4. (Optional.) Press  or , or the **Switch** soft key to select the desired account from the **From** field.
5. Enter the number you want to send the message to in the **To** field.
6. Press the **Send** soft key to send the message or the **Back** soft key to cancel.

You can also send a text message via web user interface at the path **Features->SMS**.

**To reply a text message:**

1. Press **Menu->Messages->Text Message->Inbox**.
2. Select the desired message and press the **Reply** soft key.
3. Compose the new text message. You can press the **abc** soft key to change the input mode.

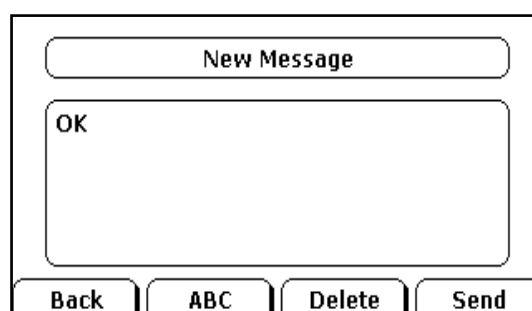


4. Press the **Send** soft key after completing the content.
5. Check the **From** and **To** fields, and then press the **Send** soft key.

**To delete a text message:**


1. Press **Menu->Messages->Text Message->Inbox (Sentbox, Outbox or Draftbox)**.

2. Select the desired message and then press the **Delete** soft key.

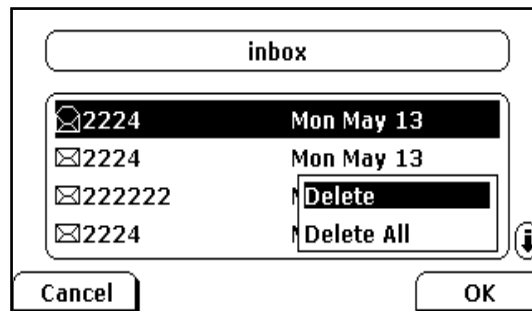

3. Select **Delete** to delete the desired message.

The LCD screen prompts "Delete Message?".

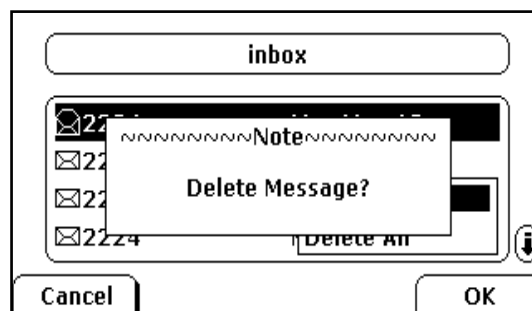

4. Press the **OK** soft key to delete this message or the **Cancel** soft key to cancel.

#### Note

You can also delete all text messages by pressing the **Delete** soft key and then select **Delete All**. For more information, refer to the above steps.

You can also delete a specific message after retrieving by pressing the **Delete** soft key.

## Voice Mail

You can leave voice mails for someone else on the SIP-T28P IP phone. You can also listen to the voice mails stored in a centralized location. When receiving a new voice mail, the phone will play a warning tone and the **MESSAGE** key LED will illuminate and the phone LCD screen will appear a flashing icon.



### Note


The voice mail feature is not available on all servers. Contact your system administrator for more information.

### To leave a voice mail:

You can leave a voice mail for someone else when he/she is busy or inconvenient to answer the call. Follow the voice prompt from the system server to leave the voice mail, and then hang up after completing the voice mail.

### To configure voice mail access codes via phone user interface:

1. Press **Menu->Messages->Voice Mail->Set Voice Mail**.

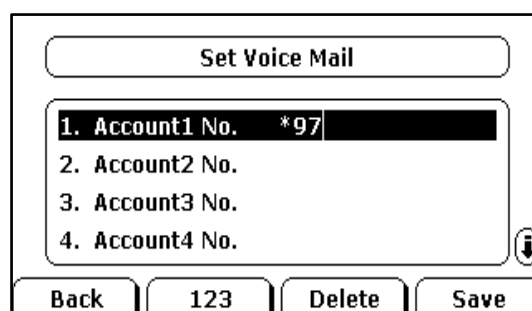


2. Press the navigation keys to highlight the account which you want to set.
3. Press the **123** soft key to select the proper input mode and then enter the voice mail access code (e.g., \*97).
4. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

### Note

Voice mail access code must be predefined on the system server. Contact your system administrator for the more information.



**To listen to the voice mails:**

1. When the phone user interface prompts receiving new voice mails, press  or the **Connect** soft key to dial out the access voice mail access code.
2. Follow the voice prompt to listen to the voice mails.

**Note**


Before listening to the voice mails, make sure the voice mail access code has been configured.

When all new voice mails are retrieved, the MESSAGE key LED will turn off.

**To view the voice mail via phone user interface:**

1. Press **Menu->Messages->Voice Mail->View Voice Mail**.

The phone LCD screen displays the amount of the voice mails that includes new or old voice mails.

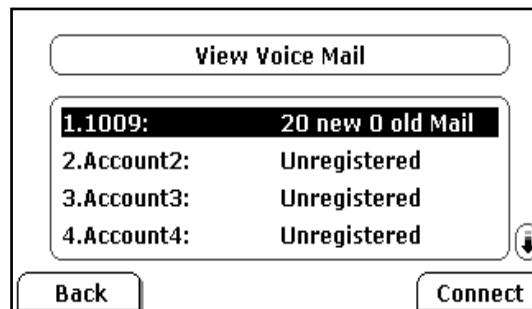

2. Select an account and then press the **Connect** soft key to listen to the voice mails.

## Message Waiting Indicator (MWI)

The SIP-T28P IP phone supports MWI feature when receiving a new voice message. If someone leaves you a voice mail, you will receive a message waiting indicator. MWI will be indicated in three ways: a warning tone, the **MESSAGE** key LED illuminates solid green and an indicator message (including a voice mail icon) appears on the LCD screen. This is cleared only when you retrieve all voice mails or delete them.

For some particular servers, the MWI service is unsolicited. So the SIP-T28P IP phone just needs to handle the MWI messages sent from the server. But for some servers, the MWI service is solicited. In this case, the SIP-T28P IP phone must enable MWI Subscription for MWI messages.

**Note**

MWI service is not available on all servers. Contact your system administrator for more information.

The MWI Subscription parameters you need to know:

Options	Description
<b>Subscribe for MWI</b>	Enable or disable a subscription for MWI service.
<b>MWI Subscription Period</b>	Period of MWI subscription. The IP phone re-sends a SUBSCRIBE request before initial SUBSCRIBE expiration.
<b>Subscribe MWI to Voice Mail</b>	<p>Enable or disable a subscription to the voice mail number for MWI service.</p> <p>To use this feature, you should also configure the voice mail number.</p>

### Note

Whether the phone subscribes the MWI messages to the account or the voice mail number depends on the server. Contact your system administrator for more information.

To configure subscribe for MWI via web user interface:

1. Click on **Account**.
2. Select the desired account from the pull-down list of **Account**.
3. Click on **Advanced**.
4. Select **Enabled** from the pull-down list of **Subscribe for MWI**.
5. Enter the period time in the **MWI Subscription Period (Seconds)** field.

The screenshot shows the Yealink T28 web interface. The 'Account' tab is active, and the 'Advanced' sub-tab is selected. The 'Account' dropdown is set to 'Account 1'. The 'Subscribe for MWI' dropdown is set to 'Enabled', and the 'MWI Subscription Period (Seconds)' field is set to 3600. Other parameters like 'Keep Alive Type', 'Local SIP Port', 'RPort', 'SIP Session Timer T1', 'SIP Session Timer T2', 'SIP Session Timer T4', 'DTMF Type', 'DTMF Info Type', 'DTMF Payload Type', 'Retransmission', 'Voice Mail', 'Caller ID Source', 'Session Timer', 'Session Expires', 'Session Refresher', and 'Send user=phone' are also visible with their respective values and help icons.

6. Click **Confirm** to accept the change.

To enable the **Subscribe MWI to Voice Mail** feature via web user interface:

1. Click on **Account**.
2. Select the desired account from the pull-down list of **Account**.
3. Click on **Advanced**.
4. Select **Enabled** from the pull-down list of **Subscribe MWI To Voice Mail**.
5. Enter the desired voice mail number in the **Voice Mail** field.

The screenshot shows the Yealink T28 web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security'. The 'Account' tab is active, and the 'Advanced' sub-tab is selected. The 'Account' dropdown menu shows 'Account 1'. The 'Subscribe MWI To Voice Mail' feature is set to 'Enabled', and the 'Voice Mail' field contains the number '1234'. Other settings like 'Keep Alive Type', 'SIP Session Timer', and 'DTMF Type' are also visible.

Parameter	Value
Account	Account 1
Keep Alive Type	Default
Keep Alive Interval (Seconds)	30
Local SIP Port	5060
RPort	Disabled
SIP Session Timer T1 (0.5~10s)	0.5
SIP Session Timer T2 (2~40s)	4
SIP Session Timer T4 (2.5~60s)	5
Subscribe Period (Seconds)	1800
DTMF Type	RFC2833
DTMF Info Type	DTMF-Relay
DTMF Payload Type(96~255)	101
Retransmission	Disabled
Subscribe for MWI	Enabled
MWI Subscription Period(Seconds)	3600
Subscribe MWI To Voice Mail	Enabled
Voice Mail	1234
Caller ID Source	FROM
Session Timer	Disabled
Session Expires(30~7200s)	1800
Session Refresher	UAC
Send user=phone	Disabled

**NOTE**  
Advanced  
The Advanced parameters for administrator.

6. Click **Confirm** to accept the change.

The IP phone will subscribe to the voice mail number for MWI service using **Subscribe MWI to WM** feature.

#### Note

You can configure the MWI subscription via web user interface only.



# Troubleshooting

---

This chapter provides general troubleshooting information to help to solve the problems you might encounter when using your SIP-T28P IP phone.

If you require additional information or assistance with your new phone, contact your system administrator.

## Why is the phone LCD screen blank?

- Ensure that the phone is properly plugged into a functional AC outlet.
- Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
- If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
- If the phone is powered from PoE, ensure you use a PoE compliant switch or hub.

## Why does the LCD screen have bad contrast?

You need to adjust the contrast of LCD screen. To adjust the contrast, refer to [Contrast](#) on page 19.

## Why does the phone display "Network Unavailable"?

- Ensure that the Ethernet cable is plugged into the Internet port of the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.

## Why does the phone display "No Service"?

The phone LCD screen prompts "No Service" message when no SIP account registers successfully.

## Why doesn't the phone display time and date correctly?

Check if you have configured the phone to obtain the time and date from the SNTP server automatically. If the phone fails to connect the SNTP server, configure the time and date manually.

## How do I find the basic information of the phone?

Press the **OK** key when the phone is idle to check the basic information of the phone, such as the IP address and firmware version. For more the basic information, refer to [Phone Status](#) on page 14.

### **How to obtain the MAC address of a phone when the phone is not powered on?**

There are three ways to obtain the MAC address of a phone:

- You can ask your supplier for shipping information sheet which includes MAC addresses according to the corresponding PO.
- You can find the MAC address in the label of carton box.
- You can also find the MAC address from the phone's bar code on the back of the phone.

### **Why can't I get a dial tone?**

- Check for any loose connections and that the phone has been installed properly. For the installation instructions, refer to [Phone Installation](#) on page 11.
- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether the dial tone is present for one of the audio modes.

If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

### **Why doesn't the phone ring?**

Check that the ringer volume on the phone. To adjust the ringer volume setting, press the **Volume** key when the phone is idle. For more information, refer to [Volume](#) on page 29.

### **Why can't I receive calls?**

- Check that the SIP registration with your system administrator.
- Check that the DND (Do Not Disturb) mode is turned off on the phone. Refer to [Do Not Disturb \(DND\)](#) on page 84.
- Check that the call forward feature is disabled on the phone. Refer to [Call Forward](#) on page 87.
- Check whether the caller number is stored in the blacklist directory. Refer to [Blacklist](#) on page 44.

### **Why is my handset not working?**

Check that the handset cord is fully connected to both the handset jack on the phone and handset. Refer to [Phone Installation](#) on page 11.

### **Why is my headset not working?**

- Check that the headset cord is fully connected to the headset jack on the phone. Refer to [Phone Installation](#) on page 11.
- Check that the headset mode is activated. Refer to [Headset Mode](#)

[Activation/Deactivation](#) on page 50.

- Check that the headset volume is adjusted to an appropriate level. Refer to [Volume](#) on page 29.

**What will happen if I connect both PoE cable and power adapter? Which has the priority?**

The phones manufactured before February 2010 use the power adapter preferentially, otherwise the phones use PoE preferentially.

**What is the difference between user name, register name and display name?**

Both user name and register name are defined by the server. A user name is used to identify the account while a register name matched with a password is used for authentication if the server requires. Display name is the caller ID that will be displayed on the callee's phone LCD screen. Server configurations may override local configurations.

**Why does the phone play a tone when there is a call on hold? How to disable it?**

When there is a call is on hold, the phone will play a hold tone every 30 seconds. The call hold tone feature is enabled by default. You can disable it or change the interval to play a hold tone via web user interface only.

**To configure the call hold tone and call hold tone delay via web user interface:**

1. Click on **Features->General Information**.
2. Select the **Enabled** or **Disabled** from the pull-down list of **Play Hold Tone**.

3. Enter the desired time (in seconds) in the **Play Hold Tone Delay** field.

The screenshot shows the Yealink T28 web interface with the 'Features' tab selected. The 'General Information' section is expanded, showing various settings. The 'Play Hold Tone Delay' field is set to 30 seconds. Other settings include 'Call Waiting' (Enabled), 'Auto Redial' (Disabled), 'Multicast Codec' (G722), and 'Send Pound Key' (Disabled). A 'NOTE' section on the right provides information about 'Call Waiting', 'Key As Send', and 'Hotline Number'.

4. Click **Confirm** to accept the change.

### Why can't I send a SMS to any other phone?

The SMS feature depends on support from a SIP server. Contact your system administrator for more information.

### How to change the user password?

To change the user password via web user interface:

1. Click on **Security->Password**.
2. Select **user** from the pull-down list of **User Type**.
3. Enter the new user password in the **New Password** field and **Confirm Password** field.

The screenshot shows the Yealink T28 web interface with the 'Security' tab selected. The 'Password' section is expanded, showing the 'User Type' dropdown set to 'user'. The 'Old Password', 'New Password', and 'Confirm Password' fields are visible, with the latter two containing masked characters (dots). 'Confirm' and 'Cancel' buttons are at the bottom. A 'NOTE' section on the right explains the 'User Type' options.



- Click **Confirm** to accept the change.

**Note**

If logging in the web user interface of the phone with the user credential, you need to enter the current user password in the **Old Password** field.

You can change the user password via web user interface only.

### How to make a call using SRTP?

You can enable SRTP to encrypt the audio stream(s) of phone calls. The parties participating in the call should enable SRTP. You can enable SRTP on a per-line basis.

#### To enable SRTP via web user interface:

- Click on **Account**.
- Select the desired account from the pull-down list of **Account**.
- Click on **Advanced**.
- Select the desired value from the pull-down list of **RTP Encryption (SRTP)**.

The screenshot shows the Yealink T28 web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security'. The 'Account' tab is active, and 'Account 1' is selected. The left sidebar has 'Register', 'Basic', 'Codec', and 'Advanced' (selected). The main content area shows various settings for 'Account 1'. The 'RTP Encryption(SRTP)' dropdown is set to 'Forbin SRTP'. Other settings include 'Keep Alive Type' (Default), 'Keep Alive Interval (Seconds)' (30), 'Local SIP Port' (5060), 'RPort' (Disabled), 'SIP Session Timer T1 (0.5~10s)' (0.5), 'PTime(ms)' (20), 'Shared Line' (Disabled), 'Dialog Info Call Pickup' (Disabled), 'Directed Call Pickup Code' (empty), 'Group Call Pickup Code' (empty), 'Distinctive Ring Tones' (Disabled), 'Unregister When Reboot' (Disabled), and 'Out Dialog BLF' (Disabled). There are 'Confirm' and 'Cancel' buttons at the bottom.

- Click **Confirm** to accept the change.


**Note**

The SRTP feature is not available on all servers. Contact your system administrator for more information.

## How to reboot the phone?

To reboot the phone via web user interface:

1. Click on **Settings->Upgrade**.

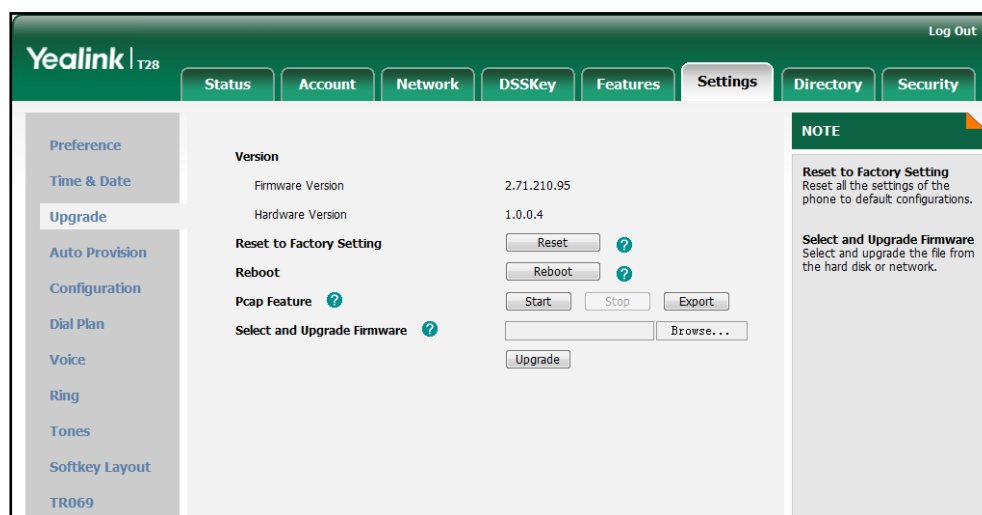

2. Click **Reboot** to reboot the phone.

### Note

You can also long press the X key to reboot the phone directly. Any reboot of the phone may take a few minutes.


## How to export PCAP trace?

We may need you to provide a PCAP trace to help analyze your problem.

To export a PCAP trace via web user interface:

1. Click on **Settings->Upgrade**.
2. Click **Start** to begin recording signal traffic.
3. Recreate the error to be documented in the trace.
4. Click **Stop** to end recording.

- Click **Export** to open file download window, and then save the file to your local system.

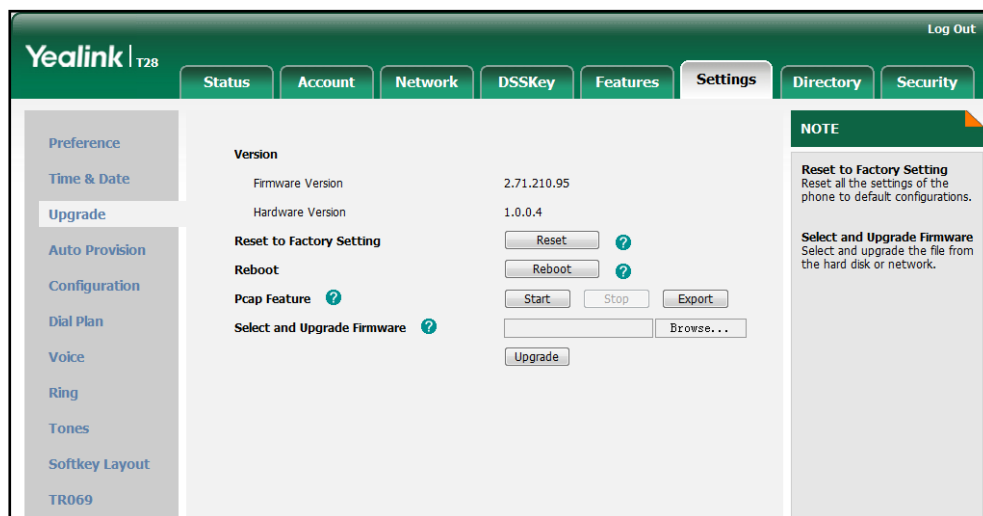

### How to export system log?

We may need you to provide a system log to help analyze your problem.

To export a system log via web user interface:

- Click on **Settings->Configuration**.
- Select **6** from the pull-down list of **System Log Level**.
- Click **Confirm** to accept the change.


The web user interface prompts "Do you want to restart your machine?". The configuration will take effect after reboot.

- Click **OK** to reboot the phone.

After rebooting the phone, the system log level is set as 6, the debug level.

- Mark the **Local** radio box in the **Export System Log** field.

- Click **Export** to open file download window, and then save the file to your local system.

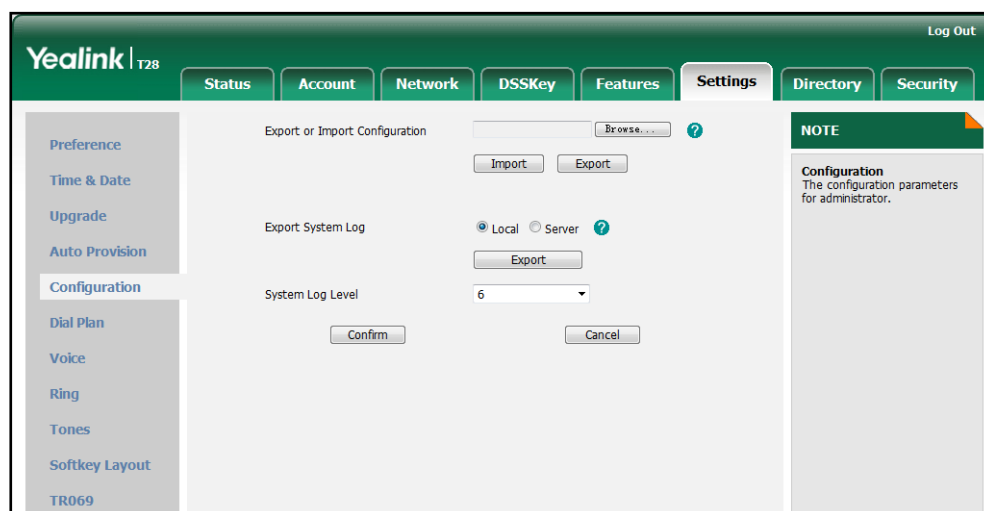


You can also export the system log to a syslog server. Contact your system administrator for more information.

### How to export/import phone configurations?

We may need you to provide the phone configurations to help analyze your problem. In some instance, you may need to import configurations to the phone.

**To export the phone configurations via web user interface:**

- Click on **Settings->Configuration**.
- Click **Export** to open file download window, and then save the file to your local system.

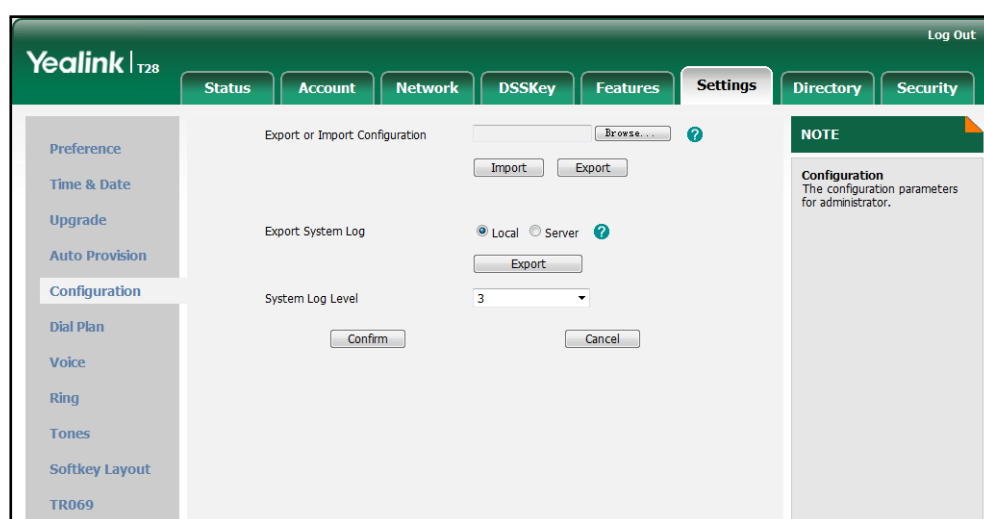

### To import the phone configurations via web user interface:

1. Click on **Settings->Configuration**.
2. Click **Browse** to locate a configuration file from your local system.
3. Click **Import** to import the configuration file.


#### Note

The file format of configuration file must be “.bin”.

### How to upgrade firmware?

#### To upgrade firmware via web user interface:

1. Click on **Settings->Upgrade**.
2. Click **Browse** to locate the firmware from your local system.

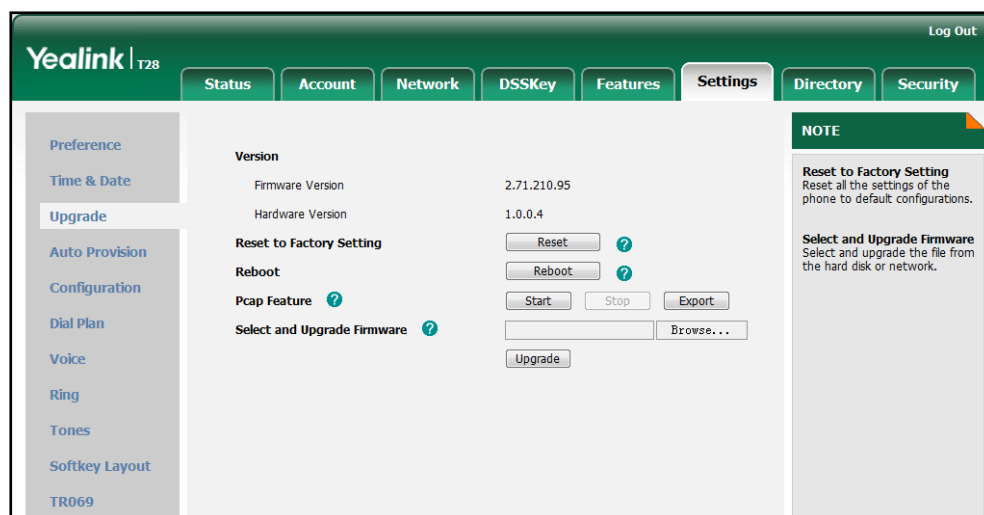

3. Click **Upgrade** to upgrade the firmware.

The web user interface prompts “Firmware of the SIP Phone will be updated. It will take 5 minutes to complete. Please don't power off!”.

4. Click **OK** to confirm upgrading.


### How to reset the phone?

Reset the phone when other troubleshooting suggestions do not correct the problem. You need to note that all customized settings will be overwritten after resetting. We recommend asking your system administrator for advice before resetting the phone.

#### To reset the phone via phone user interface:

1. Press **Menu->Settings->Advanced Settings** (password: admin).

2. Press  or  to scroll to **Reset to Factory**, and then press the **Enter** soft key.  
The LCD screen prompts “Reset to factory settings?”.

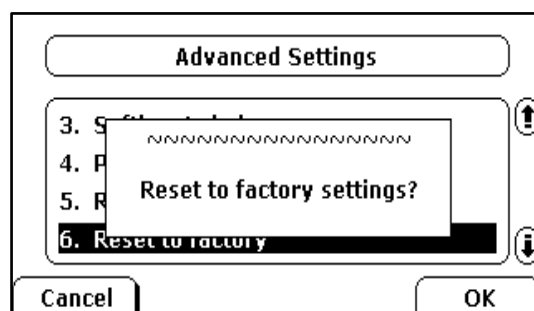

3. Press the **OK** soft key.

The LCD screen prompts “Resetting...Please Wait!”.



The phone LCD screen prompts “Welcom Initializing...Please wait”.



The phone will be reset to factory sucessfully after startup.

**Note**

Reset of your phone may take a few minutes. Do not power off until the phone starts up successfully.

# Regulatory Notices

## Service Agreements

Contact your Yealink Authorized Reseller for information about service agreements applicable to your product.

## Limitations of Liability

TO THE FULL EXTENT ALLOWED BY LAW, YEALINK EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF YEALINK OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT YEALINK'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

## Safety Instructions

**Save these instructions. Read these safety instructions before use!**

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.



### General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean.
- During the process of storage, transportation, and operation, please avoid collision and crash of the device.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Without prior written consent, no organization or individual is permitted to make any change to the structure or the safety design of the device. Yealink is under no circumstance liable to consequences or legal issues caused by such changes.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



### Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.

- Keep the device dry and free of dusts.
- Place the device on a stable and level platform.
- Please place no heavy objects on the device in case of damage and deformation caused by the heavy load.
- Keep at least 10 cm between the device and the closest object for heat dissipation.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.
- Keep the device away from any household appliance with strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.

### **Operating Requirements**

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- Do not tread on, pull, or over-bend any cable in case of malfunction of the device.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately. Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

### **Cleaning Requirements**

- Before cleaning the device, stop using it and disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.



## Appendix A - Time Zones

Time Zone	Time Zone Name
- 11:00	Samoa
- 10:00	United States-Hawaii-Aleutian
- 10:00	United States-Alaska-Aleutian
- 09:00	United States-Alaska Time
- 08:00	Canada(Vancouver, Whitehorse)
- 08:00	Mexico(Tijuana, Mexicali)
- 08:00	United States-Pacific Time
- 07:00	Canada(Edmonton, Calgary)
- 07:00	Mexico(Mazatlan, Chihuahua)
- 07:00	United States-Mountain Time
- 07:00	United States-MST no DST
- 06:00	Canada-Manitoba(Winnipeg)
- 06:00	Chile(Easter Islands)
- 06:00	Mexico(Mexico City, Acapulco)
- 06:00	United States-Central Time
- 05:00	Bahamas(Nassau)
- 05:00	Canada(Montreal, Ottawa, Quebec)
- 05:00	Cuba(Havana)
- 05:00	United States-Eastern Time
- 04:30	Venezuela(Caracas)
- 04:00	Canada(Halifax, Saint John)
- 04:00	Chile(Santiago)
- 04:00	Paraguay(Asuncion)
- 04:00	United Kingdom-Bermuda(Bermuda)
- 04:00	United Kingdom(Falkland Islands)
- 04:00	Trinidad&Tobago
- 03:30	Canada- New Foundland(St.Johns)
- 03:00	Denmark-Greenland(Nuuk)
- 03:00	Argentina(Buenos Aires)
- 03:00	Brazil(no DST)
- 03:00	Brazil(DST)
- 02:00	Brazil(no DST)
- 01:00	Portugal(Azores)
0	GMT
0	Greenland
0	Denmark-Faroe Islands(Torshavn)
0	Ireland(Dublin)
0	Portugal(Lisboa, Porto, Funchal)
0	Spain-Canary Islands(Las Palmas)
0	United Kingdom(London)
0	Morocco
+ 01:00	Albania(Tirane)
+ 01:00	Austria(Vienna)
+ 01:00	Belgium(Brussels)
+ 01:00	Caicos
+ 01:00	Chad
+ 01:00	Croatia(Zagreb)
+ 01:00	Czech Republic(Prague)
+ 01:00	Denmark(Kopenhagen)
+ 01:00	France(Paris)
+ 01:00	Germany(Berlin)

Time Zone	Time Zone Name
+01:00	Hungary(Budapest)
+01:00	Italy(Rome)
+01:00	Luxembourg(Luxembourg)
+01:00	Macedonia(Skopje)
+01:00	Netherlands(Amsterdam)
+01:00	Namibia(Windhoek)
+02:00	Estonia(Tallinn)
+02:00	Finland(Helsinki)
+02:00	Gaza Strip(Gaza)
+02:00	Greece(Athens)
+02:00	Israel(Tel Aviv)
+02:00	Jordan(Amman)
+02:00	Latvia(Riga)
+02:00	Lebanon(Beirut)
+02:00	Moldova(Kishinev)
+02:00	Russia(Kaliningrad)
+02:00	Romania(Bucharest)
+02:00	Syria(Damascus)
+02:00	Turkey(Ankara)
+02:00	Ukraine(Kyiv, Odessa)
+03:00	East Africa Time
+03:00	Iraq(Baghdad)
+03:00	Russia(Moscow)
+03:30	Iran(Teheran)
+04:00	Armenia(Yerevan)
+04:00	Azerbaijan(Baku)
+04:00	Georgia(Tbilisi)
+04:00	Kazakhstan(Aktau)
+04:00	Russia(Samara)
+04:30	Afghanistan
+05:00	Kazakhstan(Aqtobe)
+05:00	Kyrgyzstan(Bishkek)
+05:00	Pakistan(Islamabad)
+05:00	Russia(Chelyabinsk)
+05:30	India(Calcutta)
+06:00	Kazakhstan(Astana, Almaty)
+06:00	Russia(Novosibirsk, Omsk)
+07:00	Russia(Krasnoyarsk)
+07:00	Thailand(Bangkok)
+08:00	China(Beijing)
+08:00	Singapore(Singapore)
+08:00	Australia(Perth)
+09:00	Korea(Seoul)
+09:00	Japan(Tokyo)
+09:30	Australia(Adelaide)
+09:30	Australia(Darwin)
+10:00	Australia(Sydney, Melbourne, Canberra)
+10:00	Australia(Brisbane)
+10:00	Australia(Hobart)
+10:00	Russia(Vladivostok)
+10:30	Australia(Lord Howe Islands)
+11:00	New Caledonia(Noumea)
+12:00	New Zealand(Wellington, Auckland)
+12:45	New Zealand(Chatham Islands)
+13:00	Tonga(Nukualofa)

# Index

## A

About This Guide [v](#)  
 Account Management [60](#)  
 Account Registration [60](#)  
 Adding Contacts [35](#)  
 Adding Groups [33](#)  
 Administrator password [24](#)  
 Anonymous Call [103](#)  
 Anonymous Call Rejection [104](#)  
 Answering Calls [75](#)  
 Area Code [66](#)  
 Attaching Stand [11](#)  
 Audio Settings [29](#)  
 Auto Answer [78](#)  
 Auto Redial [79](#)  
 Automatic Call Distribution (ACD) [121](#)

## B

Backlight [20](#)  
 Basic Network Settings [15](#)  
 Blacklist [44](#)  
 Block Out [67](#)  
 Busy Lamp Field (BLF) [107](#)

## C

Call Completion [80](#)  
 Call Forward [87](#)  
 Call History Management [47](#)  
 Call Hold/Resume [83](#)  
 Call Mute [82](#)  
 Call Park [98](#)  
 Call Pickup [99](#)  
 Call Return [80](#)  
 Call Recording [110](#)  
 Call Transfer [93](#)  
 Call Waiting [94](#)  
 CE Mark Warning [ii](#)  
 Conference [94](#)  
 Contrast [19](#)  
 Contact Management [31](#)  
 Copyright [i](#)  
 Customizing Your Phone [19](#)

## D

Declaration of Conformity [ii](#)  
 Deleting Contacts [38](#)  
 Deleting Groups [35](#)  
 Dial-now [64](#)  
 Dial Plan [62](#)  
 Directory [32](#)  
 Do Not Disturb (DND) [84](#)  
 Documentations [8](#)

DSS Keys [51](#)  
 Dual Headset [51](#)

## E

Editing Contacts [37](#)  
 Editing Groups [34](#)  
 Emergency Number [68](#)  
 Ending Calls [77](#)

## G

Getting Started [9](#)  
 General Settings [19](#)

## H

Hardware Component Instructions [1](#)  
 Headset Mode Activation/Deactivation [50](#)  
 Headset Prior [50](#)  
 Headset Use [49](#)  
 Hot Desking [112](#)  
 Hot Line [70](#)

## I

Icon Instructions [3](#)  
 Idle screen [17](#)  
 Importing/Exporting Contact lists [42](#)  
 In This Guide [v](#)  
 Incoming intercom call features [114](#)  
 Intercom [112](#)

## K

Key as Send [25](#)  
 Keypad Lock [25](#)

## L

Language [21](#)  
 LED Instructions [5](#)  
 Limitation of Liability [141](#)  
 Line Keys [59](#)  
 Live Dialpad [69](#)  
 Local Conference [95](#)  
 Local Directory [33](#)  
 Logo Customization [49](#)

## M

Memory Keys [52](#)  
 Messages [123](#)  
 Message Waiting Indicator [127](#)  
 Multicast Paging [116](#)  
 Multiple Line Keys per Account [61](#)

Music on Hold [120](#)

## N

Network Conference [96](#)

Network Connection [11](#)

No answer Forward [87](#)

## O

Outgoing intercom Calls [114](#)

Overview [1](#)

## P

Packaging Contents [9](#)

Phone Initialization [14](#)

Phone Installation [11](#)

Phone Status [14](#)

Phone User Interface [6](#)

Placing Calls [73](#)

Placing Calls to Contacts [39](#)

Programmable Keys [59](#)

## R

Receiving RTP Stream [118](#)

Recent Call In Dialing [77](#)

Redialing Numbers [77](#)

Registration [17](#)

Regulatory Notices [141](#)

Remote Phone Book [44](#)

Replace Rule [63](#)

Ring Tones [29](#)

## S

Safety Instructions [141](#)

Search Source List in Dialing [41](#)

Searching for Contacts [40](#)

Semi-attended Transfer [93](#)

Sending RTP Stream [116](#)

Service Agreements [141](#)

Short Message Service (SMS) [123](#)

System Customizations [49](#)

## T

Time and Date [22](#)

Time Zones [143](#)

Troubleshooting [131](#)

## V

Voice Mail [126](#)

Volume [29](#)

## W

Warranty [ii](#)

Web User Interface [6](#)

WEEE Warning [iii](#)