

Yealink T3X-V70 Release Notes

1. Introduction

1. Firmware Version: 38.0.0.115 upgrade to 38.70.0.60
32.0.0.115 upgrade to 32.70.0.60
2. Product Name: SIP-T38G/ T32G
3. Release Date: June 19, 2012

1.1 Important Notes:

1. The configuration files, their respective parameters and defaults, as well as the provisioning methods have been unified between T2X, T3X and VP530, but extensively modified compared to previous releases. SOME OF THESE CHANGES ARE NOT BACKWARD COMPATIBLE with configuration parameters from previous software releases.

Before installing the software, it is highly recommended that you first read "V70 upgrading manual "completely.

Note: T2X V70 will be ready months later.

2. Upgrading T2X, T3X to release V70 requires a more complex procedure than is typical. This procedure is documented in "V70 upgrading manual". Please consult this document and download related tool before starting the upgrade.
3. T2X, T3X products running release V70 or later CANNOT BE DOWNGRADED TO EARLIER SIP SOFTWARE OR BOOTROM SOFTWARE.
4. Configuration files for release V70 or earlier BootRom are distinguished:

M1 stands for T2X old provision template M2 stands for T3X old provision template M7 stands for unified provision template with T2X/T3X/VP530					
	M1	M2	M7	M2+M7	M1+M7
T3X-V70	No	Yes	Yes	Yes	No

Version	Editor	Modification Time
V 1.0	Tony	2012/6/19

2. New Features

1. Unified Auto Provisioning mechanism (M7);
2. Added XML Browser and Push XML function;
3. Added Base Mode of Hot Desking function;
4. Added Call Pickup function;
5. Added visual alert and audio alert mechanism for BLF pickup function;
6. Added LCD security alert mechanism for Action URI;
7. Added match Outgoing/Incoming Caller ID via Remote Phonebook function;
8. Added Phone Lock function;
9. Added receive authorized call function on emergency situation when DND is on;
10. Added Use Static DNS function;
11. Added Picture CLIP function;
12. Added label configurable function for Softkeys;
13. Added T38G display EXP38, EXP39 and EHS36 hardware and firmware version function;
14. Added Auto Provisioning code function;

3. Optimization

1. Optimized the default input method of LDAP;
2. Optimized the Phone Lock function on the scenario when there comes a voicemail;
3. Added the configurable of handset and handfree Send Volume via Web UI;
4. Added the configurable of Transfer function when it is set on DSS Key;
5. Adjust the option layout of the "Phone→Features" page;
6. Added to support "dev-TAP" mode for OpenVPN (ID=18987);

4. Bug Fixes

1. Fixed the T38G incompatible bug with Jabra that when there is an incoming call, the headset could not pick it up (ID=18874).
2. Fixed can't update unified issue if only modify one of the Auto Provisioning templates at a time, such as common.cfg or mac.cfg (ID=18174).
3. Fixed call establishing failed issue when a call from internal extension to outbound extension. (ID=17574).
4. Fixed call establishing failed issue when a call from internal extension to outbound extension on 3CX server (ID=14342).
5. Fixed the Http client timeout not enough issue(ID=18691);
6. Fixed 802.1x configuration could not affect via auto provisioning issue(ID=18594);
7. Fixed T32G rebooting white screen issue after auto provisioning(ID=18212);
8. Fixed the WAN port's enabling 802.1x and VLAN feature which affect the PC port issue(ID=17002);
9. Fixed keypad lock function which couldn't lock the screen on Voicemail/Missed call/Push XML pages(ID=18925);
10. Fixed daylight saving time wrong issue(ID=18981/18972/18957/19007);
11. Fixed "check-sync;reboot=true" message could not be handled issue which received during a conversation(ID=18690);
12. Fixed BLF key lost efficacy issue when BLF executed Pickup operation(ID=19008);
13. Fixed LCD font did not clear issue when using XML Browser feature(ID=18734);
14. Fixed registered failed issue(ID=18064/17677);
15. Fixed the incoming call is forwarded issue when pressed BLF key(ID=16111);
16. Fixed account password couldn't support ! (exclamation mark) issue(ID=14597);
17. Fixed faulty indicating "No data to import" issue when imported *.csv contacts file which exported from Outlook(ID=12190);
18. Fixed the config.bin file about visible of password issue(ID=11175);
19. Fixed couldn't reboot issue when received "check-sync" message from Broadsoft server(ID=18990);
20. Fixed the lack of options: "Account, Ring, Group, Photo" on the previewing page when importing *.csv contacts file(ID=12934);
21. Fixed the call hung issue when there comes an incoming call on Russian(ID=11514);
22. Fixed the faulty password issue when modified the admin password via auto Provisioning(ID=12870);
23. Fixed there is no "Search" trigger key when using LDAP to search for a contact(ID=11197);
24. Fixed faulty DTMF issue(ID=13772);
25. Fixed caller_ID faulty update issue when receiving contact info on Re_Invite message(ID=12328);
26. Fixed audio delay issue which result from DNS query(ID=11661);
27. Fixed firmware upgraded failed issue via Web UI(ID=18849);
28. Fixed IVR audio missing issue when call a Contact Center(ID=11159);

- 29. Fixed configure BLF via auto provisioning needs reboot issue(ID=14250);
- 30. Fixed Jabra920 wireless headset could not turn back to idle issue when after the conversation finished(ID=17682);
- 31. Fixed T32G account could not register issue(ID=17437);

5. Instruction (New Features)

1. Unified Auto Provisioning mechanism (M7)

Instruction: For the details, please refer to “Yealink Auto Provisioning User Guide.pdf”.

2. Added XML Browser and Push XML function

Instruction: For the details, please refer to the User Manual and XML application documents.

3. Added Base Mode of Hot Desking function


Instruction: For the details, please refer to “Yealink SIP-T3xG User Guide.pdf” about Hot Desking function.

4. Added Call Pickup function

Instruction: For the details, please refer to “Yealink SIP-T3xG User Guide.pdf” about Call Pickup function.

Supplement: it allows you to add Call Pickup shortcuts on the softkeys.

Path: Phone→Softkey Layout

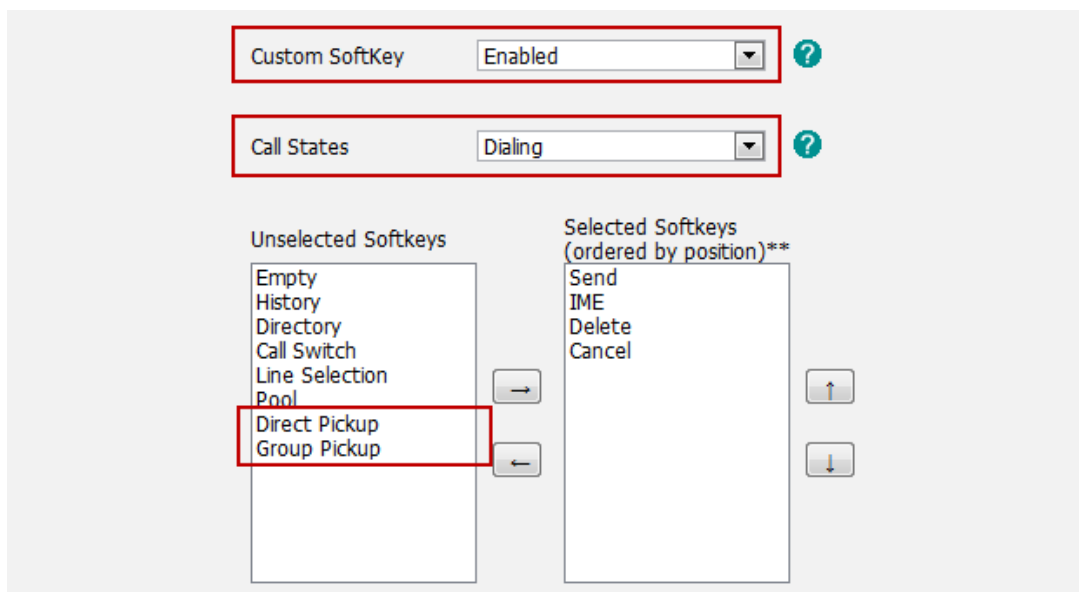


Call pickup shortcuts showing on Softkeys below (example):



5. Added visual alert and audio alert mechanism for BLF pickup function


Instruction: For the details, please refer to “Yealink SIP-T3xG User Guide.pdf” about Busy lamp Field (BLF) function.

- 1) **Visual alert for BLF Pickup:** A DSS key is configured as BLF with Pickup feature, when the monitored account comes an incoming call, T3x will display the screen below to remind you. At this moment, if you press the “DPickup” key, you will pick up the incoming call. It is disabled by default.

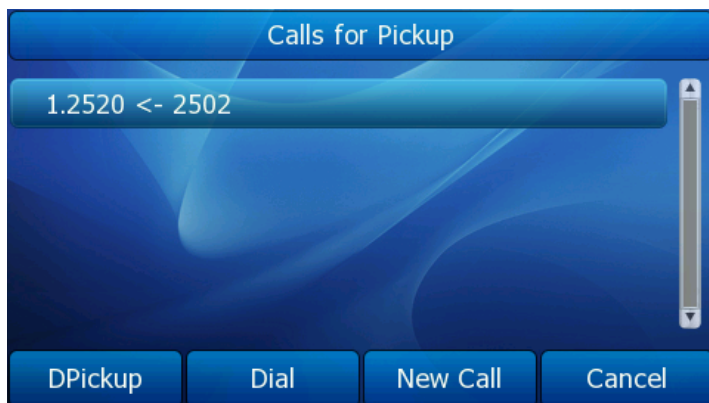

- 2) **Audio alert for BLF Pickup:** A DSS key is configured as BLF with Pickup feature, when the monitored account comes an incoming call, T3x will ring out a “beep” for once to remind you. It is disabled by default.

Path: Phone→Features→Call Pickup

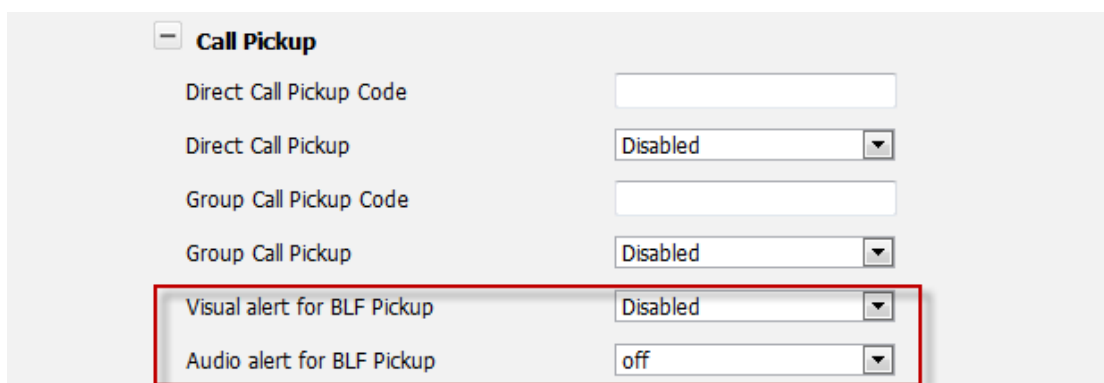

6. Added LCD security alert mechanism for Action URI

Instruction:

Trusted Action URI Server List:

It is empty by default, it stands for forbidding any IP or server to remote control the device.

When it is configured with a specific IP address and the host machine (with the IP) executes an Action URI command to control the device, T3x LCD will pop up a warning box reminding you whether allows the device to be remote controlled or not?

- 1) If you press the “OK” key, the device will be controlled;
- 2) If you press “Block”, the device will block the control.

Path: Phone→Features→Remote Control Security→Trusted Action URI Server List

Remote Control Security


Push XML Server IP

XML SIP Notify

Block XML In Calling

Trusted Action URI Server List

LCD pops up a warning box showing below:

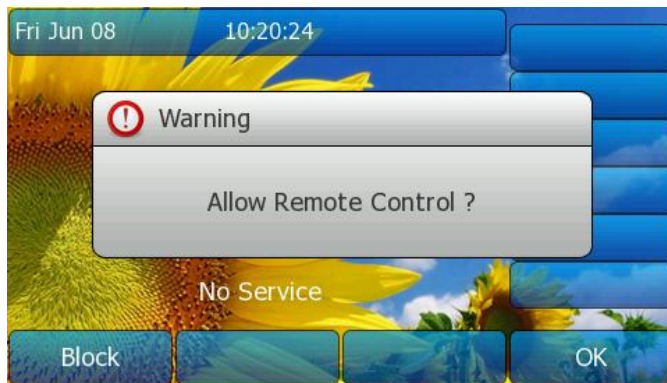

Server List format:

- 1) Supported one or more independent IP addresses which are separated by commas. For example, when you fill in the blank with "10.1.3.66,192.168.1.20", only the user with 10.1.3.66 and 192.168.1.20 can be allowed to control the phone via Active URI.
- 2) Supported continuous IP segment, IP addresses within it are allowed to control the phone. The format of IP segment is *.*.*.*, * stands for 0~255. For example:
10.1.3.* stands for IP address range from: 10.1.3.0~10.1.3.255.
10.1.*.* stands for IP address range from: 10.1.0.0~10.1.255.255.

7. Added match Outgoing /Incoming Caller ID via Remote Phonebook function

Instruction:

For the details, please refer to "Yealink SIP-T3xG User Guide.pdf" about Remote Phonebook function.

When the user dials out or picks up an incoming call, the device will match the Outgoing or Incoming caller ID via remote phonebook and display it on the LCD.

Note: it can only match the contacts downloaded from the first remote phonebook URL. The function is disabled by default. You can also define the Load Remote Phonebook Interval.

Path: Phone→Features→General Information→ Match Remote Phonebook

Match Remote Phonebook

Load Remote Phonebook Interval (120~2592000s)

8. Added Phone Lock function

Instruction: For the details, please refer to "Yealink SIP-T3xG User Guide.pdf" about Keypad Lock function.

Configure via Auto Provisioning(M7)

#0-disable(default), 1-Menu Key, 2-Function Key, 3-All Keys, 4-Lock&Answer

phone_setting.lock =

Phone_Lock.Unlock_PIN =

Phone_Lock.lock_time_out =

Emergency.Num=

9. Added receive authorized call function on emergency situation when DND is on

Instruction: For the details, please refer to “Yealink SIP-T3xG User Guide.pdf” about Do Not Disturb function.

It supports receiving authorized call on emergency situation when DND is on.

Path: Phone→Features→Do Not Disturb

10. Added Use Static DNS function

Instruction:

- 1) When “Use Static DNS” is set as disable, DNS will update via DHCP;
- 2) When “Use Static DNS” is set as enabled, DNS will update via Static IP client.

Path: Network→Advanced→Use Static DNS

11. Added Picture CLIP function

Instruction: Picture CLIP function allows the device to download and display PBX-delivered Caller Picture when there is an incoming call. The Caller Picture is downloaded from an URL which sent by PBX via SIP Invite header: “caller-Image”. The feature needs PBX’s support.

Path: Account X→Advanced→Use PBX-delivered Caller Picture

12. Added label configurable function for Softkeys

Instruction: added label configurable function for Softkeys.

Path: DSS Key→Programmable Key→SoftKey1~4

Key	Type	Line	Value	Label
SoftKey1	History	History		
SoftKey2	Directory	Auto		
SoftKey3	DND	Auto		
SoftKey4	Menu	Auto		

13. Added T38G display EXP38, EXP39 and EHS36 hardware and firmware version function

Instruction:

When you connect EXP38, EXP39 or EHS36 to T38G and access the Web UI, you will find hardware and firmware version info on the status page. If there is no EXP/EHS machines connect to T38G, the Web UI will not display the info.

Path: Web UI→Status→EXP

EXP ?	
EXP39 1 Hard Version	32.0.0.0
EXP39 1 Soft Version	5.16.0.0

Version Info:

Product Name	Hardware	Old Firmware Version	Latest Firmware Version
EHS36	48.0.0.0	0.16.0.0	1.16.0.0
EXP39	32.0.0.0	4.16.0.0	5.16.0.0
EXP38	16.0.0.0	4.17.0.0	5.17.0.0

14. Added Auto Provisioning code function

Instruction: The feature is for configuring code for auto provision URL. When there's no account registered, press code in idle screen, it will pop up a window to ask whether update the phone from the corresponding server_address.

- 1) Press "OK" to download the configuration file from the server_address;
- 2) press "Cancel" to return to idle screen.

Path: Configure following items in the configuration file by auto provisioning(M7):

"X" ranges from 1 to 50

autoprovision.X.name =

autoprovision.X.code =

autoprovision.X.url =

autoprovision.X.user =

autoprovision.X.password =

autoprovision.X.com_aes =

autoprovision.X.mac_aes =

6. Instruction (Optimization)

1. Optimized the default input method of LDAP

Instruction:

- 1) On dialing interface, the default input method is "123";
- 2) When press DSS key to access LDAP, the default input method is "abc".

2. Optimized the Phone Lock function on the scenario when there comes a voicemail

Instruction:

When Phone Lock function is set as "Menu key" and it is locked originally, then there comes a voicemail, we can allow you to read the voicemail by pressing "MESSAGE" key directly.

3. Added the configurable of handset and handfree Send Volume via Web UI

Instruction:

HandsetSendVolume(1~53) : it defines the send volume of handset. The configuration needs reboot before affecting.

HandfreeSendVolume(1~53): it defines the send volume of handfree. The configuration needs reboot before affecting.

Path: Phone → Features → Audio Settings

Audio Settings	
Call Waiting Tone	Enabled
Send Sound	Enabled
Button Sound	Enabled
ReDialTone	
Headset Send Volume(1~53)	30
Handset Send Volume(1~53)	25
Hand freeSend Volume(1~53)	35
Ringer Device for Headset	Use Speaker

Auto Provisioning configuration(M7):

#Configure the sending volume of speaker, handset and headset, ranges from 1 to 53 (25, 35, 29 by default);

#Require reboot;

voice.handfree_send =

voice.handset_send =

4. Added the configurable of Transfer function when it is set on DSS Key

Instruction: When the DSS key is set as "Tran",

- 1) If the option "Transfer Mode via DSSkey" is set as "Blind Transfer", it will execute Bind Transfer;

- 2) If the option “Transfer Mode via DSSkey” is set as “Attended Transfer”, it will execute Attended Transfer;
- 3) If the option “Transfer Mode via DSSkey” is set as “New Call”, it will turn to dial page which is available for you to start a new call.

Path: Phone→Features→Transfer Settings→Transfer Mode via DSSkey

Transfer Settings	
Blind Transfer OnHook	Enabled ?
Semi-Attend Transfer	Enabled ?
Attend Trans OnHook	Enabled ?
Transfer on Conference Hang up	Disabled ?
Transfer Mode via DSSkey	Bind Transfer

5. Adjust the option layout of the “Phone→Features” page

Path:

Yealink

Status Account Network DSS Key **Phone**

Preference

Features

Upgrade

Auto Provision

Configuration

Dial Plan

Voice

Ring

Tones

SMS

- + Forward ?
- + Do Not Disturb
- + General Information
- + Audio Settings
- + Intercom Settings
- + Transfer Settings
- + Call Pickup
- + Remote Control Security
- + Phone Lock
- + Auto Call Distribution Settings

Confirm Cancel

6. Added to support “dev-TAP” mode for OpenVPN (ID=18987)

Instruction: “dev-TAP” mode works on data link layer, support multi-lane of OpenVPN.