

ASPIRE 1N0 系列

快速指南

本公司对于本手册内容不提供任何明示或暗示的陈述或保证，特别是对于针对特殊目的的适销性或适用性不提供任何暗示保证。本公司对本手册中的错误（如印刷错误或不实之处等）不承担责任。

本出版物的内容将定期变动，恕不另行通知。更改的内容将会补充到本出版物，且会在本手册发行新版本时予以付梓印刷。本公司不做任何明示或默许担保，包括本手册内容的适售性或符合特定使用目的，本公司将一律否认。

在下列预留的空白处，记录下型号、序列号、购买日期及购买地点。型号及序列号可以在电脑外贴的标签上找到。与电脑元件相关的资料应包括序列号、型号及购买信息。

未经宏碁股份有限公司书面同意，不得对本出版物的任何部分以任何方式，包含电子、机械、复制、翻录或其它的方式，进行复制、重制或传播。

Aspire one 系列笔记本电脑

产品型号：_____

产品序号：_____

购买日期：_____

购买地点：_____

Acer 和 Acer 标识为宏碁股份有限公司的注册商标。本出版物中所用之其它公司之产品名称及商标仅供说明之用，并皆为各公司之所属商标。

Federal Communications Commission Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The following local manufacturer/importer is responsible for this declaration:

Product name:	Notebook PC
Model number:	KAV10
Machine type:	Aspire one
SKU number:	Aspire one-xxxxx ("x" = 0 - 9, a - z, or A - Z)
Name of responsible party:	Acer America Corporation
Address of responsible party:	333 West San Carlos St. San Jose, CA 95110 USA
Contact person:	Acer Representative
Tel:	1-254-298-4000
Fax:	1-254-298-4147

CE Declaration of Conformity

We,

Acer Computer (Shanghai) Limited
3F, No. 168 Xizang Medium Road, Huangpu District,
Shanghai, China

Contact person: Mr. Easy Lai

Tel: 886-2-8691-3089, Fax: 886-2-8691-3000

E-mail: easy_lai@acer.com.tw

Hereby declare that:

Product: Notebook PC	Trade name: Acer
Model number: KAV10	Machine type: <i>Aspire one</i>
SKU number: <i>Aspire one</i> -xxxxx ("x" = 0 - 9, a - z, or A - Z)	

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue complying with the requirements.

EMC Directive 2004/108/EC as attested by conformity with the following harmonized standards:

- EN55022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B
- EN55024:1998 + A1:2001 + A2:2003
- EN55013:2001 + A1:2003 + A2:2005 (Applied to products with TV function)
- EN55020:2007 (Applied to products with TV function)
- EN61000-3-2:2000 + A2:2005, Class D
- EN61000-3-3:1995 + A1:2001 + A2:2005



Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standards:

- EN60950-1:2001 + A11:2004
- EN60065:2002 (applies to product with TV function)

Council Decision 98/482/EC (CTR21) for pan-European single terminal connection to the Public Switched Telephone Network (PSTN).

RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standards:

- | | |
|------------------------------------|-----------------------|
| • Article 3.1(a) Health and Safety | • Article 3.1(b) EMC |
| • EN60950-1:2001+ A11:2004 | • EN301 489-1 V1.4.1 |
| • EN50371:2002 | • EN301 489-3 V1.4.1 |
| | • EN301 489-17 V1.2.1 |
| • Article 3.2 Spectrum Usages | |
| • EN300 220-3 V1.1.1 | |
| • EN300 328 V1.6.1 | |
| • EN300 440-2 V1.1.2 | |
| • EN301 893 V1.2.3 | |

CE Issued Date: 29 February 2008

Easy Lai

Easy Lai / Director
Acer Computer (Shanghai) Limited

29 Feb 2008

Date

入門指南



图例仅供参考。产品实际规格将以用户实际购买为准。

使用入门

感谢您选购 Acer 笔记本电脑，让它满足您随时随地使用计算机的需要。

用户指南

为帮助您使用 Acer 笔记本电脑，我们专门设计了一套指南*：

首先，“快速指南”将指导您对电脑进行设置。

“应用手册”将向您介绍新电脑的基本特性和功能。要了解关于您的电脑如何能够帮助您提高工作效率的详细信息，请参见“AcerSystem 用户指南”。本指南包含了诸如系统实用程序、数据恢复、扩展选项和疑难解答等详细信息。此外，它还包含了保修信息和笔记本电脑的一般规则和安全注意事项。我们也提供了 PDF 格式的用户指南并已预先安装在本电脑中供用户参考，有关安全和舒适性的信息。



注意：查看 PDF 文件需要安装 Adobe Reader。如果您的电脑上没有安装 Adobe Reader，单击“AcerSystem 用户指南”将会先启动 Adobe Reader 安装程序。依屏幕上指导完成安装程序。有关如何使用 Adobe Reader 的说明，请参见“帮助和支持”菜单。



* 重要须知：请注意，本手册中所提及的指南，无论是印刷或电子版本，均仅供参考，“AcerSystem 用户指南”中包含的特定保证信息除外。指南中包含的任何信息均不构成 Acer 对您所购产品的陈述或保证。Acer 对指南中包含的错误不承担任何责任。


网络配置

本指南将帮助您配置 LAN 和无线网络设置，以便连接至 Internet。

设置 LAN 连接

只需将 LAN 线缆插入以太网 (RJ-45) 端口即可。以太网端口位置请参见第 10 页的“左视图”。

设置无线连接

- 1. 请使用 *Aspire one* 正面的开关打开无线 LAN。
- 2. 单击系统托盘上的  图标，选择要连接的无线接入点。



插入 3G SIM 卡

取出电池并将 3G SIM 卡小心地插入 3G SIM 卡槽。请参见第 11 页的“底视图”以了解 3G SIM 卡槽的位置。

了解 *Aspire one*


按照初学者入门章节中的图示完成计算机安装后，让我们带您认识一下您新购的 Acer 笔记本电脑。









俯视图


#	图标	项目	描述
1		Acer Crystal Eye 摄像头	网络相机，用于视频通信。
2		麦克风	用于录音的内置麦克风。
3		显示屏	也称液晶显示屏 (LCD)，用于显示电脑的输出内容。
4		蓝牙通信开关/指示灯	启用/禁用蓝牙通信功能。根据亮灯情况可检视目前蓝牙通信的状态。(仅限部分型号)
5		状态指示灯	通过亮灭显示计算机功能及组件状态的发光二极管 (LED)。
6		键盘	将数据输入到电脑中。
7		触控板	一种触摸式定位设备，功能和电脑鼠标相同。
8		电源指示灯	用于显示电脑电源的状态。
9		单击按钮 (左和右)	左右按钮的功能与鼠标的左右键相同。
10		无线 LAN 通信指示灯	根据亮灯情况可检视目前无线网络通信的状态。
11		电源按钮/指示灯	用于打开和关闭计算机电源。

前视图




#	图标	项目	描述
1		无线通信开关	启用/禁用无线功能。

左视图

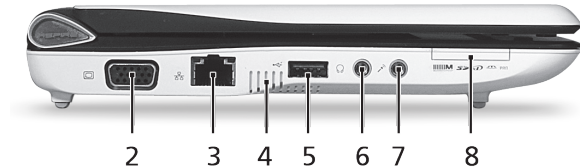


2		外接显示器 (VGA) 端口	连接显示设备 (例如外接显示器、LCD 投影机)。
3		以太网 (RJ-45) 端口	连接 10/100 以太网。
4		通风槽和冷却风扇	可使电脑在长时间使用后仍保持低温。 注意：请勿遮挡风扇口。
5		USB 2.0 端口	连接 USB 2.0 设备 (例如 USB 鼠标)。
6		耳机/扬声器/音频输出插孔	连接音频输出设备 (例如：扬声器、耳机)。
7		麦克风输入插孔	连接外置麦克风。
8		多合一读卡器	可支持安全数码卡 (SD)、多媒体卡 (MMC)、记忆棒 (MS)、PRO 记忆棒 (MS PRO) 及 xD-Picture 卡 (xD)。注意：轻推取下/安装存储卡。一次只能使用一张卡。



右视图

#	图标	项目	描述
9		USB 2.0 端口	连接 USB 2.0 设备 (例如 USB 鼠标)。
10		直流电源输入插孔	连接 AC 适配器。
11		Kensington 安全锁插槽	连接 Kensington 兼容电脑安全锁。

后视图 & 底视图

12		电池槽	安装电池组。 注意：图中所示电池仅供参考。根据购买的型号，您的计算机所配电池可能有所不同。
13		电池锁	可固定锁紧电池组。
14		通风槽和冷却风扇	可使电脑在长时间使用后仍保持低温。 注意：请勿遮挡风扇口。
15		电池释放门锁	释放电池门锁可取下电池组。
16		3G SIM 卡槽	支持 3G SIM 卡进行 3G 连接。 (仅限部分型号)

