

ASPIRE 1nE 系列

快速使用指南

對於本文之任何明示或暗示內容，本公司不做任何聲明或保證，亦明確拒絕提供任何保證、可交易性、或針對任何特定目的之適用性。本公司不為此出版品中出現的任何錯誤 (例如錯字或與事實不符等) 負責。

本公司有權定期對本使用手冊的資訊進行變更，且恕不另行通知。所有變更資訊將收編於本使用手冊的新版本中，或收編於補充文件和出版品內。本公司不對本使用手冊內容提供任何明示或暗示的陳述或保證，特別是適合某項特定目的或通路的隱喻保證，本公司將一律否認。

請在下列空白處填入產品型號、產品序號、購買日期及購買地點等資訊。您可在黏貼於電腦的標籤找到產品序號與型號。本電腦相關資訊需包括產品序號、產品型號及購買資訊。

未獲得宏碁股份有限公司事前書面許可前，本使用手冊之任何部分皆不可以任何方式，包括電子、機械、影印、錄製或其他方式，加以複製、重製或傳送。

Aspire one 系列筆記型電腦

產品型號：_____

產品序號：_____

購買日期：_____

購買地點：_____

Acer 及 Acer 標誌為宏碁股份有限公司所有。所有商標及註冊商標均屬於各所屬公司。

Federal Communications Commission Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The following local manufacturer/importer is responsible for this declaration:

Product name:	Notebook PC
Model number:	KAV10
Machine type:	Aspire one
SKU number:	Aspire one-xxxxx ("x" = 0 - 9, a - z, or A - Z)
Name of responsible party:	Acer America Corporation
Address of responsible party:	333 West San Carlos St. San Jose, CA 95110 USA
Contact person:	Acer Representative
Tel:	1-254-298-4000
Fax:	1-254-298-4147

CE Declaration of Conformity

We,

Acer Computer (Shanghai) Limited
3F, No. 168 Xizang Medium Road, Huangpu District,
Shanghai, China

Contact person: Mr. Easy Lai

Tel: 886-2-8691-3089, Fax: 886-2-8691-3000

E-mail: easy_lai@acer.com.tw

Hereby declare that:

Product: Notebook PC	Trade name: Acer
Model number: KAV10	Machine type: <i>Aspire one</i>
SKU number: <i>Aspire one</i> -xxxxx ("x" = 0 - 9, a - z, or A - Z)	

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue complying with the requirements.

EMC Directive 2004/108/EC as attested by conformity with the following harmonized standards:

- EN55022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B
- EN55024:1998 + A1:2001 + A2:2003
- EN55013:2001 + A1:2003 + A2:2005 (Applied to products with TV function)
- EN55020:2007 (Applied to products with TV function)
- EN61000-3-2:2000 + A2:2005, Class D
- EN61000-3-3:1995 + A1:2001 + A2:2005



Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standards:

- EN60950-1:2001 + A11:2004
- EN60065:2002 (applies to product with TV function)

Council Decision 98/482/EC (CTR21) for pan- European single terminal connection to the Public Switched Telephone Network (PSTN).

RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standards:

- | | |
|--|---|
| <ul style="list-style-type: none">• Article 3.1(a) Health and Safety<ul style="list-style-type: none">• EN60950-1:2001+ A11:2004• EN50371:2002 | <ul style="list-style-type: none">• Article 3.1(b) EMC<ul style="list-style-type: none">• EN301 489-1 V1.4.1• EN301 489-3 V1.4.1• EN301 489-17 V1.2.1 |
| <ul style="list-style-type: none">• Article 3.2 Spectrum Usages<ul style="list-style-type: none">• EN300 220-3 V1.1.1• EN300 328 V1.6.1• EN300 440-2 V1.1.2• EN301 893 V1.2.3 | |

CE Issued Date: 29 February 2008


Easy Lai

Easy Lai / Director
Acer Computer (Shanghai) Limited

29 Feb 2008

Date

入門者專用...

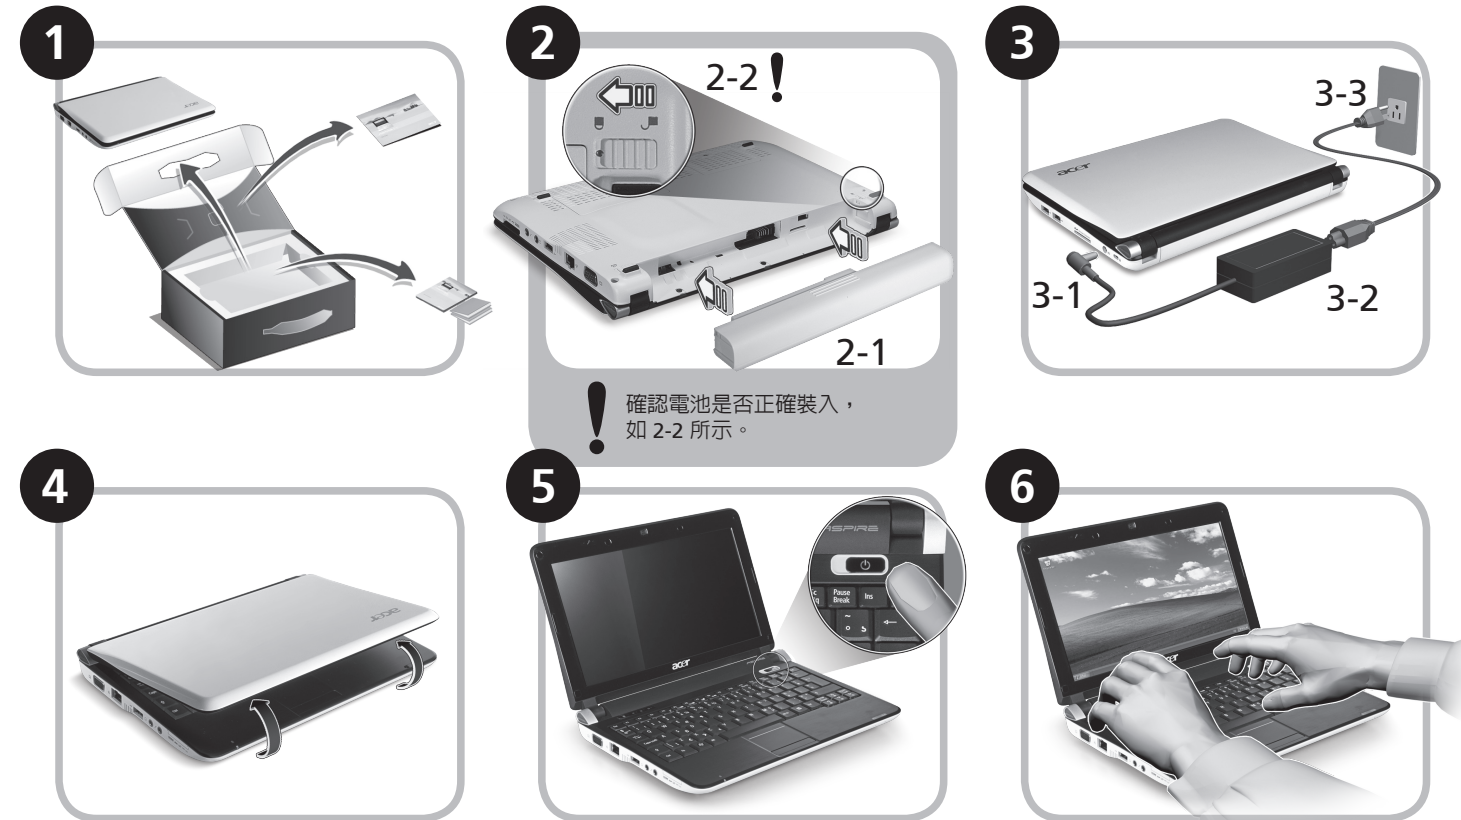

所有插圖僅供參考。實際規格以出貨商品為主。

初步設定

感謝您選擇 Acer 筆記型電腦做為滿足您行動運算需求的最佳首選。

指南

為了協助您瞭解如何使用 Acer 筆記型電腦，我們設計了一系列的指南*：

首先，「快速指南」可協助您開始設定電腦。

「應用程式手冊」，本手冊簡介您所添購之新電腦的基本特色和功能。如需深入瞭解如何讓您的電腦協助您提高生產力，請參閱「AcerSystem 使用手冊」。本指南包含系統公用程式、資料復原、擴充選項和疑難排解等主題的詳細資訊。此外，本指南也包含筆記型電腦的保固資訊以及一般規範和安全注意事項。其是以「可攜式文件格式」(PDF) 提供，並已預載在您的筆記型電腦上。安全性與舒適性相關資訊。



注意：需安裝 Adobe Reader 才能檢視此檔案。如果您的電腦未安裝 Adobe Reader，請先按一下「AcerSystem 使用手冊」，以執行 Adobe Reader 設定程式。接著請依照螢幕上的指示完成安裝。如需 Adobe Reader 的使用指示，請存取「說明及支援」功能表。



* 重要聲明：請注意，此處所指之指南（不論為印刷版或電子版）僅供參考之用；除了「AcerSystem 使用指南」中所包含的特定保固資訊以外，Acer 不會因為這些指南中的任何內容而針對您所購買的產品提供任何表示或保固。明確來說，Acer 對於這些指南中的任何錯誤不負相關責任。


網路設定

本指南將協助您設定區域網路和無線網路等設定，讓您可以連線到網際網路。

設定區域網路連線

只要將區域網路纜線插入乙太網路 (RJ-45) 連接埠即可。如需乙太網路連接埠的位置，請參閱第 10 頁的「左視圖」。

設定無線網路連線

1. 請使用 Aspire one 前方的開關啟動無線區域網路。
2. 按一下系統匣上的  圖示，然後選擇您要連接的無線存取點。



放入 3G SIM 卡

將電池卸下且小心把 3G SIM 放入 3G SIM 卡插槽內。欲了解 3G SIM 卡插槽的位置，請參閱第 11 頁的「底視圖」。

Aspire one 導覽









您應該已經依照「新手入門」一節中的說明完成了電腦設定，現在讓我們來看看您的 Acer 筆記型電腦擁有哪些功能。






上視圖




#	圖示	項目	說明
1		Acer Crystal Eye 網路攝影機	這是一台能夠用來進行視訊通訊的網路攝影機。
2		麥克風	內建可錄音的麥克風。
3		顯示螢幕	亦稱為液晶螢幕 (LCD)，可顯示電腦輸出畫面。
4		藍牙通訊開關/指示燈	啓用/停用藍牙通訊功能。可根據指示燈的亮燈情況了解目前藍牙通訊的狀態。(僅適用於特定機型)
5		狀態指示燈	發光二極體 (LED) 會閃爍，以顯示電腦各項功能和元件的狀態。
6		鍵盤	用於將資料輸入電腦中。
7		觸控板	觸控式裝置，等同於電腦滑鼠的功能。
8		電源指示燈	可根據指示燈的亮燈情況了解電腦電源的狀態。
9		點擊按鈕 (左和右)	左按鈕和右按鈕功能等同於滑鼠的左鍵和右鍵。
10		無線區域網路通訊指示燈	指示無線區域網路通訊的狀態。
11		電源按鈕/指示燈	開啓和關閉電腦。

關上螢幕的前視圖

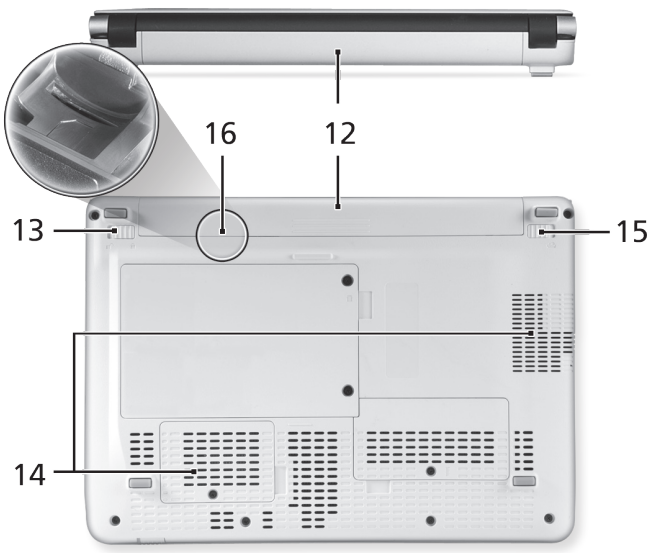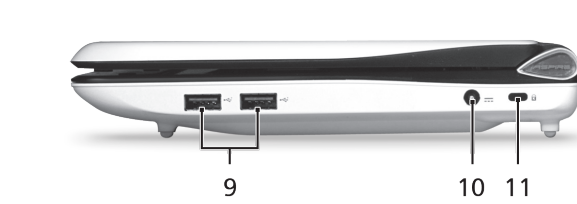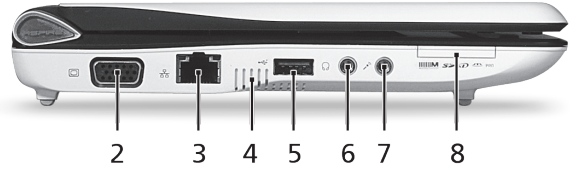




#	圖示	項目	說明
1		無線通訊開關	可啓用/停用無線網路功能。
左視圖			
2		外接顯示器 (VGA) 連接埠	連接至顯示裝置 (例如，外接顯示器、LCD 投影機)。
3		乙太網路 (RJ-45) 連接埠	連接至乙太網路 10/100 基礎的網路。
4		散熱孔和冷卻風扇	可讓電腦在長時間使用後仍能保持冷卻狀態。 注意：請勿阻塞或擋住風扇開口。
5		USB 2.0 連接埠	連接至 USB 2.0 裝置 (例如，USB 滑鼠)。
6		耳機/喇叭/線路輸出插孔	連接至音訊線路輸出裝置 (例如，喇叭、耳機)。
7		麥克風輸入插孔	接收外接式麥克風的輸入。
8		多合一讀卡機	可插入 Secure Digital (SD)、MultiMediaCard (MMC)、Memory Stick (MS)、Memory Stick PRO (MS PRO)、xD-Picture Card (xD)。 注意：往內推即可取出/安裝記憶卡。不論任何時間都只能使用單獨一張記憶卡。



右視圖

#	圖示	項目	說明
9		USB 2.0 連接埠	連接至 USB 2.0 裝置 (例如，USB 滑鼠)。
10		DC 輸入插孔	連接至 AC 變壓器。
11		Kensington 電腦鎖槽	連接至相容於 Kensington 的電腦安全鎖。

後視圖與底視圖

12		電池槽	安裝電腦的電池組。 注意：顯示的電池僅供參考。您電腦所安裝的電池可能視購買的機型而有所不同。
13		電池鎖	將電池鎖入定位。
14		散熱孔和冷卻風扇	可讓電腦在長時間使用後仍能保持冷卻狀態。 注意：請勿阻塞或擋住風扇開口。
15		電池釋放柱	可釋放電池，讓您取出電池。
16		3G SIM 卡插槽	可支援 3G 通訊的 3G SIM 卡 (僅適用於特定機型)。

