


# Flash BIOS SOP


## Flash BIOS SOP under DOS


- (1) Execute DFB.bat in Dos
- (2) After flashing BIOS, system will auto-reboot
- (3) After system reboot ,system will stop at post screen.Pls press "F1" to go to BIOS Setup Menu for loading Optimized default
- (4) When go to BIOS menu,move to item "Load Optimized Defaults" ,press it , Dialog : Load Optimized Default(Ok/Cancel)? will pop up and choice "Ok"
- (5) After finishing step(4),press "F10", Dialog :Save and Exit Setup (Ok/Cancel) ? will pop up and choice "Ok"
- (6) After finishing step(5),system will reboot and flashing BIOS under DOS is finished

## Flash BIOS SOP under Vista


- (1) Please follow up the step as below:

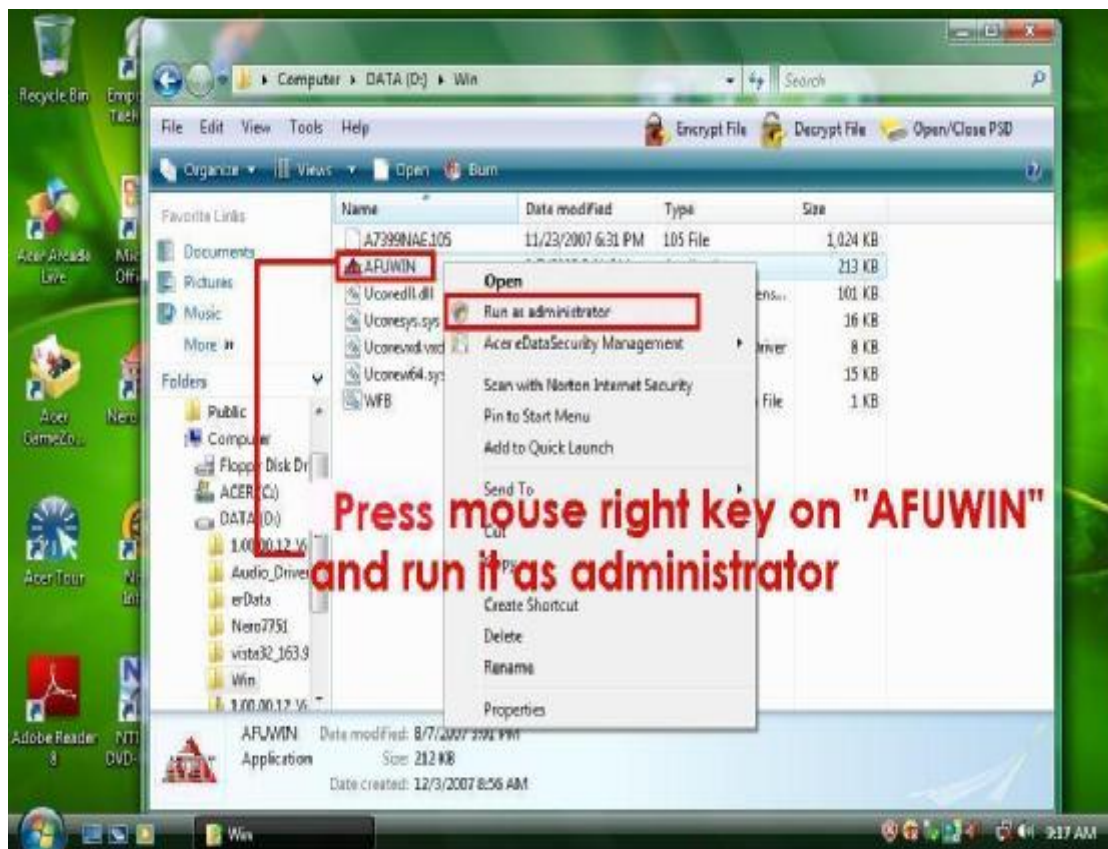

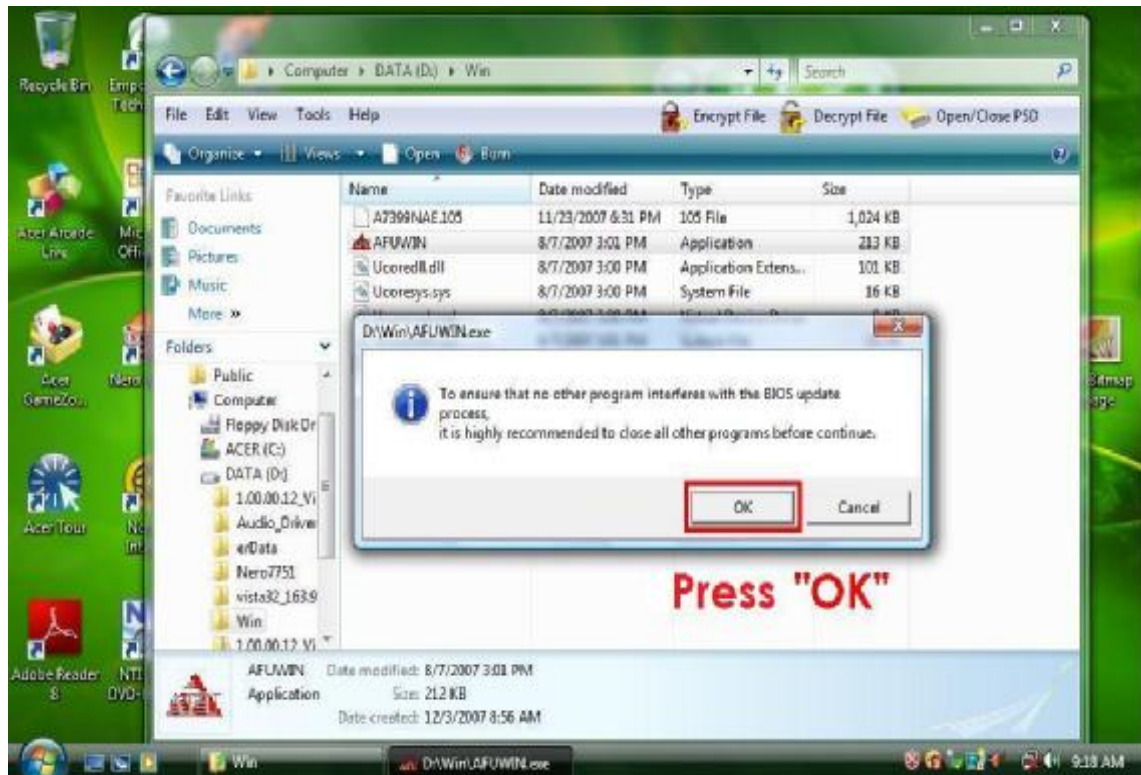

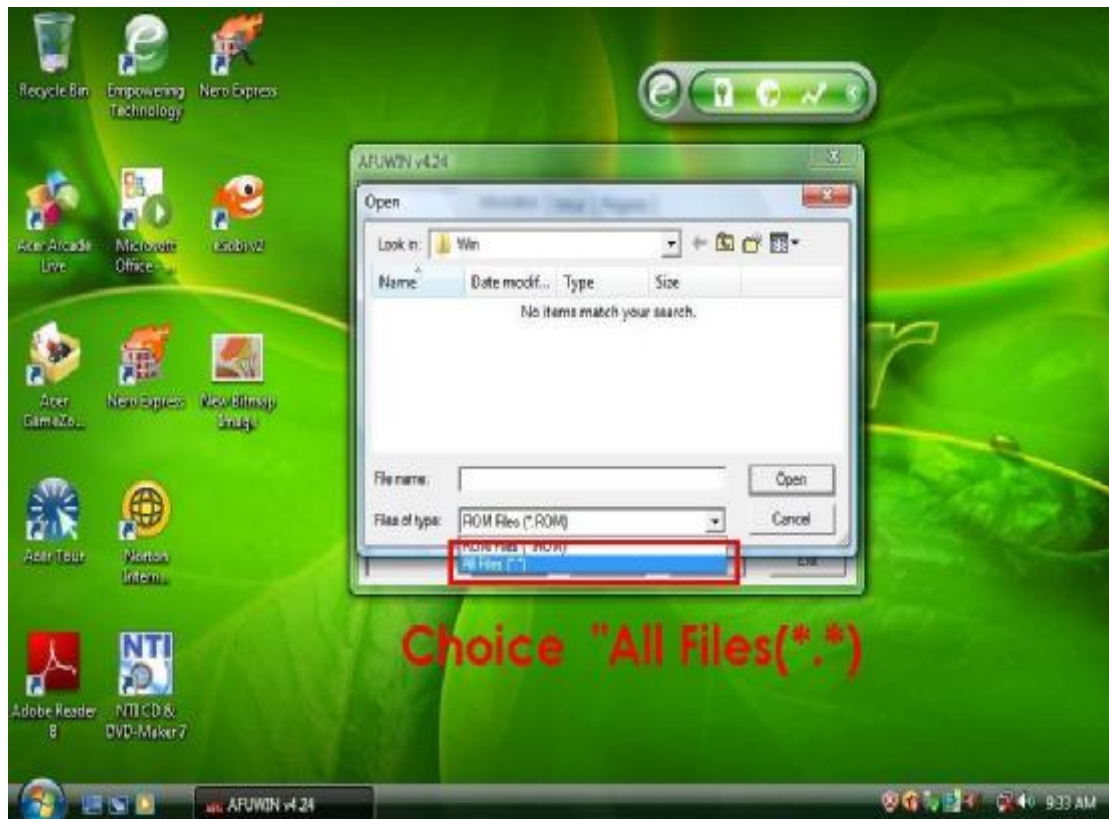



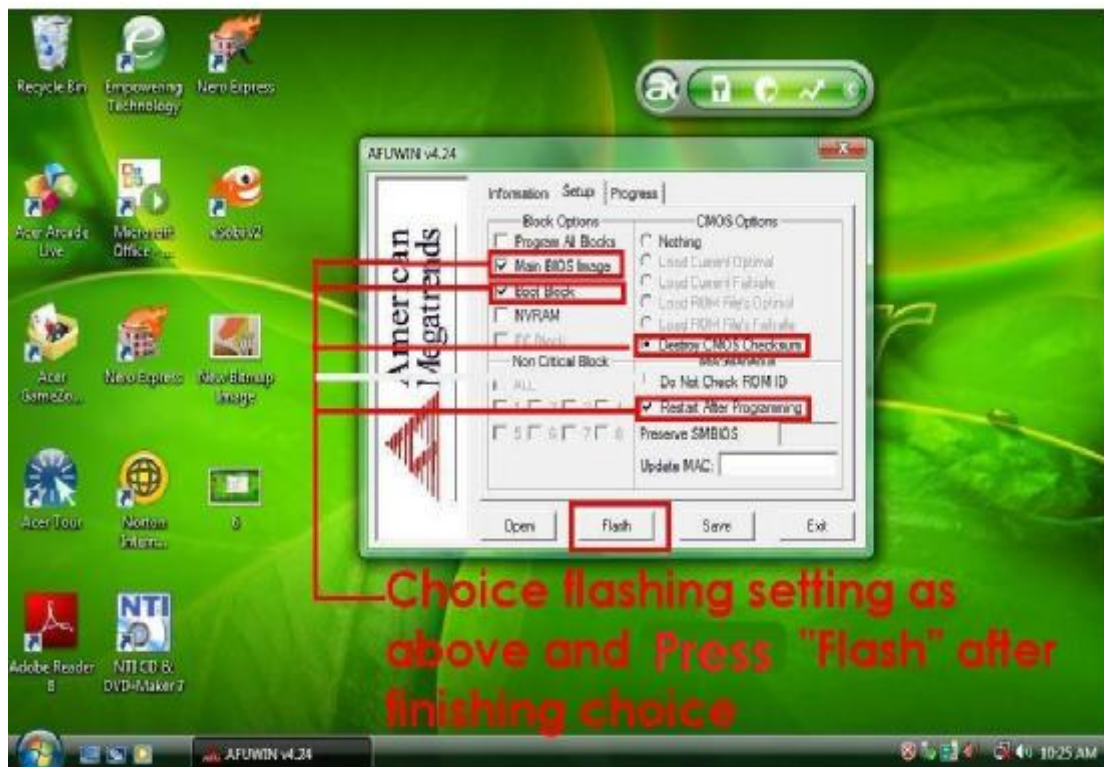

(3)After flashing BIOS ,system will auto-reboot

(4) After system reboot , system will stop at post screen.Pls press "F1" to go to BIOS Setup Menu for loading Optimized default

(5)When go to BIOS menu,move to item "Load Optimized Defaults" ,press it, Dialog : Load Optimized Default(Ok/Cancel)? will pop up and choice "Ok"

(6)After finishing step(5),press "F10" , Dialog : Save and Exit Setup (Ok/Cancel) ? will pop up and choice "Ok"

(7)After finishing step(6),system will reboot and flashing BIOS under Vista is finished

**Note: When flashing BIOS, remember not to execute any program on system otherwise it will effect unexpected risk.**