


G710 SCSI Controller EEPROM update SOP


The first step:

Pull off 1. SCSI key; 2. SCSI connector; 3.SCSI memory;

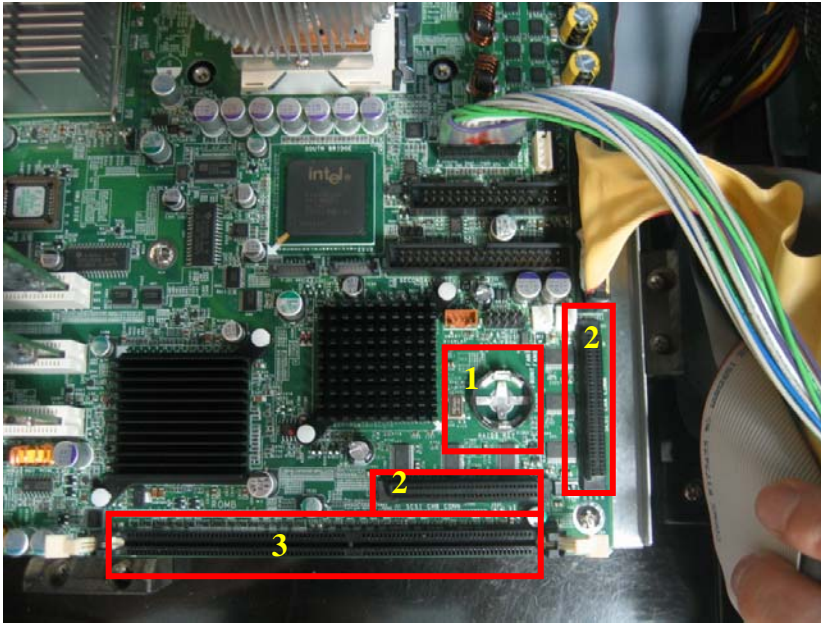



The second step:

Copy “SCSI EEPROM update” folder into G710 system HDD.

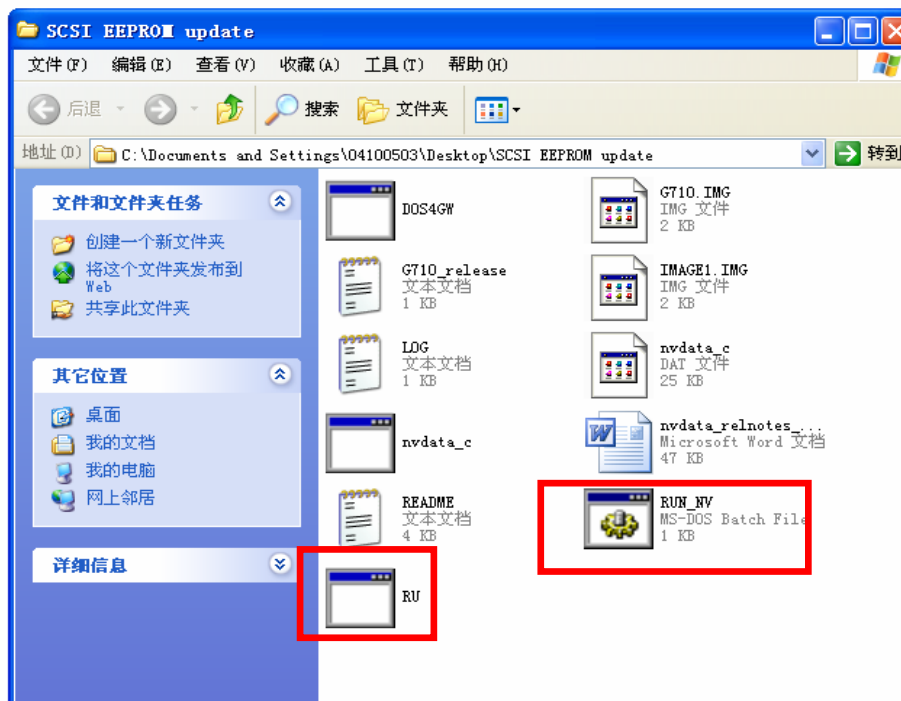

The Third step:

Enter DOS, select <run_nv.bat> and run the file.

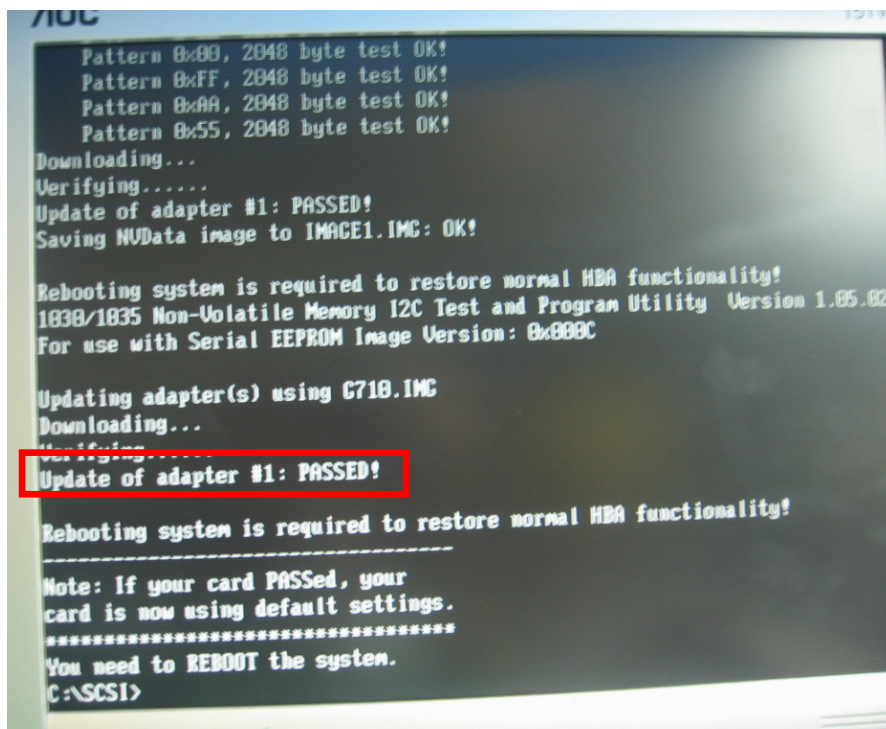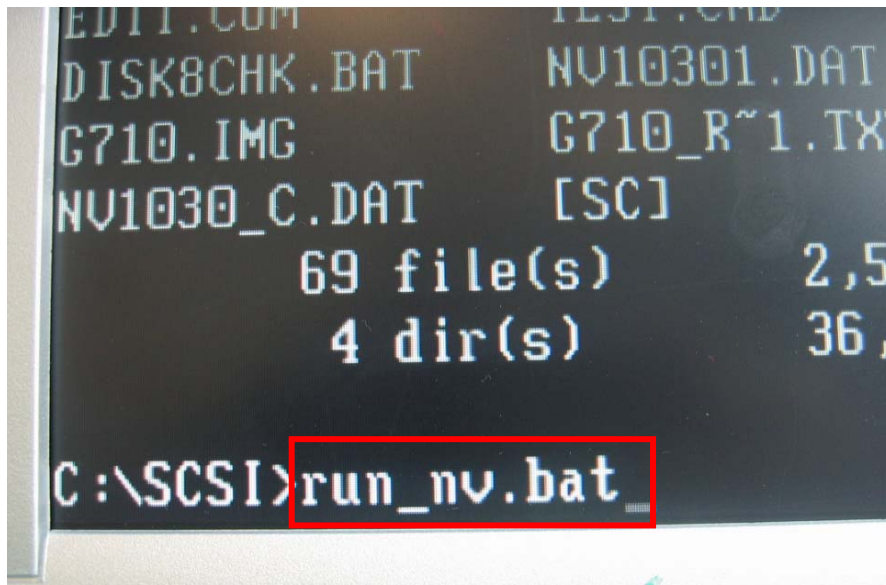

The Fourth step:

Shut down → Turn off power → Power on → Enter DOS →

Run RU → Check SVID&SDID.

