

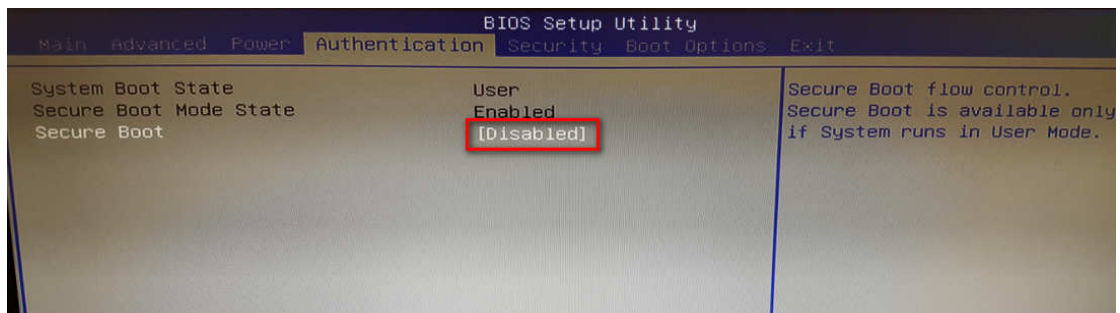
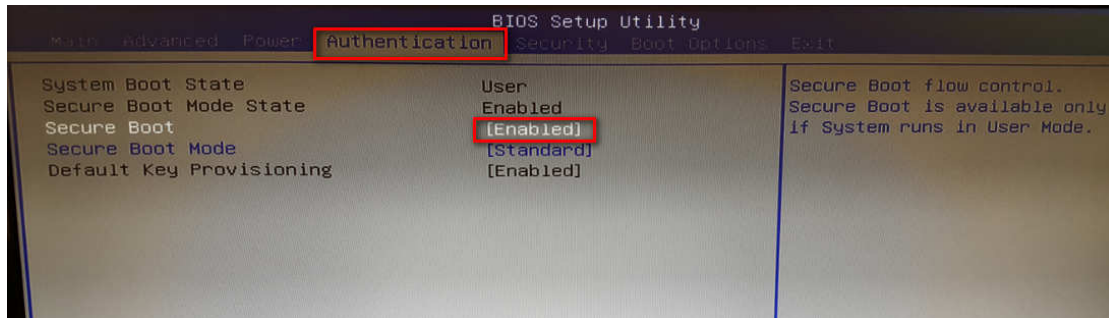


EC FW Flash SOP for DOS mode


1. Copy below file to DOS boot up device (Ex: USB drive) and EC version is [V6.00](#)
2. Boot up system and press “Delete” into BIOS setup menu.
3. Find **Authentication** page, change **Secure Boot** from **Enable** to **Disable**.

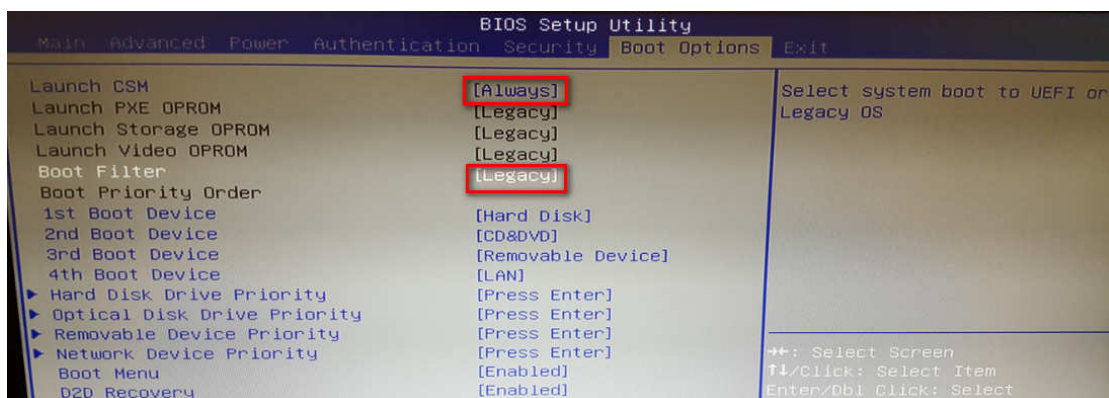


4. Find **Boot Options** page, change **Launch CSM** from **Never** to **Always**, and change **Boot Filter** from **UEFI** to **Legacy**.

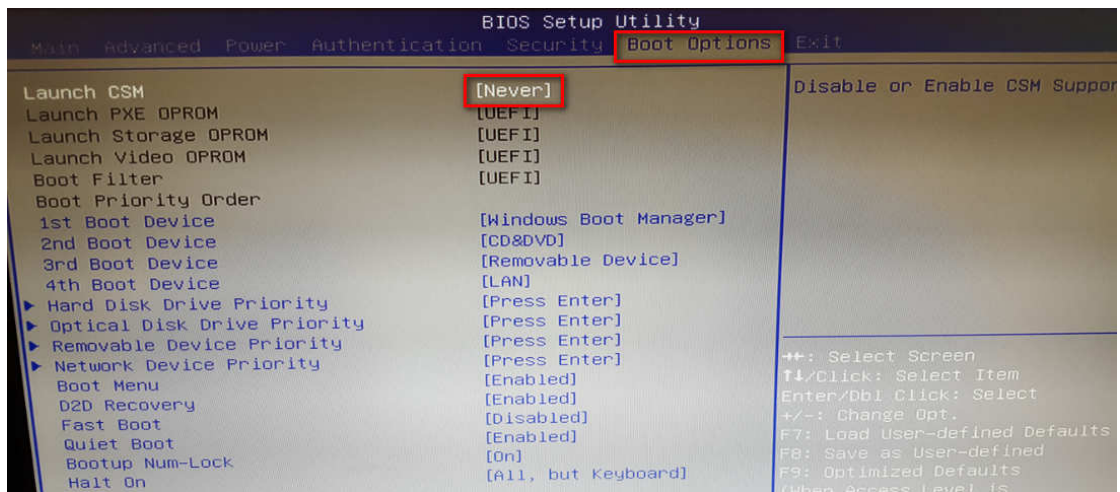

- Find **Exit** page, choose **Save & Exit Setup**, then choose **Yes** to save setting and reboot.

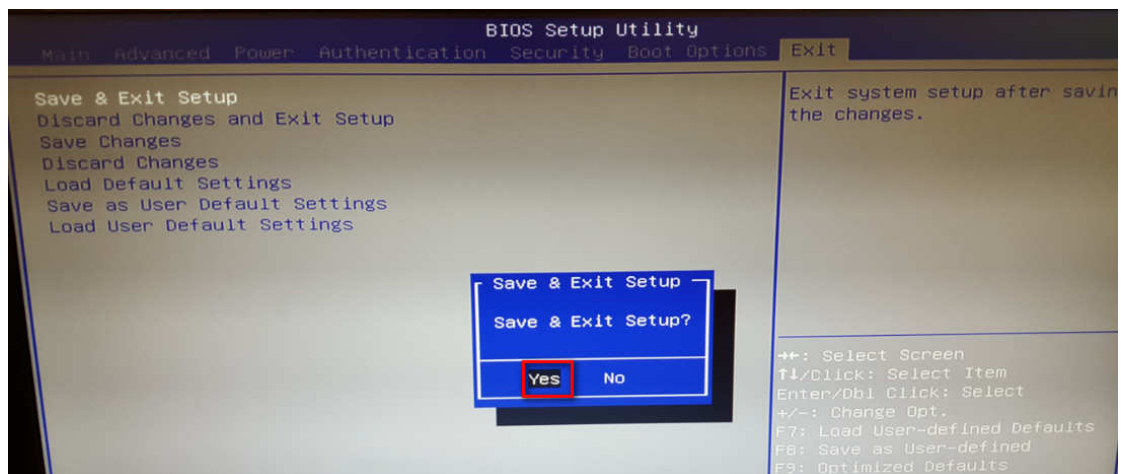

- During reboot, press "**F12**" into Boot Menu, choose your DOS boot up device.

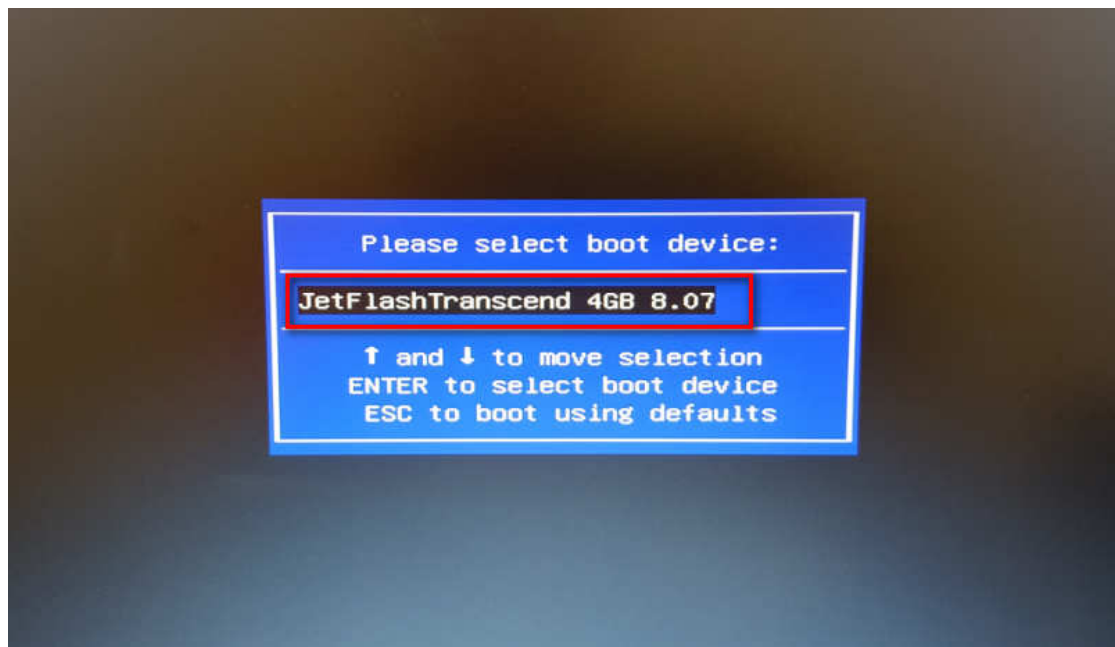

- Entering folder
- Execute **v60** batch file



- waiting the EC flash process bar ready.



10. After programming and verifying OK, system will automatically restart. During boot up, press **"Delete"** into BIOS setup menu to check EC FW is 6.00 and load default setting then save and reboot.

