

AcerModem 56 Surf 56K External Modem

User Guide



100% Recycled Paper



Copyright

Copyright © 2000 by Acer Netxus Inc.. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions carefully.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
9. If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet dose not exceed 15 amperes.
10. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

About this Manual

Purpose

This user guide gives you all the information you need to install and operate the modem properly.

Manual Structure

This user guide consists of five chapters and one appendix:

Chapter 1 Getting Started

This chapter tells you what items are contained in the package and things that you need to check before you proceed with the installation of the modem.

Chapter 2 Modem Overview

This chapter gives you all the necessary information that you need to know about the modem, such as its features and layout.

Chapter 3 Installing the Modem

This chapter contains step-by-step procedure on how to install the modem and other necessary peripherals, configure the modem under Windows operating system, and verify the modem installation.

Chapter 4 Communication Software

This chapter gives tips on how to configure your modem Communication software.

Chapter 5 AT Commands

This chapter guides you on how to use the AT commands that will allow you to directly control fax/modem activities.

Appendix A Troubleshooting

This appendix gives tips on how to resolve the common problems that you might encounter when using the modem.

Conventions

The following conventions are used in this manual:

Text entered by user

Represents text input by the user.

, , , etc.

Represent the actual keys that you have to press on the keyboard.



NOTE

Gives bits and pieces of additional information related to the current topic.



WARNING

Alerts you to any damage that might result from doing or not doing specific actions.



CAUTION

Suggests precautionary measures to avoid potential hardware or software problems.



IMPORTANT

Reminds you to take specific action relevant to the accomplishment of the task at hand.



TIP

Tells how to accomplish a task with minimum steps through little shortcuts.

Table of Contents

Chapter 1 Getting Started

- 1.1 Package Contents..... 1-1
- 1.2 System Requirements 1-2

Chapter 2 Modem Overview

- 2.1 Specifications 2-1
- 2.2 Front Panel..... 2-3
- 2.3 Back Panel..... .. 2-4

Chapter 3 Installing the Modem

- 3.1 ESD Precautions 3-1
- 3.2 Setting up the Modem 3-1
- 3.3 Setting up your Modem for Windows 3.X..... 3-4
- 3.4 Setting up your Modem for Windows 95..... 3-4
- 3.5 Setting up your Modem for Windows 98..... 3-6
- 3.6 Setting up your Modem for Windows 2000..... 3-8
- 3.7 Setting up your Modem for Windows NT..... 3-10
- 3.8 Testing Your Modem Installation..... 3.11

Chapter 4 Communication Software

- 4.1 Installing the Communication Software 4-1
- 4.2 Tips on Configuring the Communication Software 4-1

Chapter 5 AT Commands

5.1	Entering a Command	5-1
5.2	Repeating a Command (A).....	5-2
5.3	Dialing (D).....	5-2
5.4	Tone or Pulse Dialing (T or P)	5-3
5.5	Pause (,).....	5-3
5.6	Wait for Second Dial Tone (W).....	5-4
5.7	Call Transfer or Other On Hook Feature (!).....	5-4
5.8	Wait for Silence (@).....	5-4
5.9	Storing Telephone Numbers (&Zn=t).....	5-5
5.10	Dialing Stored Numbers (S=n).....	5-5
5.11	Answering a Call.....	5-5
5.11.1	Manual Answering (A).....	5-5
5.11.2	Auto-answering (S0=n).....	5-6
5.12	Hanging Up or Going Off Hook (H)	5-6
5.13	Selecting Response Message (Vn).....	5-7
5.14	Enabling/Disabling the Speaker (Mn)	5-7
5.15	Adjusting the Speaker Volume (Ln)	5-7
5.16	Reading an S-Register Value(Sn)	5-8
5.17	Changing an S-Register Value (Sn=x).....	5-8
5.18	Sending Faxes	5-9
5.19	Checking Data or Fax Status (+FCLASS=?)	5-9
5.20	Quick Reference.....	5-9
5.20.1	Data Modem Commands	5-9
5.20.2	Fax Modem Commands	5-19
5.20.3	Voice Modem Commands	5-20
5.20.4	S-Registers.....	5-23

Appendix A Troubleshooting

List of Figures

2-2	Front Panel Layout	2-3
2-3	Back Panel Layout.....	2-4
3-2	Connecting Peripherals	3-3

List of Tables

2-2	LEDs.....	2-3
5-1	Basic AT Commands	5-10
5-2	AT & Commands	5-12
5-3	AT % Commands	5-14
5-4	AT \ Commands	5-14
5-5	AT + Commands	5-14
5-6	AT Commands Results Codes	5-18
5-7	Fax Commands	5-19
5-8	Voice Commands	5-20
5-9	S-Registers.....	5-23

Getting Started

Congratulations on your purchase of this Data/Fax/Voice modem . This modem features the latest innovation in high-speed modem design, making electronic communication faster and easier. It incorporates the full-duplex speakerphone technology that allows true simultaneous two-way conversation; thus, hand-free conversation and telephone conferences are made possible.

This manual guides you on how to install and properly use the modem in order to take full advantage of its features. An appendix about troubleshooting is also included to help you fix minor problems that you might encounter while using the modem.

1.1 Package Contents

Make sure that you have the following items:

- External Modem
- RJ11 telephone cable
- RS232 serial cable
- AC power adapter
- Quick Start Guide
- Modem software/driver CD
- Product Limited Warranty Card
- Phone Adapter (for Australia only)

If any of the items is damaged or missing, contact your dealer immediately.

1.2 System Requirements

Before you proceed, make sure that your system meets the following requirements:

- 486 (or higher) IBM-compatible PC system
- At least 8 MB memory
- DOS 5.0 (or higher) Windows 3.1, Windows 95, Windows NT 4.0 or Windows 2000 operating system

Chapter 2

Modem Overview

Before you proceed with the installation, it is necessary that you have enough information about the modem.

This chapter tells you all you need to know about the modem.

2.1 Specifications

Data Modem Operation

- Line Speed: 300 ~ 56000bps
- Standard Compatibility: V.90, ITU V.34, V.32bis, V.23, V.22bis, V.21, and Bell 103, 212A
- Error Correction: ITU-T V.42, MNP2-4
- Data Compression: ITU-T V.42bis, MNP5
- Flow Control: RTS/CTS, XON/XOFF
- Command Set: TIA/EIA 602 "AT" command set
- Memory: 2 configuration profiles, 4 sets of digital phone numbers

Fax Modem

- Line Speed: 2400 ~ 14400bps
- Standard Compatibility: ITU-T V.17, V.29
- Command Set: EIA-578 Service Class 1

Voice Operation

- Digital Telephone answering machine (TAM); Voice mail system
- Voice Sampling Rate: 8-bit monophonic audio data encoding at 11.025KHz or 7200Hz
- FDSP: Full-duplex speakerphone with acoustic and line echo cancellation

General Features

- Line Interface: 2xRJ-11 jacks for line and telephone
- DTE Interface: RS232C serial interface
- Voice Interface: 2x audio jack for microphone input and speaker output
- Ambient Temperature:
 - Operating: +10° ~ +50°C
 - Non-operating: -20° ~ +60°C
- Humidity:
 - Operating: 20% ~ 80% RH
 - Non-operating: 20% ~ 80% RH
- Dimensions: 176mm (L) x 130mm (W) x 30mm (H)

2.2 Front Panel

The LED indicators located on the front panel report modem status and activity. The table below shows the function of each LED indicator:

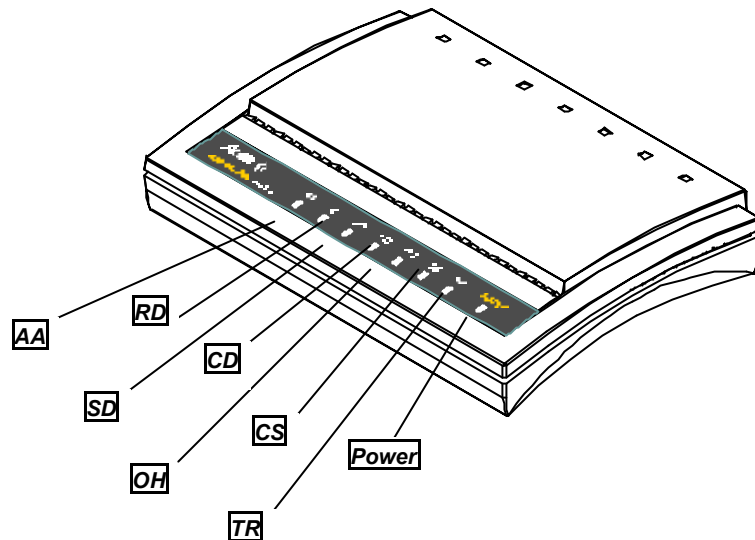


Figure 2-1 Front Panel Layout

Table 2-1 LEDs

Label	Name	Description
Power	Power	Lights when modem is activated
AA	Auto Answer	Lights when modem is set to auto-answer
RD	Receive Data	Flashes when modem is receiving data from a remote modem

Table 2-1 LEDs(Continue)

Label	Name	Description
SD	Send Data	Flashes when modem is transmitting data to a remote modem
CD	Carrier Detect	Lights when modem receives a valid data signal (carrier) from a remote modem
OH	Off Hook	Lights when modem is off hook
CS	Clear to Send	Lights when CTS signal is active
TR	Terminal Ready	Lights when DTR signal is active

2.3 Back Panel

Located on the back panel are the connectors and jacks.

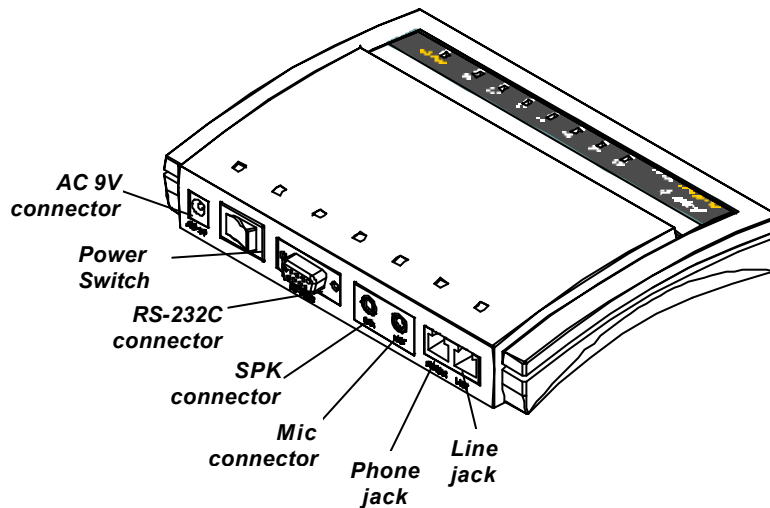


Figure 2-2 Back Panel Layout

Installing the Modem

This chapter contains detailed instructions on how to install and configure the modem, as well as how to verify if your installation is correct. We recommend that you follow the steps accordingly to avoid future problems.

3.1 ESD Precautions

Electrostatic discharge (ESD) can damage your processor, disk drives, expansion boards, and other system components. Always observe the following precautions before you install any system component.

1. Do not remove a component from its protective packaging until you are ready to install it.
2. Wear a wrist grounding strap and attach it to a metal part of the system unit before handling components. If a wrist strap is not available, maintain contact with the system unit throughout any procedure requiring ESD protection.

3.2 Setting up the Modem

This external modem is easy to install. Just follow the instructions below.

To install the modem:

1. Make sure that your system is turned off before you install the modem.

-
2. Plug the male (9-pin) serial cable into the *RS-232C* connector at the back of the modem. See chapter 2 for the location of the connectors.
 3. Plug the other end of the serial cable into your system's serial port (COM1 or COM2 on your system).
 4. Plug the telephone cable into the *LINE* jack located at the back of the modem. See chapter 2 for the location of the jack.
 5. Plug the other end of the telephone cable into a telephone wall jack.
 6. Plug the AC adapter power cord into the *AC 9V* connector located at the back of the modem. See chapter 2 for the location of the connector.
 7. Plug the transformer end of the adapter into a standard AC wall outlet.
NOTE: Make sure that your modem is turned *off* before you plug in the AC adapter. Also check the voltage range in your area before plugging your system into an outlet.
 8. To connect a telephone to the modem:
 - a. Plug the telephone to the modem *PHONE* jack.
 - b. Lift the handset and listen for a dial tone to check for a working connection.
 9. To connect a speaker and a mic to the modem:
 - a. Plug the speaker in to the modem *SPK* connector.
 - b. Plug the mic in to the modem *MIC* connector.
 10. Turn your modem on. The modem should perform a self-test and then be ready for use. After every thing checks out, turn your computer on.

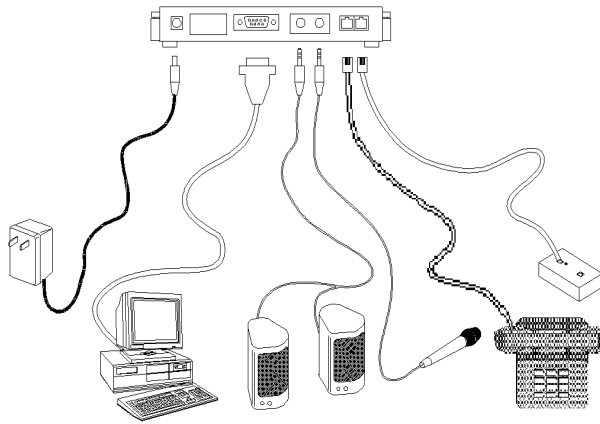


Fig 3-1 Connecting Peripherals

3.3 Setting Up your Modem for Windows 3.x

For Windows 3.X users, please go to section 3.7 "Testing your Modem Installation".

3.4 Setting Up your Modem for Windows 95

3.4.1 Installing Modem Drivers with Windows 95 Version 950 and 950a

Windows 95 will automatically detect your new hardware when you first install it. To install the driver for your modem, follow the procedures below:

1. Turn on your computer. As the Windows 95 operating system boots up, it displays a New Hardware Found dialog box on your screen for a few seconds with the identifier name (Acer Modem 56 Surf) of your modem.



2. In the New Hardware Found dialog box, you have three choices to install a driver. The default choice is for the driver to be installed from a disk provided by the hardware manufacturer. Highlight this selection if it is not already highlighted and click **OK**.
3. Make D:\ the default drive for the source location.
4. Insert the drive CD into to the CD-ROM and click **OK**.

5. Windows 95 will auto-detect the correct files and copy them onto your hard disk.

3.4.2 Installing Modem Drivers with Windows 95 Version 950b

1. Turn on your computer. As the Windows 95 operating system boots up, it displays a Updated Device Driver Wizard dialog box shown on your screen.



2. Insert the driver CD into the CD-ROM drive and click **NEXT**.
3. After Windows 95 finishes searching for updated drivers, click **Finish**.
4. Windows 95 will copy the files onto your hard disk.
5. After Windows 95 finishes copying files, it will detect another device call Voice Modem Serial Wave Device. Simply follow the same instructions as above for the Wave Device installation.

3.5 Setting Up Your Modem for Windows 98


1. Turn on your computer. As the Windows 98 operating system boots up, it displays a Add New Hardware Wizard dialog box shown on your screen for a few seconds with the identifier name (Acer Modem 56 Surf) of your modem.



2. Click **NEXT**, then a new dialog box will show on the screen.



3. In the new dialog box, you have two choices to install a driver. The default choice is search for the best driver for your device. Highlight this selection if it is not already highlighted and click **NEXT**.
4. A new Add New Hardware Wizard dialog box will display on the screen.

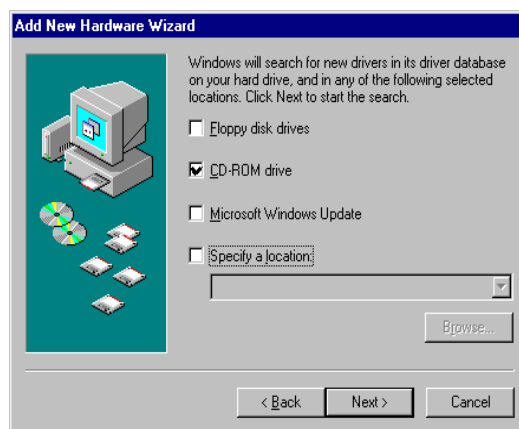

5. Insert the driver CD into the CD-ROM drive and highlight the CD-ROM drive selection then click **NEXT**.

-
6. Windows 98 will copy the files onto your hard disk.
 7. After Windows 98 finishes copying files, it will detect another device call Wave Device for Voice Modem. Simply follow the same instructions as above for Wave Device installation.

3.6 Setting Up Your Modem for Windows 2000


8. Turn on your computer. As the Windows 2000 operating system boots up, it displays a Found New Hardware Wizard dialog box shown on your screen.



9. Click **NEXT**, then a new dialog box will show on the screen.



10. In the new dialog box, you have two choices to install a driver. The default choice is search for the best driver for your device. Highlight this selection if it is not already highlighted and click **NEXT**.

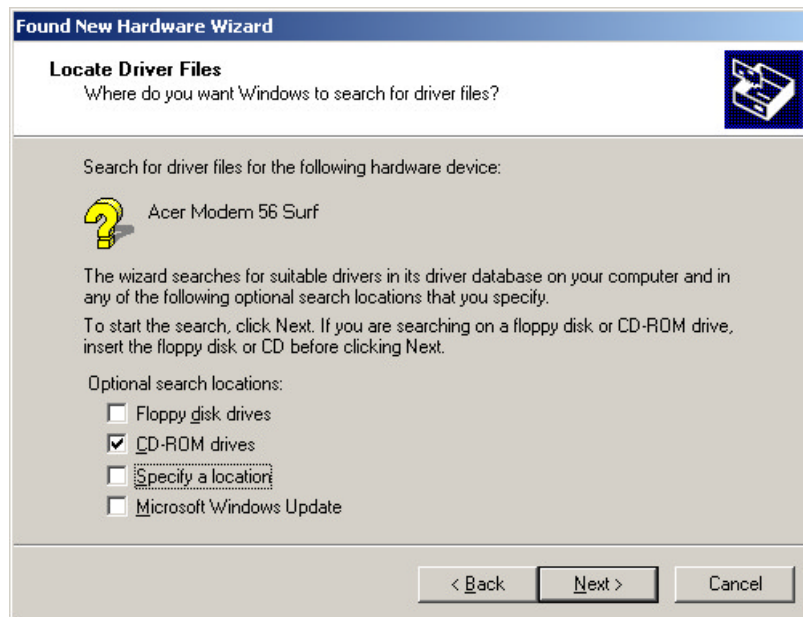

11. A new Found New Hardware Wizard dialog box will display on the screen.
12. Insert the driver CD into the CD-ROM drives and highlight the CD-ROM drive selection then click **NEXT**.
13. Windows 2000 will copy the files onto your hard disk.
14. After Windows 2000 finishes copying files, it will show " Windows has finished installing the software for this device". Then click **FINISH**.

3.7 Setting Up Your Modem for Windows NT

1. After Windows NT boot, double click on the **Modems** icon.
2. At the Install New Modem screen, check the box in front of '**Don't Detect my Modem, I will select it from a List**'.

-
3. Select **Next**, then **Have Disk**. Insert the driver CD into the CD-ROM drive.
 4. Type D:\, then click **OK**.
 5. Highlight and select the modem which corresponds to the one you purchased, then click **NEXT**.
 6. Select the COM port to which the modem was attached. Then select **NEXT**, then **Finish**.
 7. Windows NT will copy the files onto the hard disk.

3.8 Testing Your Modem Installation

To test if you have installed the modem properly:

1. Perform the software function that puts your system in Terminal mode.
 - a. For Windows 3.X: Use the Terminal program.
 - b. For Windows 95/98/2000: Use the Hyper Terminal program.

In Terminal mode, a cursor appears on the screen, allowing you to send commands directly to the modem.


2. To check if your system and modem are functioning properly, type:

`AT&F<Enter>`

The modem should respond OK, if any of the following screen problems occur, refer to Appendix A for troubleshooting tips.

- The characters you type do not appear
- No OK message appears
- Double characters appear

After you have successfully installed the modem, your next step is to configure the Communication software. For details, see Chapter 4.

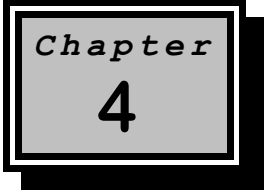

Chapter 4

Communication Software

This chapter gives you tips on how to configure your communication software.

4.1 Installing the Communication Software

The Modem package comes with a Communication software disk and manual. To install the Communication software, simply insert the communications software CD into the CD-ROM drive, under Win95/98/NT/2000, the auto-run function will start the shell program, just follow the instruction on the screen for software installation. For Windows 3.X users, please run the "Msetup.exe" program that contained in the CD to start the software installation..

If you want to use other communication program, please refer to section 4.2.

4.2 Tips on Configuring the Communication Software

This modem uses the most up-to-date industry and commercially popular standards to ensure functional compatibility with most communication software. During initial setup of the communication software, it will normally prompt you to define the type of fax/modem that you are currently using. The following list guides you on how to select the proper device type.



The device type only defines the protocol by which your software will communicate with your fax/modem and does not set nor limit the speed.

1. For the Baud rate, choose any speed between 38,400 to 115,200. Your fax/modem will automatically adjust to the optimum transmission speed after successfully connecting with a remote fax/modem.
2. Many communication software use the modem response to control program flow. Make sure that the software is set to recognize a CONNECT 28800 response. If this does not work, set the program to simply recognize just the CONNECT response without any baud rate information.
3. There are three flow controls: none, hardware (CTS/RTS), and software (XON/XOFF). Set your software to use either hardware or software flow control. If set to none, the communication software will not be able to detect a buffer overflow and result in transmission errors.
4. For fax device type, choose TR29 Class 1.
5. For fax speed, choose automatic or fastest speed. Your fax/modem will automatically adjust to the optimum transmission speed after successfully connecting with a remote fax machine or another fax./modem.
6. Make sure that you have correctly set all the other parameters required by the software to operate successfully.
7. Refer to your Communication software manual for details.

You are now ready to do fax/modem communication. See Chapter 5 for details.

AT Commands

The AT commands are used to directly handle fax/modem data activities, such as dialing or answering a data call or sending a fax. To send commands to your modem, you must access the modem in a terminal mode which is provided by most communication software. Also, you need to know the format for typing the fax/modem commands and responses.

This chapter tells you how to properly use the AT commands.



If you will be using a communication software program to do fax/modem communication, you will probably not need to type the commands because the software program will handle these tasks for you. Similarly, you will not see the response because your software program may intercept them.

5.1 Entering a Command

To enter a command:

1. Type AT. This is the Attention Code informing the modem that a command follows. The Attention Code may be in upper or lower case.
2. Type the command. Refer to the succeeding sections.
3. Press **ENTER** to send the command to the modem (except for A/ and +++ commands).

For example:

ATccpp

where: AT: Attention Code
cc: any command
pp: any parameter that is required by the command

The following sections tell how to enter basic commands. The other commands are described in the AT_CMD.TXT file contained in the fax/modem driver diskette. You may use DOS EDIT or any suitable editor to view this file.

5.2 Repeating a Command (A/)

The A/ command tells the modem to repeat the last command you entered.



When entering this command, DO NOT type the AT before this command and DO NOT press after entering the command.

5.3 Dialing (D)

The D command dials the phone number. For example, to dial the number 03-5770707, type:

ATD03-5770707 or
ATD (03)5770707 or
ATD035770707

Then press . All three entries are treated the same.

You may use numbers 0~9 in all dial strings. You may also use spaces, hyphens, parentheses, or any other punctuation except the dial modifiers to make the command line easier to read.

5.4 Tone or Pulse Dialing (T or P)

To tone or pulse dial a number sequence, insert a T or P between the dial command (D) and the phone number. The modem prepares for tone dialing.



If you have used P in the last dial string, you only need to enter a T in the dial string.

For example:

```
ATDT(or P)5770707
```

5.5 Pause (,)

Inserting a Pause command in the dial string inserts either a 2-second pause or the value in status register S8 in the dialing sequence.

For example:

```
ATD9,03-5770707
```

5.6 Wait for Second Dial Tone (W)

The W command makes the modem pause and listen for a second dial tone before continuing the dial command.

For example:

```
ATD9,W03-5770707
```

You can use the pause and wait for second dial tone commands when using long distance services.

5.7 Call Transfer or Other On Hook Feature (!)

Enter an exclamation mark (!) to transfer a call or do something similar that requires on-hook or "flash-hook".

For example:

```
ATDT9,323-8000!,#7377
```

5.8 Wait for Silence (@)

The Wait for Silence command is used for special service like automatic paging. The @ modifier tells the modem to wait for one or more rings then listen for 5 seconds for continuous silence before dialing. If 5 seconds of silence is not detected within the time set in register S7, the modem hangs up.

5.9 Storing Telephone Numbers (&Zn=t)

The modem can store up to four sets of telephone numbers; each set dial string can contain up to 34 digits. To store telephone numbers including all the dial modifiers that you may need, enter:

```
AT&Zn=t
```

where: n = locations 0~3

t = 0~9, *, # and any of the dial modifiers T, P, W, @, ;, !.

For example, to store the dial sequence T9,1551212 at location 2, type:

```
AT&Z2=T9,1551212
```

5.10 Dialing Stored Numbers (S=n)

Enter ATDS=n to dial the phone number stored at location n (where n=0~3).

5.11 Answering a Call

5.11.1 Manual Answering (A)

The factory presets the modem to answer a call only when you enter ATA. This is useful especially if you are using only one telephone line for your modem and telephone.

5.11.2 Auto-answering (S0=n)

The modem default setting is not to answer a call unless you manually enter the ATA command. However, if you have a separate telephone line for the modem and your telephone, you can set the modem to automatically enter incoming calls.

You can specify the number of rings before the modem answers the call. To specify, type:

ATS0=n

where: *n* is the number of rings after which, the modem answers the call. The settings are from 1~255. Set S0=0 to disable auto-answer (default setting).

5.12 Hanging Up or Going Off Hook (H)

Enter:

ATH to let the modem hang up.

ATH1 to let the modem go off-hook

5.13 Selecting Response Message (Vn)

The V commands tell the modem to show response messages as words or numbers. See Table 5-7 for the list of response messages in both numbers and words.

Enter:

V0 Enables number response message.

V1 Enables word response message.

5.14 Enabling/Disabling the Speaker (Mn)

This command lets you enable or disable the speaker.

Enter:

M0 Speaker always off
M1 Speaker on until carrier present (default)
M2 Speaker always on
M3 Speaker off during dialing ; speaker on until carrier
 Present

5.15 Adjusting the Speaker Volume (Ln)

This command sets the audio output of the speaker.

Enter:

L0	Low speaker volume
L1	Low speaker volume (default)
L2	Media speaker volume
L3	High speaker volume

5.16 Reading an S-Register Value(Sn)

To read the current value of an S-Register, type:

ATSn?

where *n* is an S-Register number. The modem responds with decimal value of the S-Register, in three-digit format followed by OK.

To read values from more than one S-Register, type:

ATSn?Sn?

where *n* specify the different S-Register numbers.

5.17 Changing an S-Register Value (Sn=x)

To change an S-Register value, type:

ATSn=x

where: *n*: S-Register number
x: value you want to assign to the specified S-Register

5.18 Sending Faxes

You can send a fax using the fax software. The commands are automatically issued by the fax software. In case you encounter some problems while sending or receiving a fax, refer to your fax software manual.



Some fax packages require software flow control. The modem uses the hardware flow control as the factory default. You may need to enable the software flow control to send and receive faxes.

5.19 Checking Data or Fax Status (+FCLASS=?)

This command identifies if the modem is set for data or fax operation. The possible values are 0 for data mode and 1 for fax class 1.

5.20 Quick Reference

5.20.1 Data Modem Commands

Table 5-1 Basic AT Commands

Comm and	Description	Function
A/	Re-execute Command	None
A	Answer	None
Bn	ITU-T or Bell	0 = Selects ITU-T V.22 at 1200 bps and ITU-T V.21 at 300 bps 1 = Selects Bell 212A at 1200 bps and Bell 103J at 300 bps (default) 2 = Selects ITU-T V.23 only. The originating modem

Comm and	Description	Function
		transmits at 75 bps ; the answering modem transmits at 1200 bps. 3 = Selects ITU-T V.23 only. The originating modem transmits at 1200 bps ; the answering modem transmits at 75 bps.
Cn	Carrier Control	0 = Transmit carrier always off (default) 1 = Normal transmit carrier
Dn	Dial	N can equal a character string using any of the following: <ul style="list-style-type: none"> ● 0,1,2,3,4,5,6,7,8,9 (Dialing Digit) ● *,#,A,B,C or D (Tone Dial Characters) ● L Redial last number: the modem responds with Error if ATDL is issued. If L is embedded in the dial string, it is considered as a presentation character and hence ignored. ● P (Pulse Dial) ● T (Tone Dial) ● R (Reverse originate mode) ● S=n(Dial NVRAM telephone number) ● ! (Flash Hook) ● W (Wait for dial tone) ● @ (Wait for silence) ● , (Pause) ● ; (Return to command state) ● -() (Ignored by modem)
En	Command echo	0 = Disable echo 1 = Enable echo (default)
Fn	Online echo	0 = Enable online echo 1 = Disable online echo (default)
Hn	Switch hook control	0 = Hangs up the telephone line (default) 1 = Picks up the telephone line
In	Identification	0 = Reports product code

Comm and	Description	Function
		1 = Reports modem chip firmware version 2 = Verifies ROM checksum 3 = Reports chipset name 4 = Reserved 5 = Reserved for modem chip hardware configuration 6 = Country code 7 = Version of board manufacturer firmware 8 = Modem firmware features
Ln	Speaker Volume	0 = Low speaker volume 1 = Low speaker volume (default) 2 = Medium speaker volume 3 = High speaker volume
Mn	Speaker Control	0 = Speaker always off 1 = Speaker on until carrier present (default) 2 = Speaker always on 3 = Speaker off during dialing; speaker on until carrier present
Nn	Select data rate handshake	0 = Handshake only at DTE-to-modem data rate 1 = Begins handshake at DTE-to-modem data rate and falls to highest compatible rate (default)
On	Return to online Data Mode	0 = Returns to online without retrain (default) 1 = Returns to online with retrain
P	Set Pulse Dial	None
Qn	Result code display control	0 = Enables result codes (default) 1 = Disables result codes
Sn	Read/write S-Register n	=x Write value x to S –register n ? Read S-register n
T	Set Tone Dial	Default tone dial
Vn	Result Code Form	0 = Choose numeric form 1 = Choose verbose (text) form (default)

Comm and	Description	Function
Wn	Connect Message Control	0 = Reports DTE speed response codes (default). 2 = Reports DCE speed response codes 3 = Reports DTE speed response codes and information on error correction and data compression 4 = Reports protocol, data compression, and DTE data rate
Xn	Result Codes type	0 = Blind dial, no busy detect, CONNECT 1 = Blind dial, no busy detect, CONNECT XXXX 2 = Dial tone detect, no busy detect, CONNECT XXXX 3 = Blind dial, busy detect, CONNECT XXXX 4 = Full monitor, all messages, CONNECT XXXX(default)
Zn	Soft Reset and Restore Profile	0 = Soft reset and restore profile0 (default) 1 = Soft reset and restore profile1

Table 5-2. AT & Commands

Comm and	Description	Function
&Cn	DCD option	0 = DCD always on 1 = DCD normal (default)
&Dn	DTR option	0 = In Async mode, modem ignores DTR 1 = Modem switches from data mode to command mode when an on-to-off transition of DTR occurs

Comm and	Description	Function
		2 = When DTR switches off, the modem goes onhook and disables Auto-answer mode; when DTR switches on, auto-answer is enabled (Default) 3 = Turning off DTR re-initializes the modem and resets values except UART registers
&Fn	Restore Factory Configuration	None
&Gn	Select Guard Tone	0 = Disable (default) 1 = 550 Hz 2 = 1800 Hz
&Kn	Flow Control	0 = Disable 3 = Enable RTS/CTS flow control (default) 4 = Enable XON/XOFF flow control
&Pn	Dial pulse ratio	0 = Sets 10-pps pulse dial with 39%/61% make/break 1 = Sets 10-pps pulse dial with 33%/67% make/break
&Sn	DSR Override	0 = DSR always on (default) 1 = DSR active only during handshaking and when carrier is lost
&Tn	Self Test commands	0 = Terminates test in progress (default) 1 = Initiates local analog loopback 8 = Initiates local analog loopback with self-test
&Vn	View active and stored profiles	0 = View active profile and stored profile 0 1 = View active profile and stored profile 1
&Wn	Store Current Configuration	0 = Store current configuration as profile 0 1 = Store current configuration as profile 1
&Yn	Designate a Default Reset Profile	0 = Use profile 0 on power up (default) 1 = Use profile 1 on power up
&Zn=X	Store Telephone Number (0-3) (up to 30 digits)	0 to 3 Specified telephone number ID x up to 30 digits for the telephone number to be saved

Table 5-3. AT % Commands

Command	Description	Function
%Cn	MNP 5 data compression control	0 = No compression 1 = Enables MNP5 data compression (default)
%En	Auto-retrain control	2 = Disables auto-retrain 3 = Enables auto-retrain (default)
%Gn	Rate renegotiation	0 = Disabled 1 = Enabled (default)

Table 5-4. AT \ Commands

Command	Description	Function
\Gn	Modem port flow control	0 = Disables port flow control (default) 1 = Sets port flow control to XON/XOFF
\Jn	Bps rate adjust control	0 = Disables rate adjust (default) 1 = Enables rate adjust
\Nn	Operating Mode	0 = Selects Buffer (Normal) mode with speed buffering 1 = Selects Buffer (Normal) mode with speed buffering 2 = Selects MNP Reliable mode 3 = Selects V.42 Auto-reliable mode (default) 4 = Selects V.42 Reliable mode

Table 5-5. AT + Commands

Command	Description	Function
---------	-------------	----------

Command	Description	Function
+MS <carrier>, <automode>, <min_rate>, <max_rate>	Select Modulation	<div> <div><carrier></div> <div>Description</div> <div> V21 V.21 300 bps V22 V.22 1200 bps V22B V.22 bis 1200 and 2400 bps V23C V.23, with constant carrier; 1200bps forward and 75bps reverse V32 V.32 4800 and 9600 bps V32B V.32 bis 7200, 9600, 12,000, and 14,400 bps V34 V.34 asymmetrical connections: 2400, 4800, 7200, 9600, 12,000, 14,400, 16,800, 19,200, 21,600, 24,000, 26,400, and 28,800 bps V34B V.34 extended asymmetrical connections: 2400, 4800, 7200, 9600, 12,000, 14,400, 16,800, 19,200, 21,600, 24,000, 26,400, 28,800, 31,200, and 33,600bps V.90 56-kbps V.90 asymmetrical Connections (transmit): 4800, 7200, 9600, 12,000, 14,400, 16,800, 19,200, 21,600, 24,000, 26,400, 28,800, 31,200, 33,600bps (receive): 28,000, 29,333, 30,667, 32,000, 33,333, 34,667, 36,000, 37,333, </div> </div>

Command	Description	Function
		38,667, 40,000, 41,333, 42,667, 44,000, 45,333, 46,667, 48,000, 49,333, 50,667, 52,000, 53,333, 54,667, and 56,000bps <automode> 0 = disabled 1 = enabled (default)
+MS <carrier>, <automode>, <min_rate>, <max_rate>	Select Modulation	<min_rate> <ul style="list-style-type: none"> ● 300 300 bps (default) ● 1200 1200 bps ● 2400 2400 bps ● 4800 4800 bps ● 7200 7200 bps ● 9600 9600 bps ● 12000 12000 bps ● 14400 14400 bps ● 16800 16800 bps ● 19200 19200 bps ● 21600 21600 bps ● 24000 24000 bps ● 26400 26400 bps ● 28000 28000 bps ● 28800 28800 bps ● 31200 31200 bps ● 33600 33600 bps
+MS <carrier>, <automode>, <min_rate>, <max_rate>	Select Modulation	<max_rate> <ul style="list-style-type: none"> ● 300 300 bps (default) ● 1200 1200 bps ● 2400 2400 bps ● 4800 4800 bps

Command	Description	Function
		<ul style="list-style-type: none"> ● 7200 7200 bps ● 9600 9600 bps ● 12000 12000 bps ● 14400 14400 bps ● 16800 16800 bps ● 19200 19200 bps ● 21600 21600 bps ● 24000 24000 bps ● 26400 26400 bps ● 28000 28000 bps ● 28800 28800 bps ● 29333 29333 bps ● 30666 30666 bps ● 31200 31200 bps ● 32000 32000 bps ● 33333 33333 bps ● 33600 33600 bps ● 34000 34000 bps ● 34666 34666 bps ● 36000 36000 bps ● 37333 37333 bps ● 38000 38000 bps ● 38666 38666 bps ● 40000 40000 bps ● 41333 41333 bps ● 42000 42000 bps ● 42666 42666 bps ● 44000 44000 bps ● 45333 45333 bps ● 46000 46000 bps ● 48000 48000 bps

Command	Description	Function
		<ul style="list-style-type: none"> ● 49333 49333 bps ● 50000 50000 bps ● 50666 50666 bps ● 52000 52000 bps ● 53333 53333 bps ● 54000 54000 bps ● 54666 54666 bps ● 56000 56000 bps (default) ● 58000 58000 bps ● 60000 60000 bps
+MS?	Responds with + MS setting (e.g., + MS:56,1,300,60000 , 60000,0,0)	

Table 5-6. AT Command Result Codes

Text Message	Numeric Value	Text Message	Numeric Value
OK	0	CONNECT 37333	34
CONNECT	1	CONNECT 41333	35
RING	2	CONNECT 42667	36
NO CARRIER	3	CONNECT 44000	37
ERROR	4	CONNECT 45333	38
CONNECT 1200	5	CONNECT 46667	39
NO DIALTONE	6	CONNECT 48000	42
BUSY	7	CONNECT 49333	43
NO ANSWER	8	CONNECT 49333	43
CONNECT 2400	10	CONNECT 50667	53
CONNECT 4800	11	CONNECT 52000	54

Text Message	Numeric Value	Text Message	Numeric Value
CONNECT 9600	12	CONNECT 53333	55
CONNECT 14400	13	CONNECT 54666	56
CONNECT 7200	13	CONNECT 56000	57
CONNECT 19200	14	CONNECT 57333	58
CONNECT 57600	18	CONNECT 21600	61
CONNECT 7200	24	CONNECT 24000	62
CONNECT 12000	25	CONNECT 26400	63
CONNECT 38400	28	CONNECT 28800	64
CONNECT115200	31	CONNECT 31200	65
CONNECT 33333	33	CONNECT 33600	66

5.20.2 Fax Modem Commands

Table 5-7. Fax Commands

Command	Description	Function
+FCLASS=n	Mode selection	0 = Data mode (default) 1 = Class 1 fax mode 8 = Voice mode enabled
+FRH=n	Receive HDLC data	3
+FRS=n	Wait for silence	1-255 (x10ms)
+FTM=n	Transmit Data	24 =V.27ter 2400 bps 48 =V.27ter 4800 bps 72 =V.29 7200 bps 73 =V.17 7200 bps long 74 =V.17 7200 bps short 96 =V.29 9600 bps 97 =V.17 9600 bps long 98 =V.17 9600 bps short

Command	Description	Function
		121 =V.17 12000 bps long 122 =V.17 12000 bps short 145 =V.17 14400 bps long 146 =V.17 14400 bps short
+FRM=n	Receive Data	24 =V.27ter 2400 bps 48 =V.27ter 4800 bps 72 =V.29 7200 bps 73 =V.17 7200 bps long 74 =V.17 7200 bps short 96 =V.29 9600 bps 97 =V.17 9600 bps long 98 =V.17 9600 bps short 121 =V.17 12000 bps long 122 =V.17 12000 bps short 145 =V.17 14400 bps long 146 =V.17 14400 bps short
+FTH=n	Transmit Data with HDLC Framing	3 =V.21 300 bps
+FRH=n	Receive Data with HDLC Framing	3 =V.21 300 bps

5.20.3 Voice Modem Commands

Table 5-8. Voice Commands

Command	Description	Function
+FCLASS=n	Mode selection	0 = Data mode (default) 1 = Class 1 fax mode 8 = Voice mode enabled
+FLO=n	Flow Control Select	0 = Disable XON/XOFF and CTS/RTS flow control 1 = Enable XON/XOFF flow control in either direction (default)

Command	Description	Function															
		2 = The DTE uses ITU-T's RTS to control flow to the modem ; the modem uses ITU-T CTS to control flow to the DTE															
+VCID=n	Caller ID Selection	0 = Disables Caller ID (default) 1 = Enables Caller ID with formatted presentation to the DTE. 2 = Enables Caller ID with unformatted presentation to the DTE.															
+VDR= <enable>,<report>	Distinctive Ring Selection	<table> <tr> <th><enable></th><th><report></th><th>Function</th></tr> <tr> <td>0</td><td>---</td><td>Distinctive ring disable</td></tr> <tr> <td>1</td><td>0</td><td>The modem reports DROF and DRON messages but does not report RING messages</td></tr> <tr> <td>1</td><td>none,0</td><td>The modem reports DROF,DRON and RING messages</td></tr> <tr> <td>2-255</td><td>---</td><td>Reserved</td></tr> </table>	<enable>	<report>	Function	0	---	Distinctive ring disable	1	0	The modem reports DROF and DRON messages but does not report RING messages	1	none,0	The modem reports DROF,DRON and RING messages	2-255	---	Reserved
<enable>	<report>	Function															
0	---	Distinctive ring disable															
1	0	The modem reports DROF and DRON messages but does not report RING messages															
1	none,0	The modem reports DROF,DRON and RING messages															
2-255	---	Reserved															
+VGM=n	Speakerphone Microphone Gain	n=121-131 n=128 (default)															
+VGR=n	Receive Gain Selection	n=121-131 n=128 (default)															
+VGS=n	Speakerphone Speaker Gain	n=121-131 n=128 (default)															
+VGT=n	Volume Selection	n=121-131 n=128 (default)															
+VIT=n	DTE/DCE Inactivity Timer	n=0-255 (units of 1.0 second) n=0 Disables inactivity timer (default) n≠0 Inactivity timer active															
+VNH=n	Automatic Hang-UP Control	0 = The modem retains automatic hang-up as normal in data and fax modes (default)															

Command	Description	Function
		1 = The modem disable automatic hang-up usually found in non-voice modes 2 = The modem disable all automatic hang-up usually found in non-voice modes except a 'logical' hang-up
+VRA=n	Ringback-Goes-Away Timer	n=0-50 (in 100ms increments) n=0 The DCE returns the 'OK' code immediately after ringback n=50 (default)
+VRN=n	Ringback-Never-Appeared Timer	n=0-255 (in 1-second increments) n=0 The DCE returns the 'OK' code immediately after dialing n=10 (default)
+VRX	Record Mode	This command causes the modem to enter record mode to record voice messages
+VTX	Play Mode	This command causes the modem to start voice transmission (playback mode) and play back a previously recorded voice messages
+VSP=n	Speakerphone On/Off Control	0 = Speakerphone mode disabled (default) 1 = Speakerphone mode enabled
#VSPS=n	Speakerphone Type Selection	0 = Telephone Emulation Mode speakerphone 1 = Digital Speakerphone
+VTD=n	Beep Tone Duration Timer	n=5-255 (units of 10ms) n=100 (default)
+VSD= <silence sensitivity> ,<length of silence>	Silence Detection (Quiet and Silence)	<silence sensitivity> range=121-131 default=128 <length of silence > range=0-255 (units of 0.1 second) value=0 Silence detection disabled default=50 Silence detection enabled

5.20.4 S-Registers

Table 5-9. S-Registers

Register	Function	Range
S0	Rings to Auto-Answer	0-255 (default = 0)
S1	Ring Counter	0-255 (default = 0)
S2	Escape Character	0-127 (default = 43)
S3	Carriage Return Character	0-127 (default = 13)
S4	Line Feed Character	0-127 (default = 10)
S5	Backspace Character	0-32,127 (default = 8)
S6	Wait before Dialing	2-255 (default = 2) Units: 1second
S7	Wait Time for Carrier	1-255 (default = 60) Units: 1second
S8	Pause time for dial modifier	0-255 (default = 2) Units: 1second
S9	Carrier recovery time	1-255 (default= 6) Units: 0.1second
S10	Carrier Loss Disconnect Time	1-255 (default = 14) Units: 0.1second
S11	DTMF Tone Duration	50-255 (default = 70) Units: 1ms
S12	Guard Time	0-255 (default = 50) Units: 20ms
S14	Bit-mapped Options	Default = 138
S16	Modem Test Options	Default = 0
S18	Modem Test Timer	0-255 (default = 0) Units: 1second
S21	Bit-mapped Options	Default = 48
S22	Bit-mapped Options	Default = 118
S23	Bit-mapped Options	Default = none
S25	Detect DTR Change	0-255 (default = 5) Units: 10ms
S27	Bit-mapped Options	Default = 64
S30	Disconnect Inactivity Timer	0-255 (default = 0) Units: 1minute
S31	Bit-mapped Options	Default = 49
S33	Sleep Mode Timer	0-90 (default = 10) Units: 1second

S37	Maximum Line Speed Attempted	0-35 (default = 0)
S91	Select transmit level	0-15 (default = 10) Units: -dBm
S92	DTMF transmit level	0-15 (default = 10) Units: -dBm

Troubleshooting

This appendix contains information that will help you solve some of the common problems you might encounter while using the modem card. For further assistance, contact your dealer.

Modem does not respond to AT commands

- There may be a COM port/IRQ conflict. Reconfigure the modem COM port address and IRQ line.
- Make sure that you have set the correct COM port and IRQ in the communications software.
- Make sure the system is in Terminal mode of your communications software.
- Reset the modem to its factory defaults by typing AT&F.

Double characters display on your monitor

- Both your modem and software local echoes are on. Turn off your modem local echo by typing the ATE0 command.

Modem cannot dial and "NO DIALTONE" message appears on the monitor

- Check the phone cord connection. Make sure that the jack on the modem labeled Line is connected to an analog phone wall jack.
- The modem cannot recognize the dial tone. This is typical in some corporate PBXs. Use the ATX1 command in your setup string to enable Blind Dial.

Both modems exchange carrier signals but fail to establish a connection

- Place the call again. The telephone company routes every call differently each time you call.
- Try calling a different modem to check if your modem is working.

The modem does not answer an incoming call

- Auto-answer function is disabled. Enable the function through software program or by sending the ATSO=1 command to your modem in terminal mode.

The modem disconnects while online

- This may be caused by line interference. Retry the connection by dialing the numbers several times.
- An incoming call may have broken the connection if the Call-waiting feature is enabled. Disable Call-waiting and try again.

Garbage characters display on the monitor

- Set your modem to the same word length, parity, and stop bits as the remote modem.
- Make sure that your software and modem are set to the same flow control setting.
- The software may not be set for correct terminal emulation. Configure the software to correct type. ANSI terminal emulation is the most commonly used.
- Type the AT&F1 command to load the template that enables hardware flow control as other optimal settings.

Your communication software is reporting many cyclic redundancy check (CRC) errors and low characters per second (CPS)

- You might have experienced noise on the phone line. Place the call again. The phone company routes call differently each time you call.
- Type the `AT&F1` command to load the template that enables the hardware flow control as other optimal settings.
- Lower the serial port rate in your communication software to 38,400 bps or 19,200 bps.
- Try a different file transfer protocol (do not use the XMODEM if other protocols are available).

You cannot run the fax and communications software at the same time

- Communication devices can be accessed by only one application at a time.
- Under DOS or Windows 3.1x, you can run either your fax software or your data software, but not both at the same time.
- In Windows 95/NT/2000, you can open data and fax communications at the same time, but they cannot use the same modem at the same time.